

Manuals.plus /

- › Gevi /
- › Gevi Electric Burr Coffee Grinder Instruction Manual (Model B0F31Z2HT7)

## Gevi B0F31Z2HT7

# Gevi Electric Burr Coffee Grinder Instruction Manual

Model: B0F31Z2HT7

## 1. INTRODUCTION

---

Thank you for choosing the Gevi Electric Burr Coffee Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Check the bean hopper for the presence of foreign objects before using.
- This appliance is for household use only.

## 3. PRODUCT OVERVIEW

---

The Gevi Electric Burr Coffee Grinder is designed for precision grinding, offering 35 settings for various brewing methods. It features a digital display for easy control and an anti-static design for mess-free operation.



Figure 1: Gevi Electric Burr Coffee Grinder with its main components visible.

## Components:

- Bean Hopper (8.5 oz capacity)
- Upper Burr
- Grinds Container (4.6 oz capacity)
- Digital Control Panel (Cup Selection, Time Selection, Start/Stop)
- Portafilter Cradle (compatible with 51mm and 58mm portafilters)
- Cleaning Brush
- Coffee Spoon

## 4. SETUP

---

1. **Unpack the Grinder:** Carefully remove all packaging materials and ensure all components are present.
2. **Clean Components:** Wash the bean hopper, grinds container, and lids with warm, soapy water. Rinse thoroughly and dry completely before assembly.

3. **Install Bean Hopper:** Place the bean hopper onto the top of the grinder base. Rotate it clockwise until it locks securely into place.
4. **Add Coffee Beans:** Fill the bean hopper with your desired amount of whole coffee beans. Do not overfill.
5. **Secure Lid:** Place the bean hopper lid firmly on top of the bean hopper.



Figure 2: Filling the bean hopper with coffee beans.

## 5. OPERATION

### 5.1 Selecting Grind Settings

The Gevi grinder offers 35 precise grind settings, allowing you to customize your coffee for various brewing methods. Rotate the bean hopper to adjust the grind size:

- **Settings 1-10 (Espresso):** For very fine grounds suitable for espresso machines.
- **Settings 11-25 (Drip/Pour Over):** For medium grounds ideal for drip coffee makers and pour-over brewing.
- **Settings 26-35 (French Press):** For coarse grounds best for French press and cold brew methods.

# Perfect for All Your Coffee Needs

35 Precise Grinding Settings Can Be Chosen



Figure 3: Grind setting dial on the bean hopper.

Your browser does not support the video tag.

Video 1: Demonstrating the Gevi Integrated Burr Coffee Grinder with its 35 grind settings.

## 5.2 Digital Control Panel

The digital display and control buttons allow for precise control over the grinding process.



# Easy to Use Digital Display



### Cup Selection

1-14 Cup  
\* 1Cup ≈ 0.35OZ



### Time Selection

1-60s



### Manually

Long press and hold the "Start/Stop" button

Figure 4: Digital control panel for cup and time selection.

- **Cup Selection (1-14 cups):** Press the 'Cup' button to select the desired number of cups. The grinder will automatically grind the appropriate amount of coffee.
- **Time Selection (1-60 seconds):** Press the 'Time' button to set the grinding duration in seconds. This allows for precise control over the amount of coffee ground.
- **Start/Stop:** Press the 'Start/Stop' button to begin or end the grinding process. You can also long-press this button for manual grinding.

### 5.3 Using the Portafilter Cradle

The grinder includes a portafilter cradle for direct grinding into your espresso machine's portafilter.



## Design for Espresso

Include Portafilter Cradle  
Compatible with  
51&58mm Portafilter

Figure 5: Portafilter cradle for direct grinding.

1. Select the appropriate portafilter cradle (51mm or 58mm) for your portafilter.
2. Insert your portafilter into the cradle.
3. Place the portafilter with cradle under the grinding chute.
4. Select your desired grind setting and cup/time, then press Start/Stop to begin grinding.

## 6. MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the life of your grinder. The anti-static design helps minimize mess.

### 6.1 Daily Cleaning

1. **Unplug the Grinder:** Always ensure the grinder is unplugged before cleaning.
2. **Remove Bean Hopper:** Rotate the bean hopper counter-clockwise until it stops, then lift it off. Empty any remaining beans into an airtight container to preserve freshness.

3. **Remove Upper Burr:** Lift the upper conical burr straight out from the grinding chamber.
4. **Clean Burrs:** Use the provided cleaning brush to remove coffee grounds from both the upper and lower burrs.
5. **Clean Grinds Container:** Empty and wash the grinds container and its lid with warm, soapy water. Rinse and dry thoroughly.
6. **Wipe Exterior:** Wipe the exterior of the grinder with a damp cloth. Do not use abrasive cleaners.
7. **Reassemble:** Once all parts are dry, reassemble the grinder by reversing the removal steps.



Figure 6: Detachable upper burr for easy cleaning.

# Anti-Static

## Conical Burr Grinder



Mess Free Hopper



Mess-Free



Figure 7: Anti-static design for a cleaner grinding experience.

## 6.2 Cleaning Clogged Coffee Grounds

If you experience clogging, particularly with oily or dark roast beans, follow these steps:

Your browser does not support the video tag.

Video 2: Instructions on how to clean clogged coffee grounds from the Gevi Coffee Grinder.

1. **Unplug the Grinder:** Disconnect from power.
2. **Remove Bean Hopper and Upper Burr:** Follow steps from Daily Cleaning.
3. **Clear Lower Burr:** Use the cleaning brush to carefully dislodge any compacted coffee grounds around the lower burr.
4. **Tap the Grinder:** Gently tap the back side of the grinder to help dislodge any remaining grounds from the chute into the grinds container.
5. **Reassemble and Test:** Reassemble the grinder and run a small amount of beans through it to ensure proper function.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Gevi Electric Burr Coffee Grinder, refer to the following common problems and solutions:

- **Grinder not turning on:**

- Ensure the power cord is securely plugged into a working outlet.
- Check that the bean hopper is correctly installed and locked into place. The grinder has a safety mechanism that prevents operation if the hopper is not secured.
- Verify that the lid on the bean hopper is properly closed.

- **No coffee grinding or inconsistent grind:**

- Check if the bean hopper is empty.
- Inspect the burrs for any blockages or foreign objects. Clean the burrs as described in the Maintenance section.
- Ensure the grind setting is appropriate for the type of beans and desired fineness. Very fine settings with oily beans can sometimes cause clogging.

- **Grinder stops during operation:**

- The grinder may have an overheating protection feature. Allow it to cool down for a period before attempting to use it again.
- Check for clogs in the grinding chamber or chute.

- **Excessive static or mess:**

- While the grinder has an anti-static design, some static can still occur depending on environmental conditions and bean type. Ensure the grinds container is fully inserted.
- Lightly misting beans with water before grinding can help reduce static.

## 8. SPECIFICATIONS

---

| Feature                   | Specification                     |
|---------------------------|-----------------------------------|
| Brand                     | Gevi                              |
| Model                     | B0F31Z2HT7                        |
| Color                     | Black                             |
| Material                  | Plastic, Stainless Steel          |
| Item Weight               | 5.92 Pounds                       |
| Dimensions (L x W x H)    | 7.8"L x 4.72"W x 11.85"H          |
| Bean Hopper Capacity      | 8.5 ounces (approx. 240g)         |
| Grinds Container Capacity | Approx. 130g                      |
| Grind Settings            | 35 (Espresso, Drip, French Press) |
| Cup Selection             | 1-14 cups                         |
| Time Selection            | 1-60 seconds                      |
| Wattage                   | 200 watts                         |
| Voltage                   | 120 Volts                         |
| UPC                       | 767791886878                      |

## 9. WARRANTY AND SUPPORT

---

Gevi is committed to delivering high-quality products. For warranty information, technical support, or any inquiries regarding your Gevi Electric Burr Coffee Grinder, please refer to the warranty card included with your product or contact Gevi customer service directly. Keep your purchase receipt as proof of purchase.