

GDFStudio 327936

GDFStudio 28" Outdoor Lounge Chair Instruction Manual

Model: 327936

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Maximum Weight Capacity:** Do not exceed the maximum weight capacity of 300 pounds. Exceeding this limit may result in injury or damage to the chair.
- **Assembly:** Ensure all components are securely fastened before use. Improper assembly can lead to instability and potential hazards.
- **Placement:** Place the lounge chair on a flat, stable surface to prevent tipping.
- **Outdoor Use:** This chair is designed for outdoor use. While weather-resistant, prolonged exposure to extreme weather conditions may affect its lifespan.
- **Children:** Keep children away from the assembly area. Small parts may pose a choking hazard.
- **Maintenance:** Regularly inspect the chair for loose parts or damage. Address any issues promptly.

PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact GDFStudio customer support.

- Lounge Chair Frame (Solid Wood)
- Seat Cushion
- Back Cushion
- Assembly Hardware (Bolts, Washers, Allen Wrench)



Image: The solid wood frame of the lounge chair, shown without its cushions, highlighting the slatted seat and woven backrest structure.

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your GDFStudio Outdoor Lounge Chair. It is recommended to assemble the chair on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a protected surface. Check against the "Package Contents" list.
2. **Attach Legs (if separate):** If the legs are not pre-assembled, attach them to the main chair frame using the provided bolts and washers. Ensure they are tightened securely with the Allen wrench.
3. **Inspect Frame:** Ensure the solid wood frame is stable and all connections are tight.
4. **Place Seat Cushion:** Position the larger seat cushion onto the slatted seat base of the chair.
5. **Place Back Cushion:** Place the smaller back cushion against the woven backrest.
6. **Final Check:** Gently test the stability of the chair before full use. Ensure no parts are loose or wobbly.



Image: The fully assembled GDFStudio Outdoor Lounge Chair, showcasing the teak wood frame, woven backrest, and cream-colored cushions.

USAGE (OPERATING)

Your GDFStudio Outdoor Lounge Chair is designed for comfortable relaxation in various outdoor settings.

- **Intended Use:** This chair is intended for seating one adult at a time.
- **Placement:** Position the chair in your desired outdoor area such as a patio, garden, balcony, or poolside.
- **Comfort:** Adjust the cushions for optimal comfort. The chair features a fixed reclining position.
- **Weather Protection:** While designed for outdoor use, consider covering the chair or storing cushions indoors during heavy rain, snow, or prolonged periods of non-use to extend its lifespan.

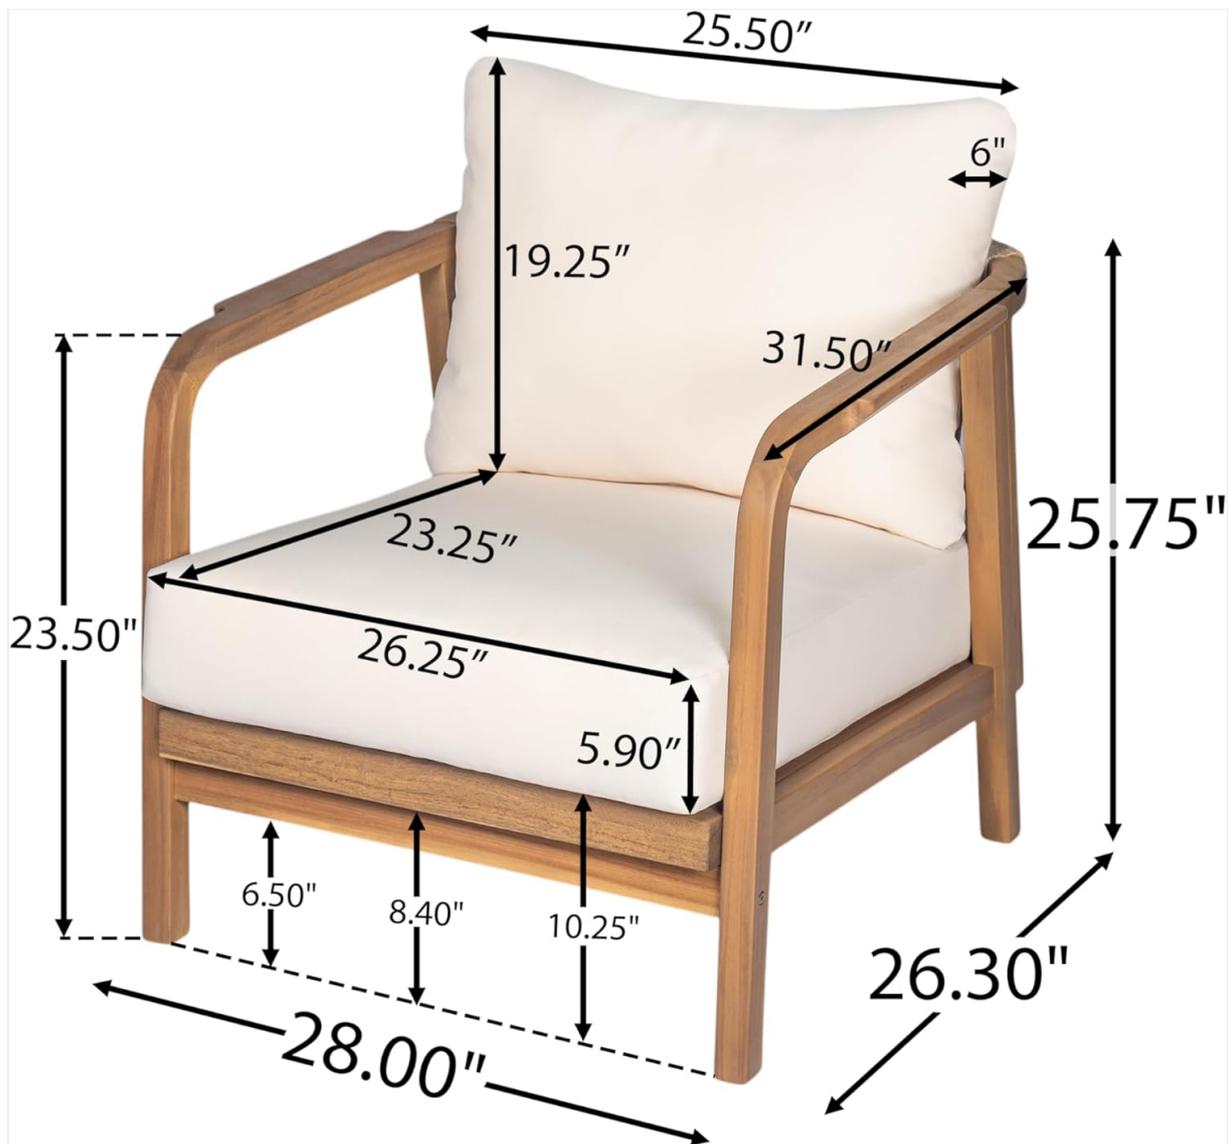


Image: The lounge chair placed on a patio rug, next to a small side table, demonstrating its use in an outdoor living space.

CARE AND MAINTENANCE

Proper care will help maintain the appearance and longevity of your lounge chair.

- **Cushion Care:** Spot clean cushions with a mild soap and water solution. Allow to air dry completely. Do not machine wash or tumble dry.
- **Frame Care:** Wipe the solid wood frame with a damp cloth. For deeper cleaning, use a mild wood cleaner. Avoid harsh chemicals or abrasive cleaners.
- **Wood Treatment:** To preserve the teak finish and protect the wood, consider applying a suitable outdoor wood sealant or oil periodically, especially if the chair is exposed to direct sunlight and rain frequently.
- **Storage:** During off-season or extended periods of non-use, store the chair in a dry, covered area to protect it from the elements.
- **Inspection:** Periodically check all bolts and connections and tighten them as needed to ensure stability.



Image: A close-up view of the cushion's zipper, indicating that the cover may be removable for cleaning, though spot cleaning is recommended.

TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Chair is wobbly	Loose bolts or uneven surface.	Ensure all assembly bolts are tightened. Move the chair to a flat, level surface.
Cushions appear dirty	Exposure to outdoor elements.	Spot clean cushions with mild soap and water. Store cushions indoors when not in use.
Wood finish fading	Prolonged exposure to sun and weather.	Apply an outdoor wood sealant or oil to restore and protect the finish.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	GDFStudio
Model Name	327936
Product Dimensions	28"D x 26.3"W x 25.75"H
Seat Depth	23.25 inches
Item Weight	29.8 pounds
Maximum Weight Recommendation	300 Pounds
Material	Solid Wood, Waterproof Fabric (Polyester)
Color	Teak
Indoor/Outdoor Usage	Outdoor
Included Components	Cushion
Product Care Instructions	Spot Clean



Image: Technical drawing showing various dimensions of the lounge chair, including height, width, depth, seat height, and cushion thickness.

WARRANTY AND SUPPORT

GDFStudio stands behind the quality of its products. For specific warranty information or if you require assistance with your lounge chair, please contact GDFStudio customer support directly.

Please have your model number (327936) and purchase details ready when contacting support.

You can often find contact information on the manufacturer's official website or through your retailer.