



Manuals.plus /

- › Seesii /
- › SEESII Electric Pruning Shears CS440 User Manual

## Seesii CS440

# SEESII Electric Pruning Shears CS440 User Manual

Model: CS440 | Brand: Seesii

## INTRODUCTION

---

The SEESII Electric Pruning Shears CS440 are designed for efficient and effortless pruning of branches up to 1.6 inches (40mm) in diameter. Featuring a powerful brushless motor and dual 4.0Ah batteries, this cordless pruner offers extended runtime and consistent performance. Its ergonomic design, adjustable cutting modes, and clear LED display enhance user experience and precision. This manual provides essential information for safe and effective use, maintenance, and troubleshooting of your electric pruning shears.

## PACKAGE CONTENTS

---

Before starting, please ensure all items listed below are present in your package:

- 1 x SEESII Electric Pruning Shear
- 2 x 4.0Ah Batteries
- 1 x Fast Charger
- 1 x Extra SK5 Replacement Blade
- 2 x Hexagonal Screwdriver
- 1 x Screwdriver
- 1 x Hexagon Wrench
- 1 x Sharpening Stone
- 1 x Storage Case
- 1 x Glove
- 1 x Instruction Manual



Image: The SEESII Electric Pruning Shears with its complete set of accessories, including two batteries, charger, extra blade, tools, glove, and storage case.

## SETUP

---

Follow these steps to prepare your pruning shears for first use:

1. **Install the Battery:** Insert a charged 4.0Ah battery into the base of the pruning shears until it clicks securely into place.
2. **Power On:** Press the power button located on the unit. The battery indicator lights will illuminate.
3. **Activate Blades:** To open the blades for operation, press the trigger twice in quick succession. You will hear two beeps, and the blades will open to their default position.

Video: A detailed guide on how to set up and activate your SEESII Electric Pruning Shears, including battery installation and initial blade activation.

## OPERATING INSTRUCTIONS

---

Optimize your pruning tasks with the adjustable cutting modes and efficient operation:

### Adjusting Cutting Modes

The pruning shears offer 4 adjustable cutting modes to accommodate various branch diameters. Press the power button repeatedly to cycle through the modes (15mm, 20mm, 25mm, 40mm). The LED display will show the

selected mode.

- **Mode 1 (15mm / 0.59"):** Ideal for flowers and garden vegetables.
- **Mode 2 (20mm / 0.79"):** Suitable for berry bushes and vines.
- **Mode 3 (25mm / 0.98"):** For thicker fruit tree branches.
- **Mode 4 (40mm / 1.6"):** Handles heavy branches with ease.



Image: Visual representation of the four adjustable cutting modes, showing the corresponding branch diameters.

### Cutting Technique

Once the desired cutting mode is selected, position the blades around the branch and press the trigger to make a clean cut. The SK5 steel blades ensure sharp, smooth cuts, minimizing plant damage.

# Big Branches? 1 Clean Cut.



Image: The electric pruning shears demonstrating its 1.6-inch cutting diameter capability on a thick branch.

## LED Display

The integrated LED screen provides real-time information on battery level and cut count, allowing you to monitor usage and battery life efficiently.

# Easy for Anyone to Use

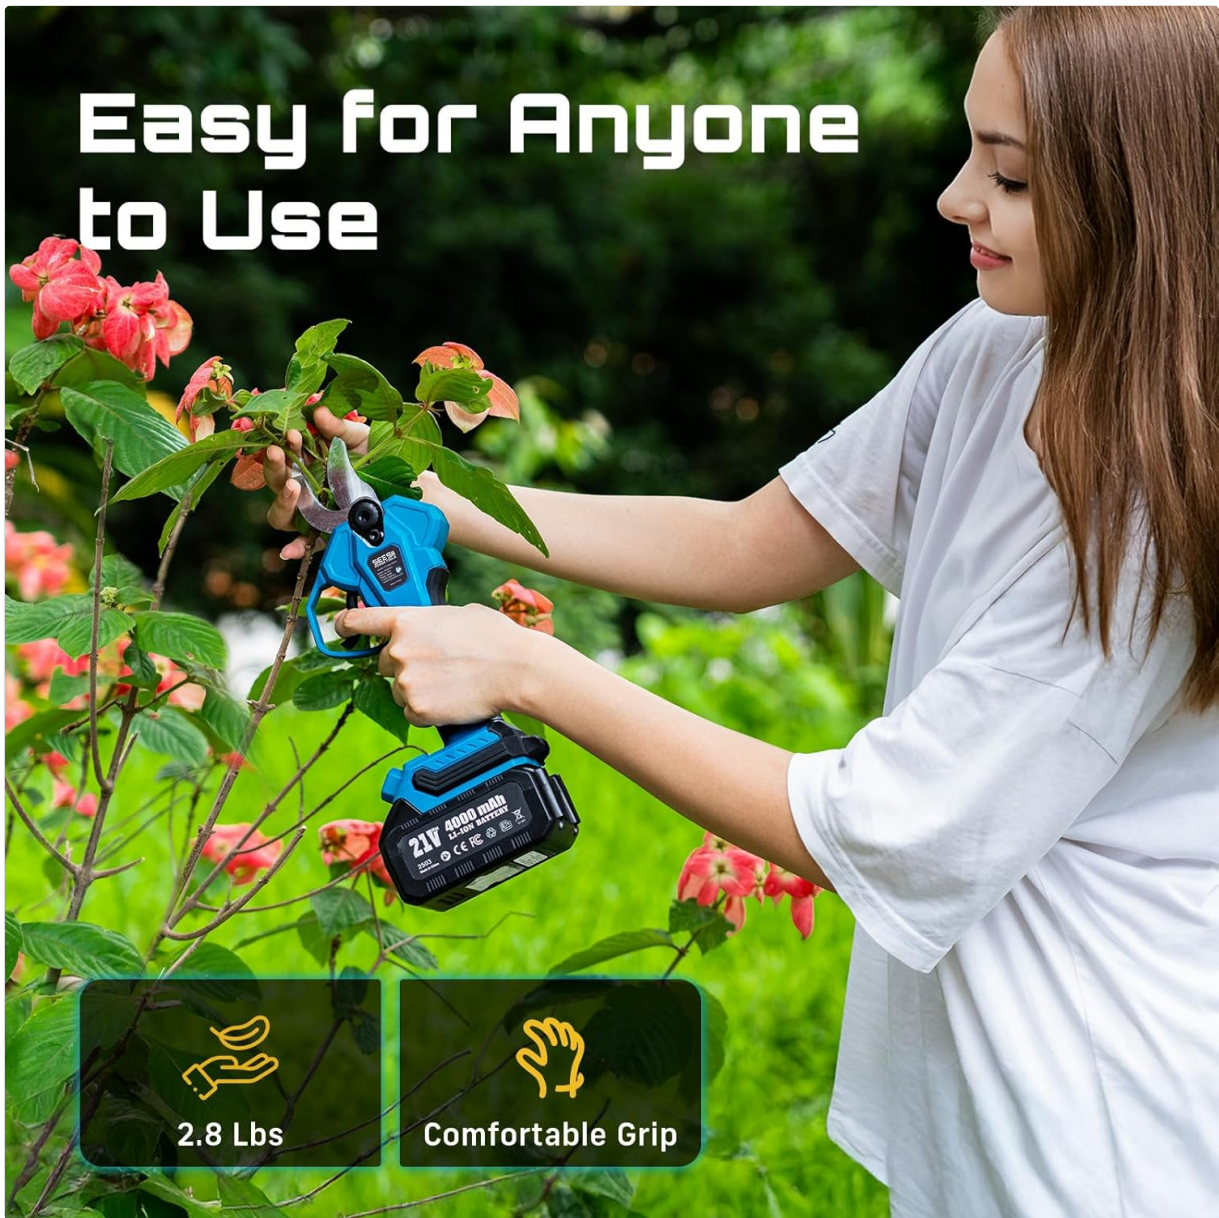


Image: Close-up of the LED display on the pruning shears, indicating battery charge and the number of cuts made.

Video: Demonstrates the SEESII Cordless Pruning Shears in action, showcasing its cutting capabilities on various branches.

Video: A short demonstration of the SEESII 1.6" Cutting Diameter Cordless Power Pruner's quick and efficient cutting.

## MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your pruning shears:

### Blade Replacement

An extra SK5 replacement blade is included for convenience. To replace the blade, follow the disassembly steps shown in the video below. Ensure the unit is powered off and the battery is removed before attempting any maintenance.



Image: The extra SK5 replacement blade provided with the pruning shears, highlighting its importance for long-term use.

## Lubrication and Cleaning

Regularly clean the blades after use to prevent sap and debris buildup. Apply grease to lubricate the gear mechanism as needed to ensure smooth operation.

Video: This segment of the video demonstrates the disassembly steps for blade replacement and proper lubrication of the gear.

## TROUBLESHOOTING

If you encounter issues with your SEESII Electric Pruning Shears, refer to the following common troubleshooting tips:

- **Tool Not Powering On:** Ensure the battery is fully charged and correctly inserted. Press the power button firmly.
- **Blades Not Opening/Closing:** Confirm the safety activation sequence (double-tap trigger) has been performed. Check for any obstructions around the blades.
- **Reduced Cutting Performance:** The blades may be dull or dirty. Refer to the Maintenance section for sharpening or replacement. Ensure the correct cutting mode is selected for the branch size.
- **Battery Draining Quickly:** Ensure batteries are fully charged before use. Operating in higher power modes or on very thick branches will consume more power.

For persistent issues, please refer to the full instruction manual included in your package or contact SEESII customer support.

## SPECIFICATIONS

---

Feature	Specification
Brand	Seesii
Model Number	CS440
Cutting Width	1.6 Inches (40mm)
Battery Voltage	21 Volts
Battery Capacity	4.0Ah (2 Pcs included)
Blade Material	SK5 High Carbon Steel
Motor Type	Brushless Motor
Item Weight	6.54 pounds
Power Source	Battery Powered
Handle Material	Plastic

## WARRANTY AND SUPPORT

---

For detailed warranty information and customer support, please refer to the warranty card included in your product package or visit the official Seesii website. You may also contact their customer service directly for assistance with product inquiries, troubleshooting, or replacement parts.