



Manuals.plus /

› TOKSOM /

› TOKSOM 71" Tall Freestanding Kitchen Pantry Cabinet User Manual

TOKSOM 1186

TOKSOM 71" Tall Freestanding Kitchen Pantry Cabinet User Manual

Model: 1186

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- **Anti-Tip Kit:** Always secure the cabinet to the wall using the included anti-tip kit to prevent tipping. This is crucial for safety, especially in households with children or pets.
- **Shelf Adjustment:** Be cautious when adjusting shelves. Ensure they are properly supported and securely seated in their positions before placing any items on them.
- **Weight Distribution:** Do not overload the cabinet. Distribute weight evenly across shelves and compartments to maintain stability and prevent structural damage or tipping.
- **Manufacturer Instructions:** Always follow the manufacturer's instructions for safe use, assembly, and maintenance.
- **Placement:** Place the cabinet on a flat, level, and stable surface. Avoid placing it in areas with high humidity or direct sunlight, which can affect material integrity over time.

2. PRODUCT OVERVIEW

The TOKSOM 71" Tall Freestanding Kitchen Pantry Cabinet is designed to provide extensive storage and organization for your kitchen or dining area. It features a modern farmhouse aesthetic with a white finish, clean lines, and silver handles.



Image 2.1: The TOKSOM Kitchen Pantry Cabinet with its various storage options, including upper and lower cabinets, wine racks, and a central open area suitable for a microwave or coffee station.

Key Features:

- **Modern Farmhouse Design:** Simple white finish with clean lines and silver handles.
- **Robust Construction:** Crafted from high-quality, high-density particleboard with a waterproof painted surface.
- **Ample Storage:** Includes 6 doors, 6 wine racks, 4 cabinets with adjustable shelves, 3 open storage compartments, a drawer, and a large countertop.
- **Adjustable Shelves:** Shelves can be removed or adjusted to three different heights to accommodate items of various sizes.
- **Multi-purpose Use:** Suitable for kitchens, dining rooms, or as a coffee bar, buffet sideboard, or general storage cabinet.

3. SETUP AND ASSEMBLY

Assembly of the TOKSOM Kitchen Pantry Cabinet is required. It is recommended that two people assemble the unit for ease and safety.

3.1 Unpacking and Preparation

1. Open the packaging carefully and remove all components.
2. Verify that all parts and hardware are present by comparing them with the included parts list in your assembly guide. Each accessory is thoughtfully labeled.
3. Lay out all components on a clean, soft surface (e.g., a blanket or cardboard) to prevent scratches during assembly.

3.2 Assembly Instructions

Follow the detailed, step-by-step assembly instructions and numbered accessories provided in the separate assembly manual included with your product. Ensure all screws and fasteners are tightened securely, but do not overtighten.

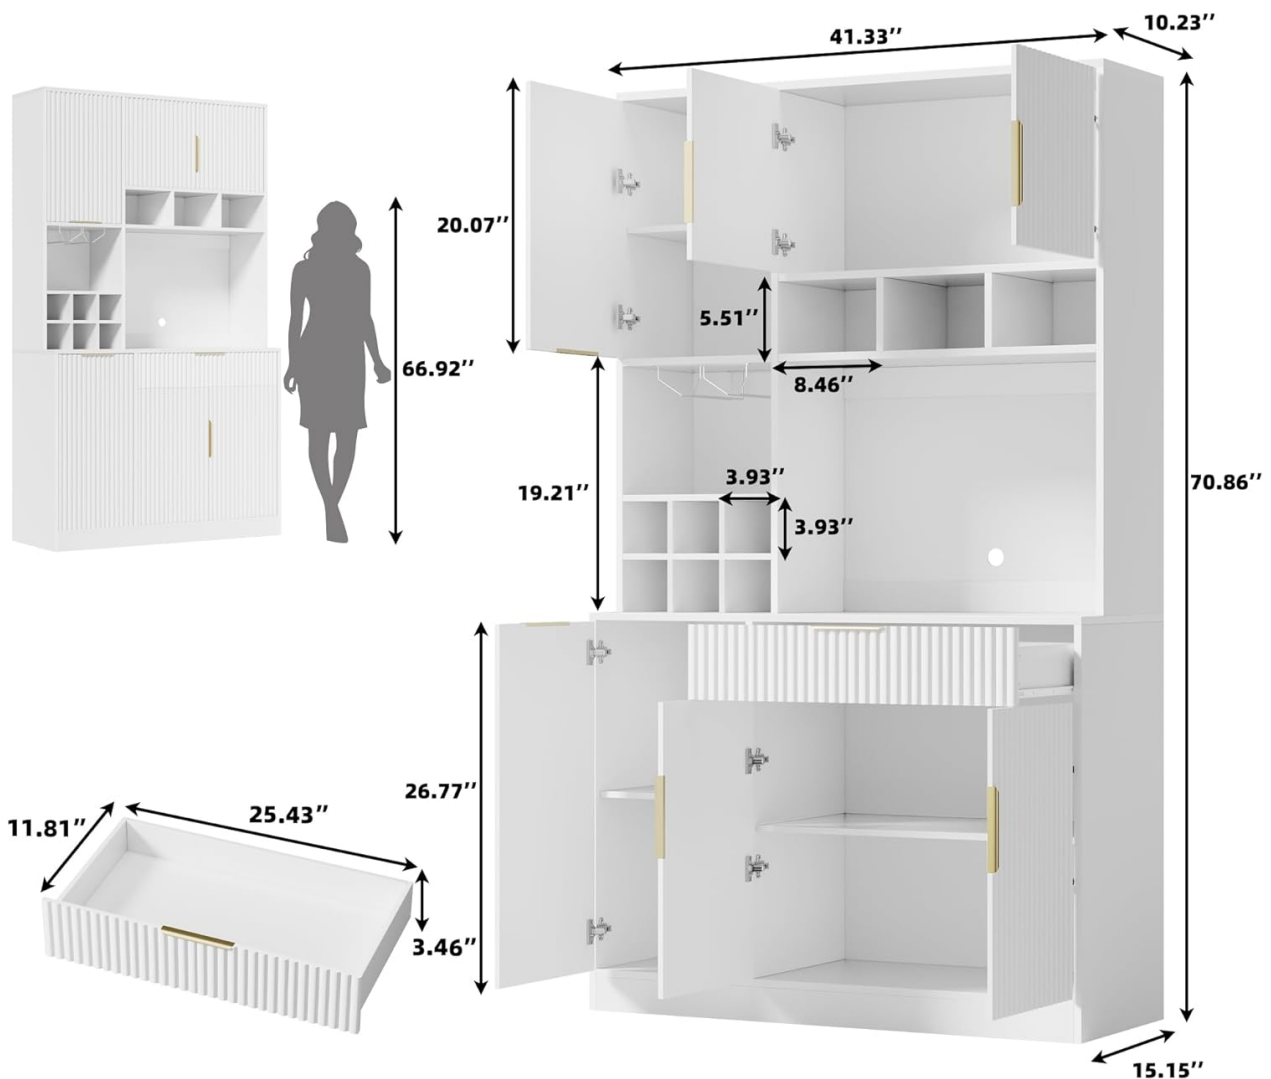


Image 3.1: Dimensional diagram of the pantry cabinet, illustrating overall size and internal compartment measurements for planning placement and storage.

3.3 Securing the Cabinet

Once assembled, securely fasten the cabinet to the wall using the included anti-tip kit. This prevents accidental tipping and ensures stability.

4. OPERATING AND USAGE

The TOKSOM Kitchen Pantry Cabinet offers versatile storage solutions for various items.

4.1 Storage Compartments

- **Upper Cabinets:** Utilize the top cabinets for storing less frequently used items, dry goods, or small appliances.
- **Open Compartments:** The three open compartments are ideal for displaying decorative items, cookbooks, or frequently accessed kitchen essentials.
- **Microwave Stand/Countertop:** The large countertop area is designed to accommodate a microwave, coffee maker, or other small kitchen appliances, providing a convenient workspace.
- **Wine Racks:** The integrated wine racks are designed to hold standard wine bottles securely.
- **Drawer:** The easy-glide smooth drawer is suitable for cutlery, utensils, or smaller accessories.
- **Lower Cabinets:** The bottom cabinets with adjustable shelves are perfect for larger pots, pans, dishes, or pantry staples.



Image 4.1: Detail of the wine rack and stemware holder, designed for organized storage of beverages and glasses.



Image 4.2: The smooth-gliding drawer, ideal for storing smaller kitchen items like cutlery or dishware.

4.2 Adjusting Shelves

The adjustable shelves in the cabinets can be repositioned to three different heights. To adjust a shelf:

1. Empty the shelf of all contents.
2. Carefully lift the shelf and remove the support pins from their current holes.
3. Insert the support pins into the desired new height holes, ensuring they are level and fully seated.
4. Place the shelf back onto the support pins, ensuring it is stable before placing items back on it.



Image 4.3: Visual guide demonstrating the adjustable shelf feature, allowing customization of storage space.

5. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your TOKSOM Kitchen Pantry Cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the painted finish.
- **Spills:** Promptly clean up any spills to prevent staining or water damage, especially on the countertop and shelves.
- **Waterproof Paint:** The cabinet features a waterproof painted surface for durability and easy maintenance. However, prolonged exposure to moisture should still be avoided.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Door Alignment:** If doors become misaligned, adjust the hinges as needed. Refer to the assembly manual for hinge adjustment instructions.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your pantry cabinet.

- **Cabinet Wobbles:**

Possible Cause: Uneven floor or loose connections.

Solution: Ensure the cabinet is on a level surface. Check and tighten all assembly screws. If the floor is uneven, use shims under the base to stabilize.

- **Doors Do Not Close Properly or Hit Each Other:**

Possible Cause: Misaligned hinges or improper installation.

Solution: Adjust the hinges on the doors. Most cabinet hinges allow for minor adjustments (up/down, left/right, in/out) using a screwdriver. Refer to the hinge manufacturer's instructions or the cabinet assembly manual for specific adjustment procedures.

- **Drawer Sticks or Does Not Slide Smoothly:**

Possible Cause: Misaligned drawer slides or obstruction.

Solution: Ensure the drawer slides are correctly installed and aligned. Check for any objects obstructing the drawer's path. Lubricate slides with a silicone-based lubricant if necessary.

- **Damaged or Missing Parts:**

Solution: If you receive damaged or missing parts during assembly, please contact TOKSOM customer support immediately for assistance.

7. SPECIFICATIONS

Detailed specifications for the TOKSOM 71" Tall Freestanding Kitchen Pantry Cabinet.

Feature	Detail
Brand	TOKSOM
Model Name	Kitchen pantry
Item Model Number	1186
Color	White a
Product Dimensions	15.15"D x 41.33"W x 70.86"H
Item Weight	134 Pounds
Material	Engineered Wood
Finish Type	Painted White
Mounting Type	Floor Mount
Installation Type	Freestanding
Room Type	Kitchen
Number of Shelves	4 (adjustable)
Number of Compartments	3 (open)
Included Components	Kitchen pantry, Anti-tip kit
Assembly Required	Yes

8. WARRANTY AND SUPPORT

TOKSOM is committed to providing quality products and customer satisfaction.

8.1 Warranty Information

Specific warranty details for this product are typically provided with your purchase documentation. Please refer to the warranty card or contact TOKSOM customer service for information regarding warranty coverage and terms.

8.2 Customer Support

If you have any questions, concerns, or require assistance with assembly, damaged parts, or product functionality, please do not hesitate to contact our customer support team. We are here to help ensure your satisfaction.

For support, please visit the TOKSOM store on Amazon or refer to the contact information provided in your product packaging.
