

manuals.plus /

- › [Aiandcc](#) /
- › [Aiandcc M12 128GB MP3 Player with Bluetooth 5.3 User Manual](#)

Aiandcc M12

Aiandcc M12 128GB MP3 Player User Manual

Model: M12

1. PRODUCT OVERVIEW

The Aiandcc M12 is a compact and portable MP3 player designed for high-fidelity audio playback. It features Bluetooth 5.3 connectivity, an integrated FM radio, and a 1.8-inch screen. With 128GB of internal storage, it can store a substantial music library. The device supports expandable storage via a TF card (not included) and offers up to 48 hours of music playback on a single charge.



Image 1.1: Front and back view of the Aiandcc M12 MP3 Player, showing the screen, control buttons, and rear panel with model information.

Key Features:

- **128GB Internal Storage:** Capable of storing approximately 5000 songs.
- **Bluetooth 5.3:** For wireless connection to headphones, speakers, and car audio systems within an optimal range of 5-10 meters.
- **HiFi Sound Quality:** Engineered for clear audio reproduction.
- **FM Radio:** Built-in radio functionality (requires wired headphones as an antenna).
- **Long Battery Life:** Up to 48 hours of music playback on a 3-hour charge.
- **Expandable Memory:** Supports TF memory cards (not included).

- **Compact Design:** Lightweight and portable, suitable for various activities.

2. SETUP

2.1 Package Contents

Verify that your package contains the following items:

- Aiandcc M12 MP3 Player
- Wired Earphones
- Type-C Charging Cable
- User Manual



Image 2.1: The MP3 player shown alongside its included accessories: earphones, Type-C cable, and instruction manual. Dimensions are also indicated.

2.2 Charging the Device

Before first use, fully charge the MP3 player. Use the provided Type-C charging cable to connect the device to a USB power source (e.g., computer USB port, USB wall adapter). A full charge typically takes approximately 3 hours.

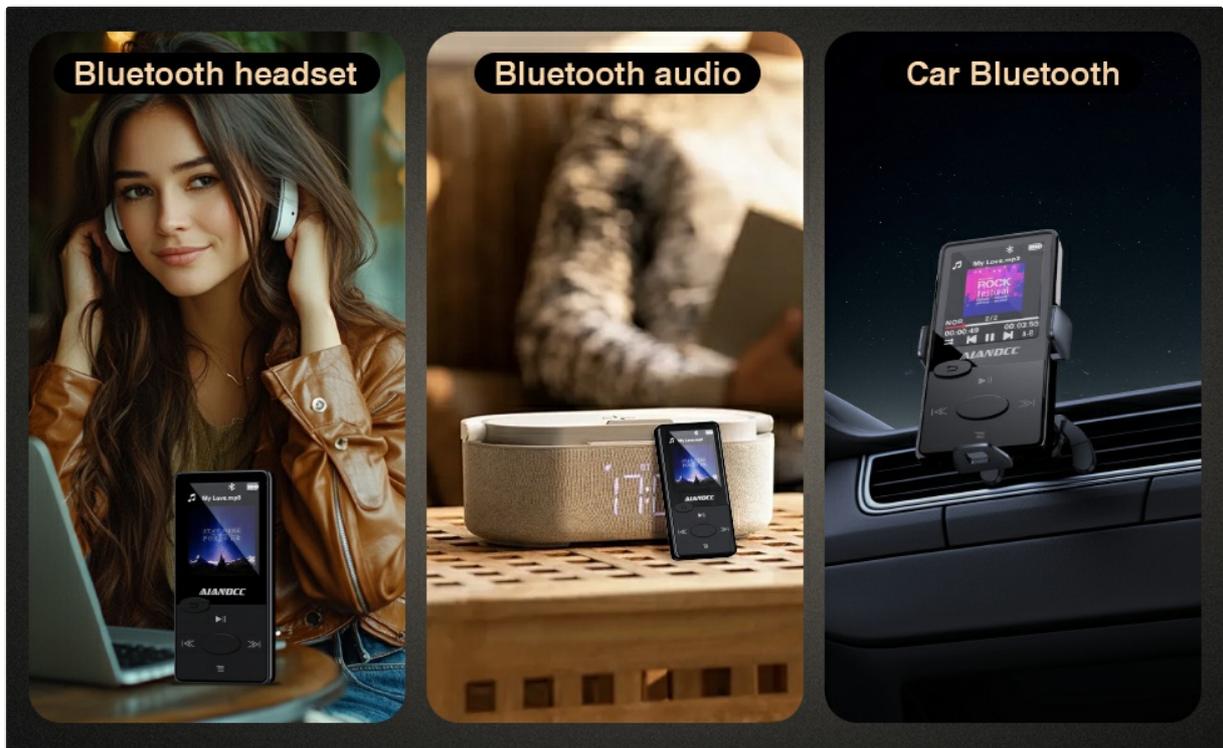


Image 2.2: Close-up of the MP3 player's Type-C charging port with the charging cable connected, illustrating the charging process.

2.3 Powering On/Off

- **To Power On:** Press and hold the power button until the screen illuminates.
- **To Power Off:** Press and hold the power button until the power-off prompt appears, then confirm.

2.4 Loading Music

Connect the MP3 player to your computer using the Type-C cable. The device will appear as a removable disk. Drag and drop your music files (MP3, WMA, APE, FLAC, WAV, DRM, ACELP, etc.) into the designated music folder on the player. The player has 128GB of built-in memory. For additional storage, insert a TF card into the dedicated slot.

Memory support expansion

Built in **128GB** memory, which can expand storage space to 128GB, Can accommodate a collection of up to 4000 tracks.



Image 2.3: The MP3 player displaying its memory capacity and illustrating the use of a Micro SD (TF) card for expanded storage.

3. OPERATING INSTRUCTIONS

3.1 Basic Navigation

The device features push buttons for navigation. Refer to the diagram below for button functions:

Button	Function
Power Button	Power On/Off, Screen On/Off
Return Button	Go back to the previous menu/screen
Play/Pause Button	Play or pause current track
Next/Fast Forward Button	Skip to next track, fast forward (hold)
Previous/Rewind Button	Skip to previous track, rewind (hold)
Volume Up (+)	Increase volume

Button	Function
Volume Down (-)	Decrease volume
Menu Button	Access settings or context menu

3.2 Music Playback

- Navigate to the 'Music' menu.
- Select 'All Songs', 'Artists', 'Albums', 'Genres', or 'Update Playlist' to browse your music.
- Use the navigation buttons to select a song and press the Play/Pause button to start playback.
- Adjust volume using the dedicated volume buttons.

3.3 Bluetooth Pairing

To connect to Bluetooth headphones, speakers, or car audio:

1. Ensure your Bluetooth accessory is in pairing mode.
2. On the MP3 player, navigate to the 'Bluetooth' menu.
3. Select 'Search Device' to find available Bluetooth devices.
4. Select your desired device from the list to pair.



Memory: Built-in 32-128 GB, And support for extended memory up to 128GB
Speaker: NO Speaker
Battery: 300mAh (Charging time 2`3 hours), Type-C USB charging port
Audio Format: MP3/ WMA/ APE / FLAC / WAV/ /DRM / ACELP etc.
Play Model: Repeat all/Single Repeat/ Shuffle/Support A-B repeat
Support Languages: English, French, Italian, Dutch, Portuguese, Chinese, Japanese, Turkish, and more(28kinds of languages supported)
Functions: Music/FM Radio/Bluetooth/Folder/Setting
Compatible system XP: H0me,pro,withspl,SP1,SP2,SP3),32bit
WINDOWS 7-10 64bit
Tip 1: This mp3 player can not pair with smartphone or laptop
Tip 2: When start FM Radio please plug the wire earphone as an antenna

- Item Weight: 29g(1.02oz)
- Item Size: 82.8 x 40 x 9.5mm
3.26x1.57x0.374 in
- Screen Size: 1.8 inch TFT color screen
- Resolution: 240*320

Image 3.1: The MP3 player demonstrating its ability to connect wirelessly to various Bluetooth devices, including headphones, portable speakers, and car audio systems.

3.4 FM Radio

To use the FM radio function, you must plug in wired earphones. The earphones act as the antenna for receiving radio signals.

1. Plug in the wired earphones into the 3.5mm audio jack.
2. Navigate to the 'FM Radio' menu.

3. Use the navigation buttons to scan for stations or manually tune to a frequency.

4. MAINTENANCE

4.1 Cleaning

Wipe the device with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the screen or casing.

4.2 Battery Care

- Avoid exposing the device to extreme temperatures.
- Charge the device regularly, even if not in frequent use, to maintain battery health.
- Do not attempt to replace the battery yourself.

5. TROUBLESHOOTING

5.1 Device Unresponsive / Freezing

If the MP3 player becomes unresponsive or freezes, perform a manual restart:

- Press and hold the power button for approximately 8 seconds. This will force the device to restart.
- Ensure the MP3 player has sufficient power before attempting a restart.

Manual restart function

Press and hold the power button for 8 seconds



After playing for a long time or switching multiple songs, the MP3 may become temporarily unresponsive due to too many tasks. Simply press and hold the power button for 8 seconds to quickly restart.

Please ensure the MP3 have power before use. If reset still doesn't work or you have any questions, our dedicated support team is here to assist you and ensure a great shopping experience.

Image 5.1: Visual guide demonstrating how to perform a manual restart by pressing and holding the power button for 8 seconds.

5.2 Data Transfer Failure

If you encounter issues transferring files to or from the device:

- Try using a different Type-C data cable.
- Ensure the cable is securely connected to both the MP3 player and the computer.
- Restart both the MP3 player and your computer.

5.3 Bluetooth Connectivity Issues

If the MP3 player fails to connect to a Bluetooth device:

- Ensure both devices are within the optimal range (5-10 meters).
- Verify that the Bluetooth accessory is in pairing mode.
- Delete previous pairings on both devices and attempt to pair again.
- Ensure there are no strong interferences (e.g., Wi-Fi routers, other Bluetooth devices) nearby.

6. SPECIFICATIONS

Feature	Detail
Model Number	M12
Internal Memory	128 GB
Expandable Memory	Supports TF Card (up to 128GB, not included)
Bluetooth Version	5.3
Screen Size	1.8 inches (4.57 CM)
Dimensions (L x W x T)	3.23 x 1.57 x 0.37 inches (8.2 x 4.0 x 0.95 CM)
Item Weight	29g (1.02oz)
Battery Capacity	300 mAh
Charging Time	Approx. 3 hours (via Type-C)
Music Playback Time	Up to 48 hours (varies with volume)
Audio Formats Supported	MP3, WMA, APE, FLAC, WAV, DRM, ACELP, etc.
Special Features	FM Radio, Voice Recorder, E-Book Reader

7. WARRANTY AND SUPPORT

7.1 Warranty Information


This product is covered by a manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims. Specific warranty terms and duration may vary by region. For detailed warranty information, please refer to the documentation included with your purchase or contact customer support.

7.2 Customer Support

If you have any questions, require technical assistance, or experience issues not covered in this manual, please contact Aiandcc customer support. Contact details can typically be found on the product packaging or the official Aiandcc website.



© 2025 Aiandcc. All rights reserved.

Related Documents - M12

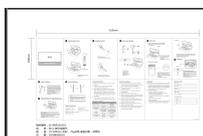

[M12 User Manual - Your Guide to Wireless Audio](#)

Comprehensive user manual for the M12 Bluetooth earphones, covering setup, usage, functions, troubleshooting, and warranty information.

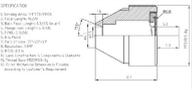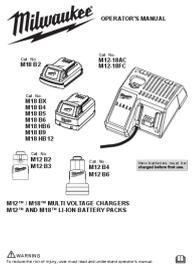 <p> ITEM NO. 1. Lens Diameter: 1.5" (38.1mm) 2. Lens Length: 1.5" (38.1mm) 3. Lens Width: 1.5" (38.1mm) 4. Lens Height: 1.5" (38.1mm) 5. Lens Weight: 1.5" (38.1mm) 6. Lens Material: 1.5" (38.1mm) 7. Lens Finish: 1.5" (38.1mm) 8. Lens Mounting: 1.5" (38.1mm) 9. Lens Application: 1.5" (38.1mm) 10. Lens Notes: 1.5" (38.1mm) </p>	<p>M12 Lens Specifications and Diagram</p> <p>Technical specifications and dimensional diagram for an M12 lens, including sensing area, focal length, field of view, resolution, and thread size.</p>
 <p> Waytronic MicroSound WT-M12 Voice Prompter </p> <p> Product Features: • High-quality, clear audio output • Easy-to-use interface • Compact design • Long battery life • Multiple audio files • Easy to install and use • Durable construction • Wide temperature range • Easy to clean • 1.5" (38.1mm) </p>	<p>Waytronic MicroSound WT-M12 Voice Prompter - Product Manual and Specifications</p> <p>This document provides comprehensive details for the Waytronic MicroSound WT-M12 Voice Prompter, including product features, electrical specifications, appearance, operation instructions, audio file management, installation guidelines, and troubleshooting.</p>
 <p> Milwaukee OPERATOR'S MANUAL M12™ TOUGHHELL™ STRETCH POLYESTER HEATED JACKET AND M12™ COMPACT CHARGER AND POWER SOURCE </p>	<p>Milwaukee M12 Heated Jacket Operator's Manual</p> <p>Operator's manual for the Milwaukee M12 Toughshell Stretch Polyester Heated Jacket and M12 Compact Charger and Power Source. Includes safety warnings, product use and care, assembly, operation, and charging instructions.</p>
 <p> Milwaukee OPERATOR'S MANUAL M12™ / M18™ MULTI VOLTAGE CHARGERS AND M12™ / M18™ LI-ION BATTERY PACKS </p>	<p>Milwaukee M12™ / M18™ Multi Voltage Chargers and Li-Ion Battery Packs Operator's Manual</p> <p>Operator's manual for Milwaukee M12™ and M18™ Li-Ion Combo Chargers and Battery Packs. Includes safety instructions, product specifications, charging procedures, maintenance, and troubleshooting.</p>
 <p> Milwaukee Nothing but HEAVY DUTY™ M12 FIWF12 M12 FIWP12 M12 FIW14 M12 FIW38 </p>	<p>Milwaukee M12 Cordless Impact Wrenches: User Manual & Technical Data</p> <p>This document details the Milwaukee M12 series of cordless impact wrenches, including models M12 FIWF12, M12 FIWP12, M12 FIW14, and M12 FIW38. It provides original instructions, technical specifications, safety guidelines, and operational information for these power tools.</p>