

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [INFANS](#) /

› [INFANS Baby High Chair Instruction Manual - Model B0F32CZBS8](#)

INFANS B0F32CZBS8

INFANS Baby High Chair Instruction Manual

Model: B0F32CZBS8

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using the INFANS Baby High Chair. Keep this manual for future reference.

- Always secure your child with the 5-point safety harness.
- Never leave your child unattended in the high chair.
- Ensure the high chair is fully assembled and all locking mechanisms are engaged before use.
- Do not use the high chair if any parts are damaged or missing.
- This high chair is designed for children aged 6 months to 3 years, with a maximum weight capacity of 33 lbs (15 kg).
- Complies with ASTM and CPSIA safety standards.
- Keep children away from the high chair during assembly and folding to prevent injury.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Baby High Chair Frame
- 1 x Seat Unit with PU Cushion
- 1 x Double Tray (Upper and Lower)
- 1 x User Guide (This manual)

SETUP AND ASSEMBLY

Follow these steps to assemble your INFANS Baby High Chair:

1. **Unfold the Frame:** Place the folded high chair on a flat surface. Press the folding buttons (refer to image for location) and gently pull the legs apart until the frame locks into an upright position. Ensure all joints are securely locked.
2. **Attach the Seat Unit:** Align the seat unit with the frame's attachment points. Push down firmly until you hear a click, indicating it is securely fastened.
3. **Install the Tray:** Slide the double tray onto the armrests. Adjust to the desired position (1 or 2) until it clicks into place.

4. **Check Stability:** Before placing your child in the high chair, gently push on the seat and tray to ensure all components are stable and securely attached.



Image: Fully assembled INFANS Baby High Chair in use, demonstrating its stable structure.

OPERATING INSTRUCTIONS

Adjusting Seat Height

The high chair offers 6 adjustable height positions to match various table heights. Locate the height adjustment buttons on the side of the main frame. Press these buttons simultaneously and slide the seat unit up or down to the desired height. Release the buttons to lock the position.

Adjusting Backrest Recline

The backrest has 3 recline positions for your child's comfort. Find the recline lever at the back of the seat. Squeeze the lever and adjust the backrest to one of the three positions. Release the lever to secure the recline angle.

Adjusting Footrest

The footrest can be adjusted to 3 positions to support your child's feet as they grow. Press the buttons on either side of the footrest and move it up or down to the appropriate position. Ensure it clicks into place.

Tray Adjustment and Removal

The double tray has 2 adjustable positions. To adjust, press the release buttons on the sides of the tray and slide it forward or backward. To remove the tray, press the release buttons and pull the tray completely off. The tray can be stored on the back of the chair legs when not in use.

Adjustable Design for Comfort


2 Adjustable
Tray Positions



5 Recline
Positions



3 Footrest
Positions

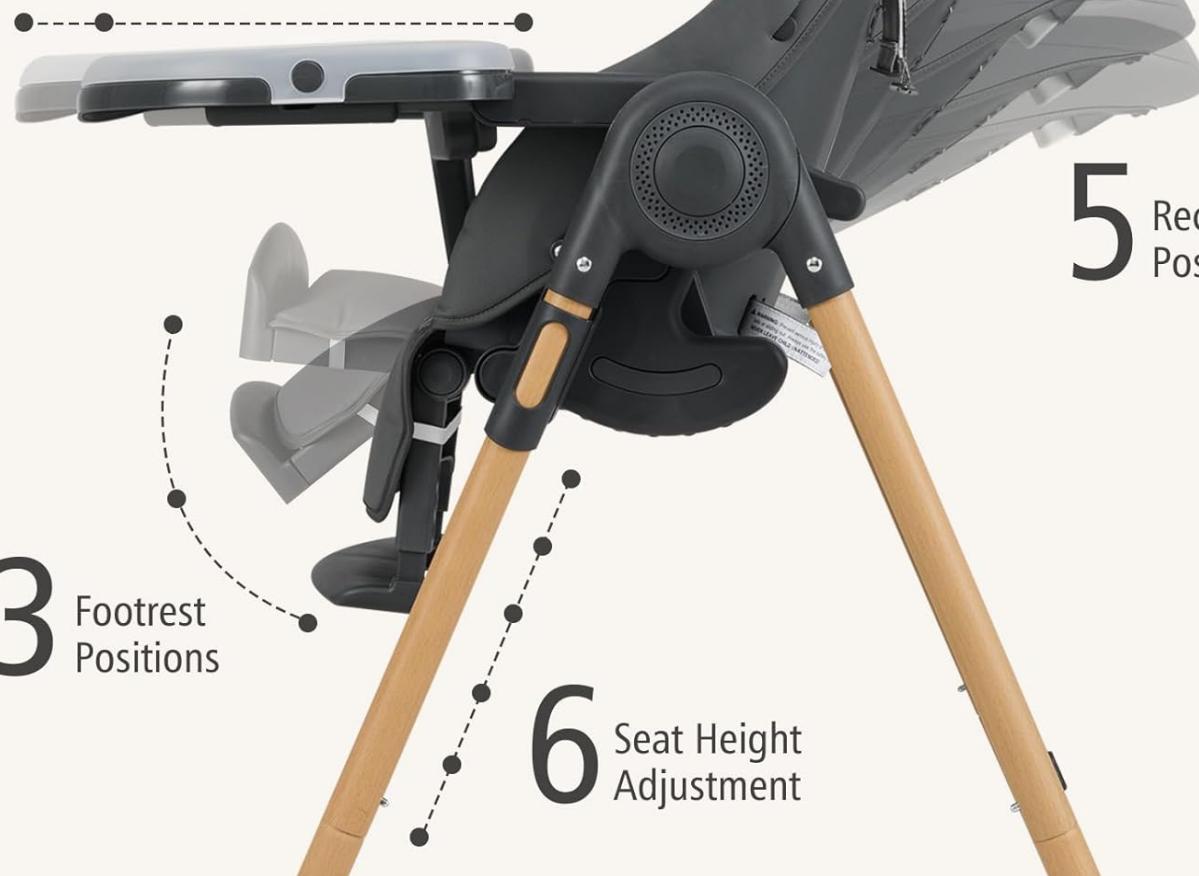

6 Seat Height
Adjustment

Image: Visual guide to the high chair's adjustable features, including tray, recline, footrest, and seat height.

Detachable Double Trays



2 Adjustable Positions



Dishwasher-safe Tray



Easy to Clean

Image: Detachable double trays, highlighting their adjustability and ease of cleaning.

Securing Your Child with the 5-Point Harness

Always use the 5-point safety harness to secure your child. Place your child in the seat, bring the shoulder straps over their shoulders, and the waist straps around their waist. Connect the buckles and adjust the straps for a snug, secure fit. Ensure the anti-fall safety baffle is in place.

Intimate Details



5-point
Safety Harness



Removable Anti-fall
Safety Baffle



Back Storing

Image: Close-up of the 5-point safety harness and removable anti-fall safety baffle, emphasizing safety features.

Folding for Storage

To fold the high chair for compact storage, ensure the tray is removed or stored on the back legs. Press the folding buttons (usually located on the side of the seat or frame, refer to image) and bring the front and back legs together. The chair will fold into a compact, freestanding unit.

Foldable High Chair

Easy to Storage



Image: The high chair in its folded state, demonstrating its space-saving design.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your high chair.

- Seat Cushion:** The double PU leather cushion is waterproof and wipeable. Wipe spills and stains immediately with a damp cloth and mild soap. For deeper cleaning, the cushion is removable and can be hand-washed or machine-washed on a gentle cycle. Air dry only.
- Trays:** The removable PP tray is dishwasher safe for convenient cleaning. For manual cleaning, wash with warm soapy water and rinse thoroughly.
- Frame:** Wipe the frame with a damp cloth. Avoid abrasive cleaners.
- Harness:** The 5-point harness straps can be spot cleaned with mild soap and water. Allow to air dry completely.
- Storage:** Store the high chair in a clean, dry place away from direct sunlight when not in use.

Removable Double Seat Cushion

Designed for extra comfort



Waterproof &
Wipeable Surface



Image: Removable double seat cushion, illustrating its waterproof and easy-to-clean properties.

TROUBLESHOOTING

Problem	Possible Cause	Solution
High chair does not fold/unfold smoothly.	Locking mechanisms are stuck or not fully disengaged.	Ensure folding buttons are fully pressed. Check for any obstructions in the folding joints. Apply light lubricant if necessary.
Tray does not attach securely.	Tray not aligned correctly or release buttons not fully engaged.	Re-align the tray with the armrest slots. Push firmly until you hear a click. Ensure no food debris is blocking the mechanism.
Seat height or recline adjustment is difficult.	Adjustment buttons/levers are not fully pressed or released.	Ensure buttons/levers are fully engaged during adjustment. Do not force the mechanism.

Problem	Possible Cause	Solution
Harness feels too tight or too loose.	Straps are not adjusted correctly for child's size.	Adjust the shoulder and waist straps to fit snugly but comfortably around your child. Refer to the operating instructions for harness adjustment.

SPECIFICATIONS

Model: B0F32CZBS8

Brand: INFANS

Color: Dark Grey

Material: PP (Polypropylene) + PU (Polyurethane)

Overall Dimensions (Unfolded): 31.5" (Depth) x 23.5" (Width) x 40.5" (Height)

Folded Dimensions: 28.5" (Height) x 14" (Width)

Suitable Age: 6 months - 3 years old

Weight Capacity: 33 lbs (15 kg)

Net Weight: 16.5 lbs (7.5 kg)

Safety Standards: Complies with ASTM and CPSIA

Product Size

Suitable age: 6-36 months

Weight capacity of the high chair: 33lbs



Image: Product dimensions for both unfolded and folded configurations, along with age and weight limits.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact INFANS customer service. Refer to the contact information provided with your purchase or visit the official INFANS website.

Customer Service: Please refer to the contact details provided on the product packaging or the INFANS official website.

Online Resources: For additional support and FAQs, visit the [INFANS Store on Amazon](#).

