



[Manuals.plus](#) /

› [Roxicosly](#) /

› Roxicosly CR1029 Digital Calendar Day Clock User Manual

Roxicosly CR1029

Roxicosly Digital Calendar Day Clock User Manual

Model: CR1029

INTRODUCTION

This manual provides detailed instructions for the Roxicosly Digital Calendar Day Clock (Model CR1029). This device is designed to clearly display time, date, and day of the week with a large, high-definition screen, making it suitable for various users, including seniors and those with vision impairment. It offers extensive alarm and reminder functionalities, customizable display options, and a photo playback feature.



Image: The Roxicosly Digital Calendar Day Clock, showing a clear display of the time, day, and date.

IMPORTANT SAFETY INFORMATION

- Always use the provided power adapter. The clock requires AC power for operation.
- 2 AA batteries (not included) are for backup memory function only, preserving settings during a power outage. They do not power the clock for continuous display.
- Keep the device away from water and high humidity.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Ensure proper ventilation around the device.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Roxicosly Digital Calendar Day Clock (Model CR1029)
- Power Adapter (AC 100-240V, DC 5V/2A)
- USB to Type-C Cable (1.4m/55inch)
- User Manual



Image: The clock, USB cable, power adapter, and user manual included in the package.

SETUP

1. Powering On

1. Connect the USB to Type-C cable to the clock's power input.
2. Plug the power adapter into a standard AC outlet.
3. The clock will automatically power on and display the current time and date.
4. For memory backup during power outages, insert 2 AA batteries (not included) into the designated battery compartment.

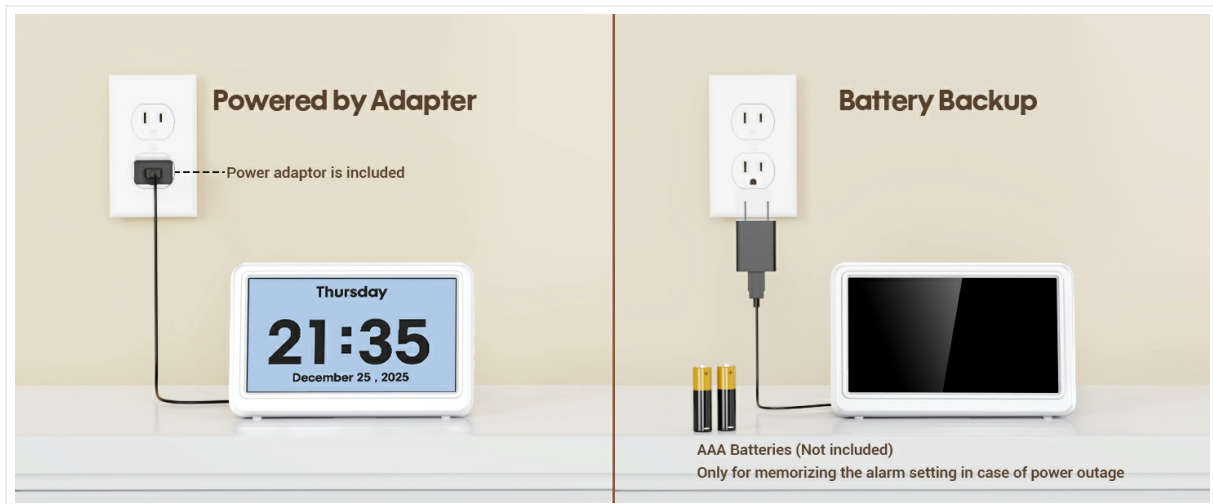 


Image: Illustration of the clock powered by an adapter and the location for optional AA battery backup.

2. Initial Settings (Date & Time)

The clock typically sets itself automatically. If manual adjustment is needed:

- Access the 'Settings' menu using the control buttons on the back or side of the clock.
- Navigate to 'Date & Time' to adjust year, month, day, hour, and minute.
- Select your preferred 12-hour or 24-hour time format.
- Adjust Daylight Saving Time (DST) manually if applicable using the dedicated DST button.

OPERATING INSTRUCTIONS

1. Display Features

- **HD Screen & Large Font:** The 7-inch (1024x600P) LCD screen provides a clear display of time, date, and day of the week in large, easy-to-read fonts.
- **Time Periods:** The day is divided into six distinct periods: Morning, Noon, Afternoon, Evening, Night, and Midnight, each accompanied by sun or moon icons for visual clarity.



Image: The clock display illustrating different time periods (Morning, Noon, Afternoon, Evening, Night, Pre-Dawn) with corresponding sun and moon icons.

2. Alarms and Reminders

The clock supports up to 20 standard alarms and 20 customizable reminders.

- **Standard Alarms:** Set alarms for specific times, daily, weekdays, weekends, or specific dates.
- **Custom Reminders:** Create personalized reminders for tasks such as taking medication, drinking water, appointments, or other daily activities. Clear icons and text accompany triggered alarms.



Image: A visual representation of the clock's 20 separate alarms and 20 reminders, including medication reminders.

3. Sleep Mode & Brightness

- **One-Touch Sleep Mode:** Press the top button to instantly turn off the display for an undisturbed sleep environment.
- **Adjustable Brightness:** Choose from 10 brightness levels (10% to 100%) to suit day or night viewing, reducing eye strain.

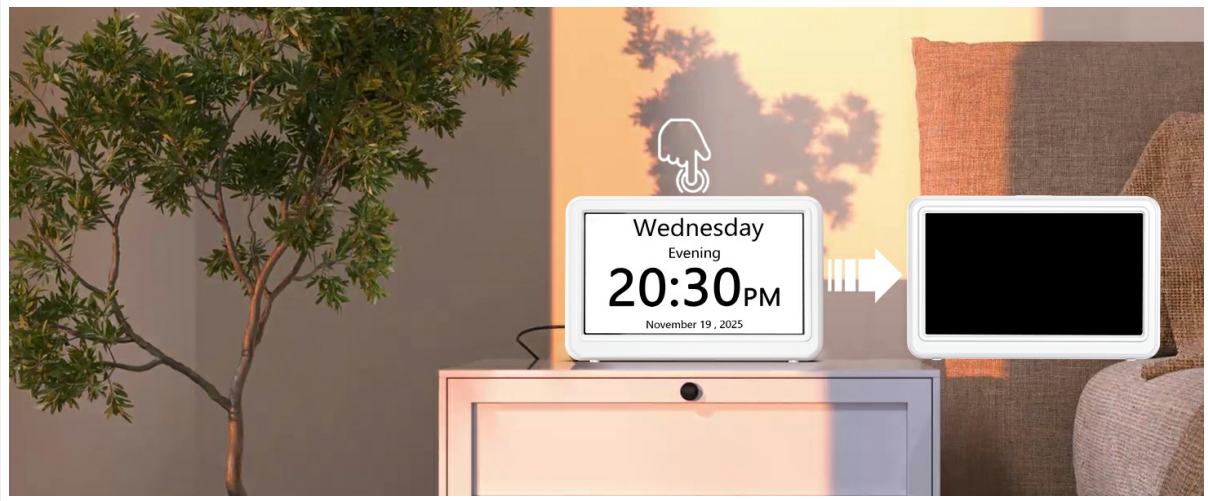 


Image: The clock demonstrating its 10-level adjustable brightness feature, from 100% to 10% illumination.

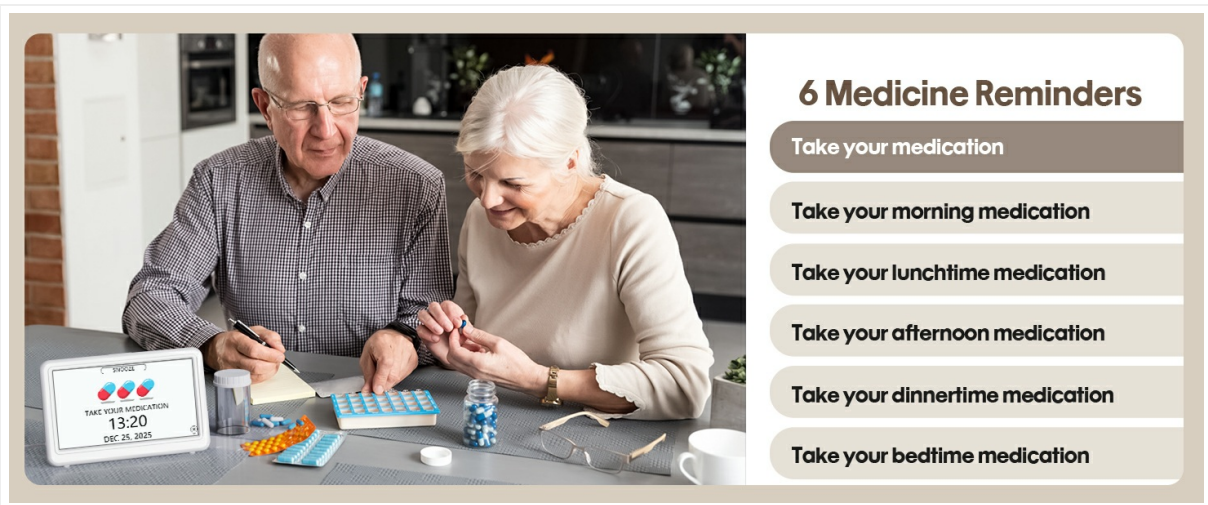 


Image: A visual showing the clock's one-touch sleep mode, where the display turns off.

4. Themes and Language Support

- **12 Display Themes:** Customize the clock's appearance with 12 different display themes and various color options to suit personal preferences or indoor settings.
- **6 Language Support:** The clock supports English, French, German, Italian, Spanish, and Japanese.



Image: The clock showcasing its 12 themes and multiple color options, along with flags representing the 6 supported languages.

5. Volume Control & Snooze

- **Adjustable Volume:** Select from 9 adjustable volume levels and 18 ringtones for alarms.
- **Snooze Function:** Customize snooze duration to 3, 5, or 9 minutes.



Image: A person stretching in bed, with the clock displaying an alarm and icons representing 18 different ringtones.

6. Pictures Playback Function

The clock can function as an HD electronic photo frame.

- Insert an SD card or USB Flash Drive (not included, max 64GB) into the slot on the back of the clock.
- The clock will automatically play photos from the inserted drive.



Image: The clock displaying a slideshow of family photos, highlighting its electronic photo frame capability with Micro SD and USB Flash Drive support.

MAINTENANCE

- Clean the screen and exterior with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Ensure the power adapter and cable are free from damage.
- If storing the clock for an extended period, remove the backup batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not turning on	No power supply; faulty adapter/cable	Ensure power adapter is securely plugged in. Check cable for damage. Try a different outlet.
Display is dim or too bright	Brightness settings incorrect	Adjust brightness levels in the 'Brightness' menu.
Alarms not sounding	Alarm not set; volume too low	Verify alarm settings in the 'Alarms' menu. Increase alarm volume.
Time/Date incorrect after power outage	No backup batteries or batteries depleted	Install fresh AA batteries for backup. Manually reset time/date if necessary.
Photos not displaying	SD card/USB drive not inserted correctly; unsupported format; corrupted files	Ensure drive is fully inserted. Check file format (FAT/FAT32/exFAT32/NTFS). Try different photos or drive.

SPECIFICATIONS

- **Brand:** Roxicosly
- **Model Number:** CR1029
- **Display Type:** Digital LCD
- **Screen Size:** 7 Inches (1024x600P)
- **Product Dimensions:** 7.17"W x 4.6"H
- **Power Source:** Corded Electric (AC Powered)
- **Battery Backup:** 2 AA batteries (not included) for memory function
- **Alarms:** Up to 20 standard alarms
- **Reminders:** Up to 20 customizable reminders (including 6 medicine reminders)
- **Brightness Levels:** 10 (10% to 100%)
- **Display Themes:** 12
- **Ringtones:** 18
- **Snooze Duration:** 3, 5, or 9 minutes
- **Time Formats:** 12H/24H
- **Language Support:** English, French, German, Italian, Spanish, Japanese
- **Photo Playback:** Supports SD/USB Flash Drive (Max 64GB)
- **Material:** Plastic
- **Mounting Type:** Tabletop

WARRANTY AND SUPPORT

Roxicosly products are designed for reliability and performance. This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or contact Roxicosly customer support.

If you encounter any issues or have questions regarding your Digital Calendar Day Clock, please contact

our customer support team for assistance. Our team is available to help with troubleshooting, setup, and general inquiries.

For support, please visit the Roxicosly store on Amazon or refer to the contact information provided in your product documentation.