

[Manuals.plus](#) /

› [VOSFEEL](#) /

› VOSFEEL 30000mAh Portable Camping Fan with RGB Lantern (Model X62) - Instruction Manual

VOSFEEL X62

VOSFEEL 30000mAh Portable Camping Fan with RGB Lantern (Model X62)

Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this product and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fan in water or other liquids.
- Keep the fan away from children and pets.
- Do not disassemble, repair, or modify the fan yourself. Contact customer support for assistance.
- Use only the provided charging cable and a compatible power adapter.
- Avoid placing fingers or foreign objects into the fan grille.
- Do not use the fan in extremely hot or humid environments.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.

PACKAGE CONTENTS

Verify that all items are included in your package:

- VOSFEEL Portable Camping Fan (Model X62)
- USB-C Charging Cable
- Remote Control
- Instruction Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your VOSFEEL Portable Camping Fan.



The VOSFEEL Portable Camping Fan in an outdoor setting.


- **Fan Head:** Adjustable for directional airflow.
- **Control Panel:** Located on the base, features buttons for power, speed, light, and oscillation.
- **Digital Display:** Shows battery percentage, wind speed, and timer settings.
- **Folding Handle/Hook:** For easy carrying or hanging the fan.
- **USB-C Input Port:** For charging the fan.
- **USB-A Output Port:** Functions as a power bank to charge other devices.

OUR



VS

OTHERS

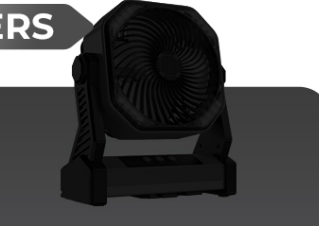

Key features of the VOSFEEL Portable Camping Fan, including battery, remote, wind speeds, light modes, timer, and carrying handle.

SETUP

Charging the Fan

Before first use, fully charge the fan. The digital display will show the current battery level.

1. Connect the provided USB-C charging cable to the fan's input port.
2. Connect the other end of the cable to a compatible USB power adapter (not included).
3. The digital display will indicate charging status. A full charge provides 24-80 hours of operation depending on speed and light usage.

Multi-functional Portable Camping Fan

Enjoy a cool summer day anytime, anywhere



30000mAh Battery



Remote control



4 Wind speeds



7 Light modes



Timer function



Carrying handle



The fan's 30000mAh battery can also charge your phone via its USB output.

Remote Control Setup

The remote control allows convenient operation from a distance.

- Ensure the remote control has working batteries (not specified in JSON, assume standard small batteries).
- Point the remote control directly at the fan's receiver for optimal performance.

30000mAh Battery

Powerful Rechargeable Camping Fan



5V/2A
Type-C Input



5V/2A
USB Output

The remote control provides convenient access to all fan functions.

OPERATING INSTRUCTIONS

Your VOSFEEL fan offers multiple functions for personalized comfort.

Power On/Off

- Press the power button on the fan's control panel or the remote control to turn the fan on or off.

Adjusting Wind Speed

The fan features 4 wind speeds. The digital display shows the current speed.

1. Press the fan speed button on the control panel or the remote control to cycle through speeds 1 (Soft breeze) to 4

(Super wind).



The fan provides 4 adjustable wind speeds for various comfort levels.

Oscillation

The fan offers both manual and automatic rotation for wide area coverage.

- **Manual Rotation:** Adjust the fan head 90° up or down manually to direct airflow.
- **Automatic Oscillation:** Press the oscillation button on the control panel or remote to activate 270° left/right automatic rotation. Press again to stop.



7 Light Modes

Multi-colored lights to add ambience to outdoor camping



The fan offers both manual vertical adjustment and automatic horizontal oscillation.

LED Lantern Function

The fan includes an RGB lantern with 7 colorful light modes.

1. Press the light button on the control panel or remote to turn the lights on.
2. Continue pressing to cycle through the 7 different light modes, including single-color constant and automatic gradient modes.
3. Press and hold the light button to turn the lights off.



The fan's integrated RGB lantern offers 7 distinct light modes.

Timer Function

Set the fan to automatically turn off after a specified period.

1. Press the timer button on the control panel or remote to select a timer setting (2H, 4H, 6H, or 8H).
2. The digital display will show the selected timer duration.
3. The fan will automatically turn off once the timer expires.



The intuitive digital display shows power, wind speed, and timer settings.

Power Bank Function

Use the fan's large battery capacity to charge your mobile devices.

1. Connect your device's charging cable to the USB-A output port on the fan's base.
2. The fan will begin charging your device.

This video demonstrates the various features of the VOSFEEL Portable Camping Fan, including its power bank function, speed settings, and oscillation.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your fan.

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the fan. Do not use abrasive cleaners or immerse in water. For the fan blades, use a soft brush or compressed air to remove dust.
- **Storage:** When not in use, store the fan in a cool, dry place away from direct sunlight. Ensure it is fully charged before long-term storage.

Troubleshooting

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Low battery or power button not pressed correctly.	Charge the fan fully. Press the power button firmly.
Weak airflow.	Low speed setting or obstructed grille.	Increase the wind speed. Clean any dust or debris from the fan grille.
LED lights not working.	Lights turned off or low battery.	Press the light button to turn on. Charge the fan.
Remote control not responding.	Remote batteries low or obstruction.	Replace remote batteries (if applicable). Ensure no obstructions between remote and fan.
Device not charging via USB-A port.	Fan battery low or incorrect cable.	Charge the fan. Ensure the charging cable is functional and correctly connected.

If the problem persists, please contact customer support.

Specifications

Feature	Detail
Brand	VOSFEEL
Model Name	X62
Product Dimensions	8.3"D x 4"W x 11.2"H
Power Source	Battery Powered
Battery Capacity	30000mAh
Number of Speeds	4
Noise Level	30 Decibels

Feature	Detail
Special Features	LED Light, Lightweight, Oscillating, Portable, Remote Controlled, Power Bank Function
Controller Type	Button Control, Remote Control
Material	Acrylonitrile Butadiene Styrene (ABS)
Indoor/Outdoor Usage	Indoor, Outdoor
Reusability	Rechargeable

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official VOSFEEL website. Keep your proof of purchase for any warranty claims.

© 2026 VOSFEEL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F32GVX55>

More documents and user manuals: <https://manuals.plus/>