

UMIDIGI G1 TAB KIDS

UMIDIGI G1 Tab Kids Tablet User Manual

Model: G1 TAB KIDS

1. INTRODUCTION AND OVERVIEW

The UMIDIGI G1 Tab Kids Tablet is designed to provide a safe and engaging digital experience for children, while offering robust parental control features. This 10.1-inch Android tablet combines entertainment with educational tools, featuring a durable design and efficient performance.

Key features include:

- **Android 13 Operating System:** Provides a smooth and secure user experience.
- **RK3562 Quad-Core Processor:** Ensures efficient performance for various applications.
- **10.1-inch HD IPS Display:** Offers clear and vibrant visuals (1280x800 pixels).
- **8GB (4+4GB Expansion) RAM + 64GB ROM:** Ample memory and storage, expandable up to 1TB via microSD.
- **Wi-Fi 6 (2.4G & 5G Dual-Band) & Bluetooth 5.0:** For fast and stable connectivity.
- **6000mAh Battery:** Provides extended usage time.
- **Dual 8MP Cameras (Front & Rear):** For capturing photos and video calls.
- **Kids Park Parental Control Mode:** Allows content filtering, screen time limits, and application management.
- **Durable EVA Protective Case:** Designed for enhanced protection against drops.

2. PACKAGE CONTENTS

Upon unboxing your UMIDIGI G1 Tab Kids Tablet, please ensure all the following items are present:

- UMIDIGI G1 Tab Kids Tablet (with pre-applied screen protector)
- EVA Protective Case with integrated stand
- Power Adapter
- USB Type-C Cable
- Quick Start Guide

- Stylus Pen



Image: The UMIDIGI G1 Tab Kids Tablet and its included accessories, such as the protective case, charging cable, power adapter, and stylus.

3. SETUP

3.1 Initial Power On and Charging

Before first use, fully charge the tablet using the provided USB Type-C cable and power adapter. The tablet will display a charging indicator. To power on, press and hold the power button located on the side of the tablet until the UMIDIGI logo appears on the screen.



Image: The UMIDIGI G1 Tab Kids Tablet in its protective case, powered on and displaying a drawing application.

3.2 Wi-Fi Connection

To connect to a Wi-Fi network:

1. From the home screen, swipe down from the top to access the Quick Settings panel.
2. Tap and hold the Wi-Fi icon to open Wi-Fi settings.
3. Toggle Wi-Fi ON if it's off.
4. Select your desired network from the list and enter the password if prompted.
5. The tablet supports both 2.4G and 5G bands for optimal speed and stability.



Supports WiFi 6

2.4G & 5G

Dual-Band

IEEE:802.11
ax/ac/a/b/g/n

Supports

Bluetooth 5.0

Providing a better network
Connection with lower latency

Image: Illustration highlighting the tablet's support for Wi-Fi 6 (2.4G & 5G Dual-Band) and Bluetooth 5.0 connectivity.

3.3 Parental Control Setup (Kids Park)

The UMIDIGI G1 Tab Kids Tablet comes with a pre-installed Kids Park application for parental control. This mode allows you to manage content, set time limits, and control application access for your child.

1. Locate and tap the 'Kids Park' icon on the home screen.
2. Follow the on-screen instructions to create a child profile and set up a parent password.
3. Within Kids Park, you can manage applications, websites, media content, and set time limits for usage.
4. To exit Kids Park, a parent password is required, ensuring children remain within the controlled environment.



Parental control mode Always reassuring

Kids Park has a special section for parental control. With a few simple settings on the app, you can protect your children from the hazards that come with being online for long periods of time. Rest assured let them play and learn with the tablet even when you're not around.



Password protection
Prevents children from leaving the children-only area.



Website Management
Select safe and healthy websites to browse.



More Kids Accounts
Customize different content for each child to use.



Application Management
Select applications that are safe for children to use.



Time Management
Set study and break times to avoid addiction.

Image: A family interacting with the tablet, demonstrating the parental control mode for a safe learning environment.

4. OPERATING THE TABLET

4.1 Basic Navigation

- **Touchscreen:** Navigate by tapping, swiping, and pinching on the 10.1-inch HD IPS display.
- **Home Screen:** Access installed applications and widgets.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and quick access settings like Wi-Fi, Bluetooth, and brightness.

4.2 Applications and Multitasking

The tablet runs on Android 13, allowing access to a wide range of applications from the Google Play Store. It supports a smart split-screen feature for enhanced productivity.

- **Installing Apps:** Use the Google Play Store to download and install new applications.
- **Split Screen:** To use two apps simultaneously, open one app, then swipe up from the bottom of the screen and hold to reveal recent apps. Drag another app to the side of the screen to activate split-screen mode.

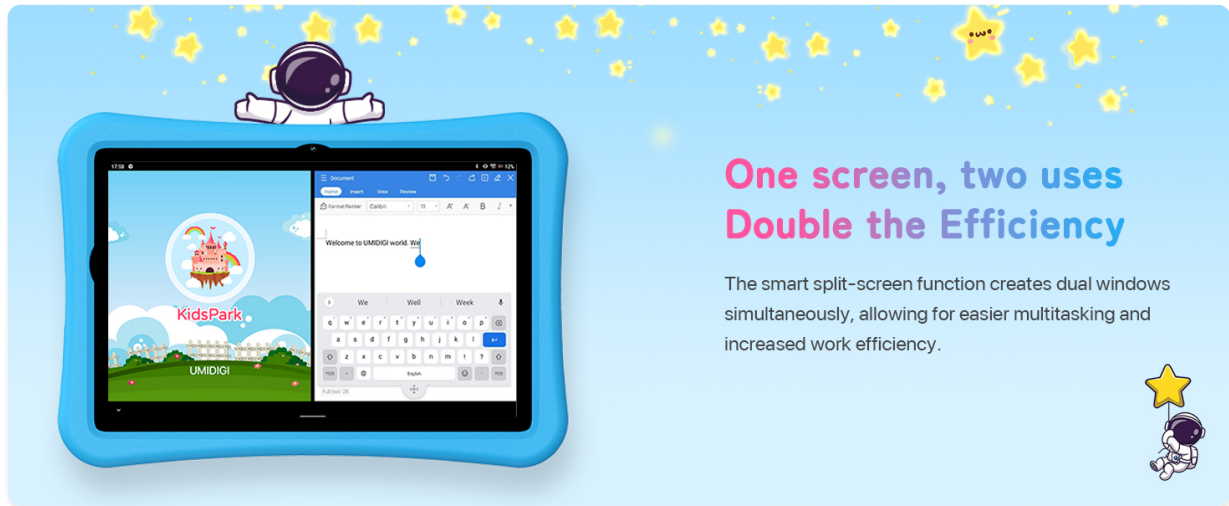


Image: The tablet demonstrating its split-screen functionality, allowing two applications to be used side-by-side for multitasking.

4.3 Camera Functions

The tablet is equipped with dual 8MP cameras (front and rear) for photography and video calls.

- **Taking Photos/Videos:** Open the Camera app to capture images or record videos.
- **Switching Cameras:** Tap the camera switch icon within the app to alternate between the front and rear cameras.

Capture Wonderful Moment

UMIDIGI G1 Tab is equipped with an 8MP rear camera to help you record beautiful moments.

The front 8MP camera provides a clearer portrait for video calls.



Image: The UMIDIGI G1 Tab Kids Tablet, highlighting its dual 8MP cameras for capturing moments.

5. PARENTAL CONTROL FEATURES

The Kids Park application provides comprehensive parental controls to ensure a safe and educational environment for your child:

- **Content Management:** Filter applications, websites, and media content based on age appropriateness.
- **Time Limits:** Set daily usage limits and specific time schedules for tablet use.
- **Application Control:** Grant or restrict access to specific applications.
- **Password Protection:** A parent password is required to exit Kids Park or modify settings, preventing unauthorized access by children.

6. BATTERY MANAGEMENT

The UMIDIGI G1 Tab Kids Tablet is equipped with a 6000mAh battery, offering extended usage. To maximize battery life:

- **Charging:** Use the provided charger and cable. Avoid using third-party chargers that may not meet specifications.

- **Brightness:** Adjust screen brightness to a comfortable level, as high brightness consumes more power.
- **Background Apps:** Close unused applications running in the background.
- **Wi-Fi/Bluetooth:** Turn off Wi-Fi and Bluetooth when not in use.

6000mAh Big Battery

With the 6000mAh battery, you'll be able to fully enjoy the relaxing world.
With a Type-C port, full power always on standby,
you can enjoy long battery life.



			
480H Standby	23H Calling	20H Play Music	7H Video

Image: An illustration of the tablet's 6000mAh battery, indicating long-lasting power for various activities.

7. MAINTENANCE & CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Protective Case:** Keep the tablet in its durable EVA protective case to guard against accidental drops and impacts.
- **Temperature:** Avoid exposing the tablet to extreme temperatures (hot or cold).
- **Water Exposure:** The tablet is not waterproof. Keep it away from liquids.

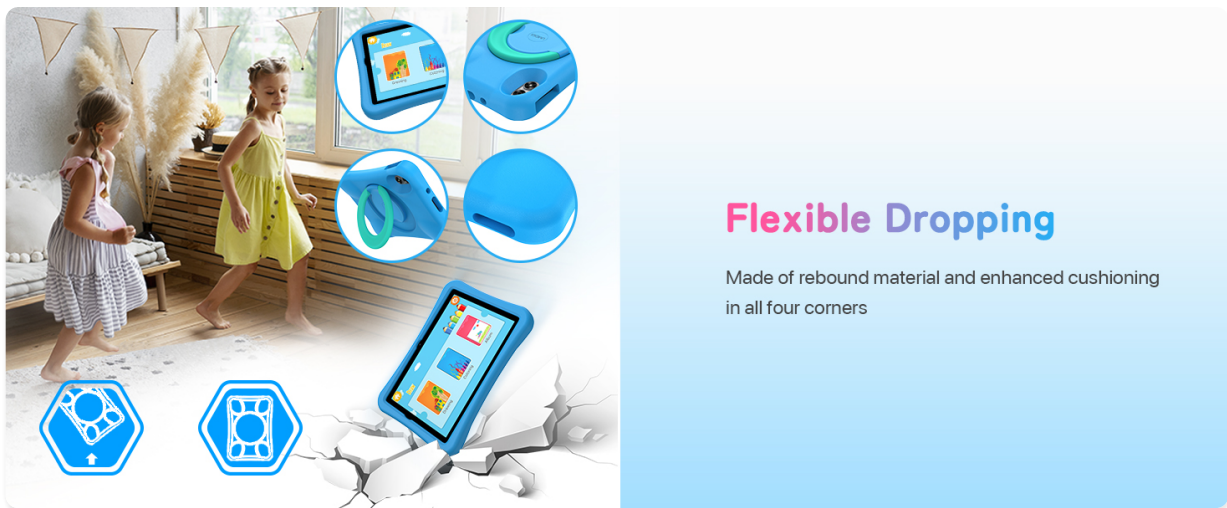


Image: The tablet in its EVA protective case, illustrating its durability and resistance to drops.

8. TROUBLESHOOTING

If you encounter issues with your UMIDIGI G1 Tab Kids Tablet, refer to the following common solutions:

- **Tablet Not Turning On:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Tablet Freezes/Unresponsive:** Press and hold the power button for about 10-15 seconds to force a restart.
- **Wi-Fi Connectivity Issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
- **Apps Crashing:** Clear the cache of the problematic app (Settings > Apps > [App Name] > Storage > Clear Cache). If the issue persists, try reinstalling the app.
- **Slow Performance:** Close unused background applications. Clear unnecessary files and data to free up storage space.

Troubleshooting Video: Tablet Boot Loop Issue

Your browser does not support the video tag.

Video: This video demonstrates a tablet experiencing a boot loop, where it repeatedly shows the UMIDIGI logo and restarts without fully booting. This indicates a potential software or hardware issue that may require further support.

9. SPECIFICATIONS

Feature	Specification
Model Name	G1 TAB KIDS
Brand	UMIDIGI
Operating System	Android 13
Processor	RK3562 Quad-Core (2.0GHz)
RAM	4GB (expandable to 8GB)
Internal Storage	64GB

Expandable Storage	Up to 1TB via microSD
Screen Size	10.1 Inches
Display Resolution	1280 x 800 pixels (HD IPS)
Wireless Connectivity	Wi-Fi 6 (2.4G & 5G), Bluetooth 5.0
Cameras	8MP Rear Camera + 8MP Front Camera
Battery Capacity	6000mAh
Ports	USB Type-C, 3.5mm Audio Jack
Dimensions	11 x 7 x 1 inches
Item Weight	2.68 pounds

Product Features Video

Your browser does not support the video tag.

Video: This video provides a quick overview of the UMIDIGI G1 Tab Kids Tablet's key features, including its quad-core processor and 6000mAh battery.






10. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please visit the official UMIDIGI website or contact their customer service. You can also refer to the UMIDIGI Store on Amazon for product-specific support and FAQs.

Visit the UMIDIGI Official Store

Related Documents - G1 TAB KIDS

<div>UMIDIGI</div> <div>G3 Tab MT06</div> <div>Thanks for choosing UMIDIGI products.</div> <div>www.umidigi.com</div>	<div>UMIDIGI G3 Tab User Manual and Specifications</div> <div>Comprehensive user manual and technical specifications for the UMIDIGI G3 Tab (MT06), covering setup, features, connectivity, and safety information.</div>
---	---

	<p><u>UMIDIGI G5 TAB Kids Smart Tablet User Manual and Specifications</u></p> <p>Comprehensive user manual and technical specifications for the UMIDIGI G5 TAB Kids Smart Tablet, covering setup, features, and usage in multiple languages.</p>
	<p><u>UMIDIGI G2 Tab Kids User Manual - Features, Specifications, and Safety Guide</u></p> <p>This user manual provides comprehensive information for the UMIDIGI G2 Tab Kids tablet, including setup, device overview, network connectivity, camera usage, security precautions, technical specifications, warranty details, and EU compliance information.</p>
	<p><u>UMIDIGI G2 Tab Uživatelská příručka</u></p> <p>Komplexní uživatelská příručka pro tablet UMIDIGI G2 Tab, která pokrývá bezpečnostní informace, nabíjení, provoz, záruku a podrobnosti o shodě. Naučte se používat a udržovat svůj tablet G2 Tab.</p>
	<p><u>UMIDIGI G5 Tab (MT16) User Manual and Specifications</u></p> <p>Official user manual and specifications for the UMIDIGI G5 Tab (MT16) tablet, covering card insertion, network connectivity, camera usage, and detailed technical specifications.</p>
	<p><u>UMIDIGI A13 Tab User Manual</u></p> <p>User manual for the UMIDIGI A13 Tab, covering setup, operation, specifications, and safety information in multiple languages.</p>