

## TCL CWD60AW

# TCL CWD60AW 6kg Slim Drum Washing Machine User Manual

Model: CWD60AW

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your washing machine and retain this manual for future reference. Failure to follow these instructions could result in property damage or personal injury.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded power outlet. Do not use extension cords or adapters.
- **Water Supply:** Connect the water inlet hose securely to prevent leaks. Ensure water pressure is within the specified range.
- **Children and Pets:** Keep children and pets away from the washing machine during operation. The door can be locked to prevent accidental opening.
- **Flammable Materials:** Do not wash items that have been soiled with flammable substances (e.g., gasoline, oil, alcohol).
- **Maintenance:** Always unplug the appliance before cleaning or performing any maintenance.
- **Damage:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

## 2. PRODUCT OVERVIEW

The TCL CWD60AW is a compact, front-load drum washing machine designed for efficiency and space-saving. It features a slim body with a depth of only 48 cm, making it suitable for smaller living spaces.



**Figure 1:** Front view of the TCL CWD60AW 6kg Slim Drum Washing Machine. This image shows the compact design with a black drum door and a white control panel at the top.

### Key Features:

- **Ultra-Slim Design:** With a depth of approximately 48 cm, it fits perfectly into narrow spaces, ideal for single-person households or compact apartments.

- **Water-Saving Technology:** Utilizes a unique water flow control system, reducing standard water consumption to about 50 liters, significantly less than conventional vertical washing machines.
- **Steam Wash Function:** High-temperature steam penetrates deep into fabrics to effectively remove stubborn odors and reduce wrinkles, minimizing ironing time. It is also gentle on delicate items like silk and baby clothes.
- **Multiple Wash Programs:** Offers 8 diverse wash courses, including options for cotton, wool, duvets, and a quick 15-minute wash. Settings for water temperature (up to 60°C), wash time, and spin speed are adjustable.
- **60°C Hot Water Wash:** Effectively breaks down tough stains like food spills and sebum, enhancing detergent performance and providing an effective solution for allergy sufferers.
- **Quiet Operation:** Equipped with a digital inverter motor for reduced power consumption, improved durability, and quiet operation, allowing for washing even at night or early morning.

### 3. SETUP AND INSTALLATION

---

Proper installation is crucial for the optimal performance and longevity of your washing machine. Please follow these guidelines carefully.

#### 3.1 Unpacking

- Carefully remove all packaging materials.
- **Important:** Locate and remove any transport bolts from the rear of the machine. These bolts secure the drum during transit and must be removed before operation to prevent damage.

#### 3.2 Location Requirements

The washing machine must be installed on a firm, level surface. An uneven surface can cause excessive noise and vibration during the spin cycle.

- Avoid soft floors, sloped areas, or surfaces with steps.
- If the installation surface is slippery, consider using anti-vibration mats or non-slip sheets.
- Ensure sufficient space around the machine. Do not place it directly against walls or furniture.

# 商品寸法 + 設置について



本体は前方や上方を開放して、  
壁から表の寸法以上離してください。

異常な振動や音を防ぐためです。


場所	離隔距離(cm)
左方	※ 1
右方	※ 1
後方	5
上方	20
下方	0



※排水ホース接続側は、壁から9cm以上真下排水パイプを使用する場合は、かさ上げ台等で製品本体を 5cm 以上かさ上げして下さい。


## 防水パンのサイズを確認してください

内寸幅が595mm以上x内寸奥行337mm以上必要です。フチの高さが90mm以上の場合、本体を防水パンの後方に設置するか、または高さ調整脚(市販品)を使用し、排水フィルターカバーを開けることができるようにしてください。

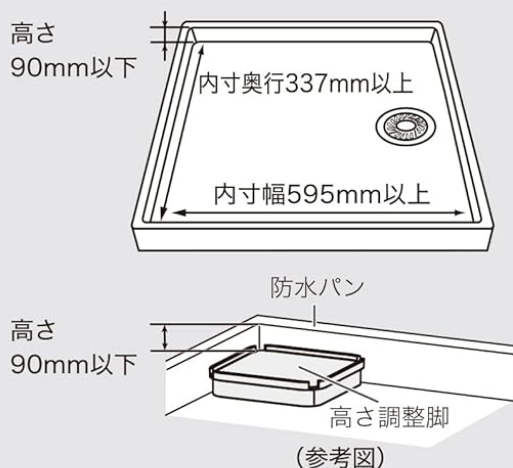

## 四隅が高くなっている防水パンについて

右図に示す寸法が263mm以上の場合には四隅が高くなっている防水パンには載りません。四隅が高くなっている防水パンに載せる場合は、本体の調整脚(4か所)が四隅が高くなっている場所に載っていることをご確認の上使用してください。

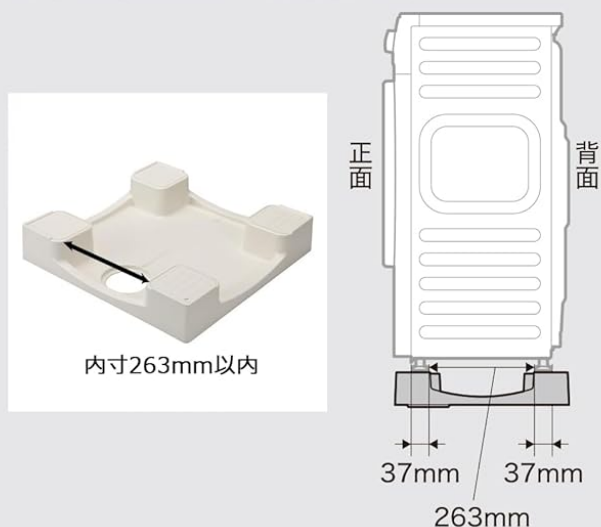


**Figure 2:** Installation space requirements. This diagram illustrates the minimum clearances needed around the washing machine (1cm left/right, 5cm rear, 20cm top) and the dimensions for a suitable waterproof pan.

## 3.3 Leveling the Machine

After placing the machine, ensure it is perfectly level. Use a spirit level or a simple method like placing a coin on top to check for stability.

- Adjust the machine's feet using the adjustment screws until it is stable and does not wobble when pressed diagonally.
- Confirm the machine is level both front-to-back and side-to-side.

# CWD60AW(単位 : mm)

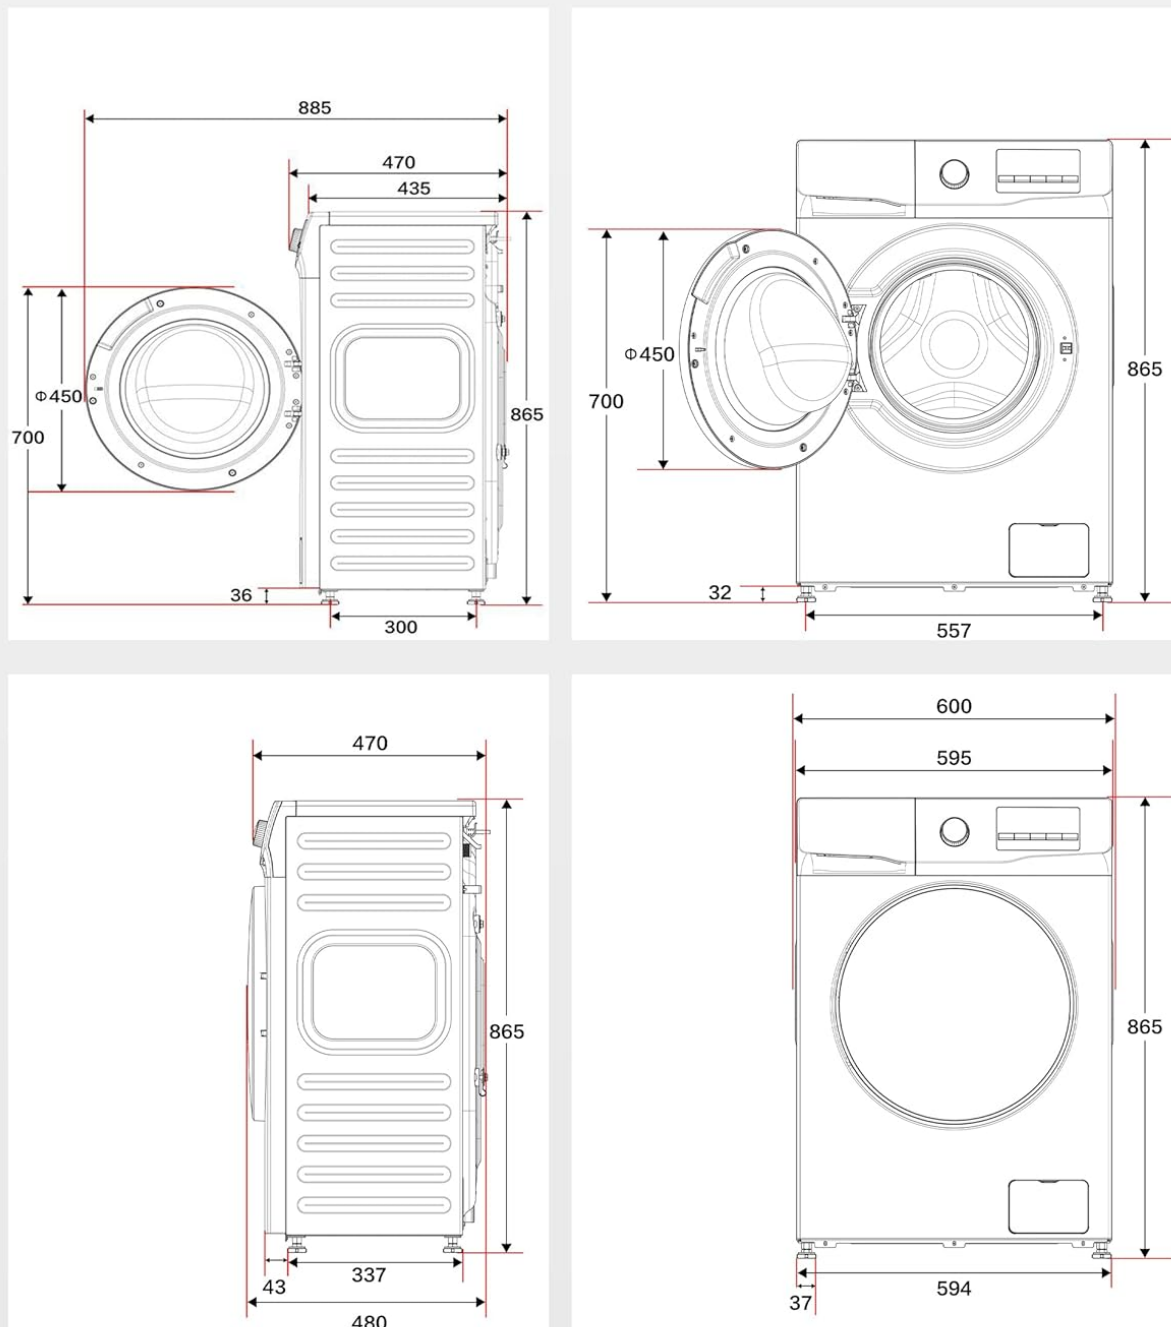

**Figure 3:** Detailed dimensions of the TCL CWD60AW. This diagram provides precise measurements (in mm) for the machine's width, depth, and height, including door opening clearance, essential for installation planning.

## 3.4 Water and Drain Connections

- Connect the water supply hose to the water tap and the machine's inlet valve. Ensure connections are tight to prevent leaks.
- Connect the drain hose to a suitable drain pipe. Ensure the drain hose is not kinked or blocked.

## 4. OPERATING INSTRUCTIONS

This section guides you through the basic operation of your TCL CWD60AW washing machine.

## 4.1 Control Panel Overview



**Figure 4:** Control panel. This image highlights the program selection dial and the digital display, showing various wash options and customizable settings.

## 4.2 Loading Laundry and Detergent

- Open the door and load your laundry, ensuring not to overload the drum. The maximum capacity is 6 kg.
- Add detergent and fabric softener to the appropriate compartments in the dispenser drawer.




## お湯洗いコース

60℃の温水で頑固な汚れを落とし、洗浄効果を最大限に引き出し！

洗濯前



洗濯後

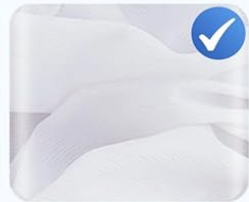

油汚れ

果物の染み

血痕

混合汚れ

## 洗剤投入ケース

・洗剤投入ケース  
・液体洗剤

・液体漂白剤  
・柔軟剤

・粉末合成洗剤  
・粉末漂白剤



※画像はイメージです。

**Figure 5:** Detergent dispenser. This image shows the compartments for liquid detergent, liquid bleach/softener, and powder detergent/powder bleach.

### 4.3 Selecting a Wash Program

Turn the program selection dial to choose one of the 8 available wash courses:

- **Standard:** For everyday cotton items.
- **Quick Wash:** For lightly soiled clothes, shortest 15-minute cycle.
- **Steam Care/Deodorize:** Uses steam to reduce odors and wrinkles.
- **Wool:** Gentle wash for woolens and delicate fabrics.
- **Drum Clean:** For cleaning the washing machine drum.

- **Soft Wash:** For delicate items to prevent shrinkage.
- **Intensive Spin:** For thorough water extraction, reducing drying time.
- **Hot Water Wash:** For stubborn stains, using 60°C water.

## 4.4 Customizing Settings

After selecting a program, you can adjust the following settings:

- **Water Temperature:** Normal, 20°C, 30°C, 40°C, 60°C.
- **Wash Time:** Up to 120 minutes.
- **Rinse Cycles:** 0-4 times.
- **Spin Time:** Up to 12 minutes.
- **Spin Speed:** 0, 400, 600, 800, 1000 RPM.

## 4.5 Starting the Wash Cycle

Press the Start/Pause button to begin the selected wash cycle.



# 高温のスチームウォッシュで 消臭・シワ伸ばし実現!

「洗濯→消臭→シワ取り」が一気に完了!  
忙しい毎日でも清潔さをキープ!



消臭



シワケア

繊維の奥まで浸透し、タバコ・汗臭を徹底消臭! ✓  
洗濯しながらシワを伸ばす! アイロン時間を最大限に削減! ✓  
デリケート素材にも優しい! シャツ・スーツ・ベビー服まで安心! ✓

※画像はイメージです。

**Figure 6:** Steam Wash in action. This image illustrates the high-temperature steam penetrating fabrics for deodorization and wrinkle reduction.

## しっかり脱水コース

脱水回転数を1,000回転までを上がり、部屋干し時間を短縮する可能！



**Figure 7:** Intensive Spin Cycle. This image shows clothes being spun at 1000 RPM for efficient water extraction, reducing drying time.

## 5. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your washing machine.

### 5.1 Cleaning the Drum

Use the dedicated 'Drum Clean' program periodically to prevent mold and detergent residue buildup.



## 槽洗いコース

石けんカスや黒カビを防ぐため、定期的に槽洗いコースで汚れを洗い流し、洗濯槽を清潔に保つ！



**Figure 8:** Drum Cleaning Cycle. This image depicts the drum being thoroughly rinsed to remove soap scum and dirt, maintaining hygiene.

### 5.2 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any residue. Clean the housing of the dispenser as well.

### 5.3 Cleaning the Filter

Regularly check and clean the drain pump filter to prevent blockages and ensure proper drainage.

### 5.4 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and solutions.





Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a wash program.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Level the machine, remove transport bolts, redistribute laundry.
Water leakage	Hoses not connected tightly, drain hose blocked.	Check all hose connections, clear any blockages in the drain hose.
Clothes not clean	Too much laundry, insufficient detergent, wrong program.	Reduce load size, use correct amount of detergent, select appropriate wash program.
Spin cycle not working	Unbalanced load, drain pump filter blocked.	Redistribute laundry, clean drain pump filter.

If the problem persists after trying these solutions, please contact TCL customer support.

## 7. SPECIFICATIONS

Feature	Specification
Brand	TCL
Model	CWD60AW
Washing Capacity	6 kg
Product Dimensions (W x D x H)	600 mm x 480 mm x 865 mm
Product Weight	51 kg
Max Spin Speed	1000 RPM
Operating Noise (Wash)	32 dB
Operating Noise (Spin)	45 dB
Standard Water Usage	50 L
Rated Power Consumption (Wash)	55 W



 <p><b>User Guide</b> <b>TCL 30V 5G</b></p>	<p><a href="#">TCL 30V 5G User Guide</a></p> <p>Comprehensive user guide for the TCL 30V 5G smartphone, covering setup, features, settings, troubleshooting, and specifications. Learn how to use your TCL-T781S or TCL-T781SPP device effectively.</p>
 <p><b>TCL TAB 10L</b> Gen2</p> <p>Quick Start Guide</p>	<p><a href="#">TCL TAB 10L Gen 2 Quick Start Guide</a></p> <p>Get started quickly with the TCL TAB 10L Gen 2. This guide provides essential information for setup, safety, and basic usage of your new TCL tablet.</p>
 <p><b>TCL 60 SE</b> NXTPAPER 5G</p>	<p><a href="#">TCL T521K/T521D NXTPAPER 5G User Manual: Features, Setup, and Troubleshooting</a></p> <p>Comprehensive user manual for TCL T521K, T521D, and TCL 60 SE NXTPAPER 5G smartphones. Covers device overview, setup, features, camera, multimedia, settings, connectivity, ECO design, and troubleshooting.</p>
 <p><b>TCL 605</b></p> <p>Quick Start Guide</p>	<p><a href="#">TCL 605 Quick Start Guide: Setup, Safety, and Specifications</a></p> <p>Comprehensive Quick Start Guide for the TCL 605 smartphone (models T517D/T517F). Learn about setup, safety precautions, battery, charger, radio frequency compliance, SAR information, and warranty.</p>