

[Manuals.plus](#) /

> [TELESIN](#) /

> TELESIN Smartphone Grip Holder with Bluetooth Remote Control User Manual

TELESIN PFK-EU-P1-MP-01-NEW

TELESIN Smartphone Grip Holder with Bluetooth Remote Control

Model: PFK-EU-P1-MP-01-NEW

INTRODUCTION

This user manual provides comprehensive instructions for the TELESIN 3-in-1 Smartphone Grip Holder. This versatile device combines a comfortable grip, an extendable selfie stick, and a stable table stand, enhanced with a detachable Bluetooth remote control. It is designed to transform your smartphone into a more capable camera, offering DSLR-like controls for photography and videography.



Image: The TELESIN Smartphone Camera Grip attached to a smartphone, illustrating its ergonomic design and how it enhances mobile photography.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- TELESIN Smartphone Grip Holder x 1

Note: Additional accessories such as tripods or external lights are not included unless specified.

PRODUCT OVERVIEW AND FEATURES

The TELESIN Smartphone Grip Holder is engineered for enhanced mobile content creation. Its key features include:

- **3-in-1 Functionality:** Functions as a comfortable handheld grip, an extendable selfie stick (up to 30cm), and a stable desktop stand.
- **Bluetooth Remote Control:** Detachable remote with a 10-meter range for stable, hands-free shooting.
- **DSLR-like Controls:** Half-press for autofocus, full press to shoot, and quick double-tap to switch between front and rear cameras.
- **Zoom and Mode Switching:** Joystick for precise zoom control and dedicated buttons for switching between photo, portrait, and video modes.
- **Universal Compatibility:** Compatible with 99% of smartphones, including iPhone and Android models.
- **Compact and Lightweight:** Weighing only 120 grams, it is highly portable and fits easily into bags or pockets.
- **1/4" Screw Mount:** Allows attachment to standard tripods and other camera accessories.

More Features



Hidden Selfie Stick



10-Meter Remote Control



Instant Desktop Stand



Pocket-Sized Gear

Image: Visual representation of the product's versatile features, including its hidden selfie stick, remote control capability, desktop stand function, and compact, pocket-sized design.

Multifunktionaler Kameragriff

Mikroskopisch kleine Aufnahmeerfahrung

Bluetooth-Steuerung auf Systemebene

Sofortiger Moduswechsel

Foto | Porträt | Video

Klassische Half-Shutter-Fokus-Aufnahme und Doppeltippen

Doppeltippen zum Umschalten zwischen vorderer und hinterer Kamera

Schnelles Zoomen mit Hebelbedienung



Image: Diagram highlighting the multifunctional aspects of the camera grip, including instant mode switching, classic half-shutter focus, double-tap for camera swap, and quick zoom with lever operation, all controlled via Bluetooth.

SETUP INSTRUCTIONS

Follow these steps to properly install your smartphone into the grip holder. For safety, it is recommended to use your phone with a protective case.

1. **Open the Clamp:** Pull the phone clamp downwards to open it.
2. **Position Phone:** Ensure the back of your phone is pressed tightly against the device for a secure fit.
3. **Insert Phone:** Place your phone inside the opened clamp.
4. **Secure Phone:** Release the clamp to securely hold your phone.

Installation Instructions

Use with a phone case for safety!



Image: A visual step-by-step guide demonstrating how to install a smartphone into the grip holder, emphasizing pulling the clamp, positioning the phone, inserting it, and securing it for a firm hold.

Bluetooth Pairing

To connect the Bluetooth remote control to your smartphone:

1. Ensure the remote control has power (1 A battery included).
2. Turn on the remote control (if applicable, usually by pressing and holding the shutter button).
3. On your smartphone, go to Bluetooth settings.
4. Search for available devices and select "TELESIN" or a similar device name.
5. Once paired, the remote is ready for use.



Note: For first-time connection with iPhones, special setup may be required. Please refer to the manufacturer's website or contact customer service for detailed instructions if you encounter issues.

OPERATING INSTRUCTIONS

Using the Shutter Button and Controls

Half-press to focus full press to shoot

DSLR-style Shutter Button Turn your phone into a DSLR!

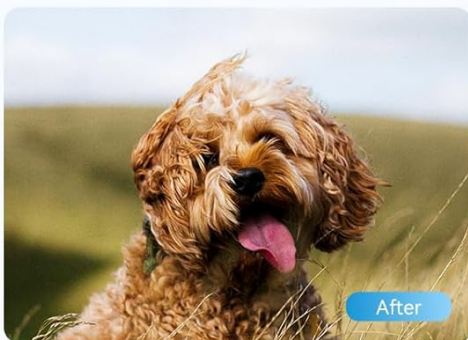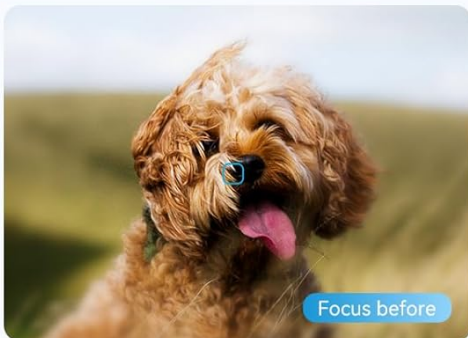

Lightly press the shutter for autofocus. Once focused, press down completely to capture. Quick double-click to switch between front and rear cameras.

Image: Illustration of the DSLR-style shutter button, showing how a half-press activates autofocus and a full press captures the image. Also indicates double-click for camera switching.

- **Autofocus:** Lightly press the main shutter button (half-press) to activate autofocus, similar to a DSLR camera.
- **Capture Photo/Video:** Once focused, press the shutter button down completely to capture a photo or start/stop

video recording.

- **Switch Cameras:** Double-click the shutter button to quickly switch between your smartphone's front and rear cameras.
- **Zoom Control:** Use the joystick or lever switch on the remote to precisely zoom in or out (telephoto or wide-angle mode).
- **Mode Switching:** Use the left/right buttons on the remote to switch between different camera modes such as Photo, Portrait, and Video, compatible with your phone's native camera functions.

One-handed Operation

Telephoto or wide-angle mode



With quick control via a lever switch



Image: Demonstrates one-handed operation, highlighting the lever switch for quick control over telephoto and ultra-wide zoom functions.

Switchable camera modes

Compatible with system camera functions

Photo | Portrait | Video...



Switch modes with
left/right buttons

Image: Illustrates how the left and right buttons on the grip allow users to switch between various camera modes like Photo, Portrait, and Video, integrating seamlessly with the smartphone's native camera app.

Using as a Selfie Stick

The grip features a hidden extendable rod that transforms it into a selfie stick:

- Gently pull the top section of the grip upwards to extend the selfie stick. It can extend up to 30cm.
- Adjust the angle of your phone holder (360° rotation, 180° tilt) for the desired shot.
- Use the Bluetooth remote for convenient hands-free capture.



Image: Depicts the hidden selfie stick functionality, showing its extendable length of 30cm and the ability to adjust the phone horizontally and vertically with 360° rotation and 180° tilt for flexible shooting angles.

Using as a Desktop Stand

The base of the grip can be unfolded to create a stable desktop stand:

- Unfold the bottom section of the grip to form a tripod-like base.
- Place the stand on a flat, stable surface.
- Ideal for video calls, watching content, or stable time-lapse photography.



Image: A composite image showing the TELESIN grip in its three primary modes: as a compact handheld grip, extended as a selfie stick with a smartphone, and folded to serve as a stable desktop stand.

MAINTENANCE

To ensure the longevity and optimal performance of your TELESIN Smartphone Grip Holder, please follow these maintenance guidelines:

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.
- **Storage:** Store the grip in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** The remote control uses 1 A battery. Replace the battery when performance degrades. Ensure correct polarity when inserting.
- **Avoid Water:** This device is not waterproof. Avoid exposure to water or high humidity.
- **Handle with Care:** Avoid dropping the device or subjecting it to strong impacts, which could damage internal components or the mechanical parts.

TROUBLESHOOTING

If you encounter any issues with your TELESIN Smartphone Grip Holder, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|--|--|--|
| Remote control not pairing/connecting. | Battery low or dead; Bluetooth not enabled on phone; remote not in pairing mode; interference. | Replace the battery. Ensure Bluetooth is on and visible. Press and hold the shutter button on the remote to enter pairing mode. Move closer to the phone. |
| Shutter button or zoom not working. | Not properly paired; app compatibility issue; phone settings. | Re-pair the remote. Ensure your phone's camera app is active and supports external controls. Check phone settings for any accessibility or zoom features that might interfere (e.g., screen zoom on iPhone). |
| Difficulty inserting/removing phone. | Phone case too thick; incorrect insertion angle. | Ensure you pull the clamp fully open. Try adjusting the phone's angle. If using a very thick case, it might need to be removed for easier insertion, though a case is recommended for safety. |
| Selfie stick extension is stiff. | Dust or debris; lack of lubrication. | Clean the extending parts with a soft, dry cloth. Do not apply lubricants unless specifically recommended by the manufacturer. |

If the problem persists after trying these solutions, please contact TELESIN customer support for further assistance.

SPECIFICATIONS

| Feature | Detail |
|---------------------------|-------------------------------|
| Model Number | PFK-EU-P1-MP-01-NEW |
| Brand | TELESIN |
| Color | Black + Silver |
| Package Dimensions | 12.8 x 8.4 x 6.5 cm |
| Material | ABS+PC+Aluminum Alloy |
| Shrink Length | 100mm |
| Extended Length | 300mm |
| Clamp Size | 67-95mm |
| Product Weight | 120 ± 5g |
| Battery Capacity (Remote) | 50mAh (1 A battery included) |
| Charging Interface | USB-C |
| Compatible Devices | Smartphones (iPhone, Android) |

Produkt-Abmessungen

| | |
|--|---------------------------|
| Material: ABS+PC+Aluminium ABS+PC+Aluminiumlegierung | |
| Schrumpfung Länge: 100mm | Verlängerte Länge: 300 mm |
| Klemmengröße: 67-95mm Batterie | Produktgewicht: 120±5g |
| Kapazität: 50mAh | Ladeschnittstelle: USB-C |



Image: A detailed diagram illustrating the product's dimensions, including its collapsed length (100mm), extended length (300mm), and clamp size (67-95mm), along with material and weight specifications.

WARRANTY AND SUPPORT

Product Warranty: This TELESIN product comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

Customer Support: For technical assistance, warranty claims, or any questions regarding your TELESIN Smartphone Grip Holder, please contact TELESIN customer support. You can typically find contact information on the official TELESIN website or through the retailer where you purchased the product.

Seller Information: This product is sold by TELESIN Shop.

For more information, visit the official TELESIN store on Amazon: [TELESIN Store](#)

© 2025 TELESIN. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.