

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Juskys](#) /

› [Juskys Fietje Plus Children's Desk - Adjustable Height and Tilt, with 2 Drawers Instruction Manual](#)

Juskys 301452

Juskys Fietje Plus Children's Desk Instruction Manual

Model: 301452

IMPORTANT SAFETY INFORMATION

Warning: This desk must be assembled by an adult. Please read the enclosed instructions carefully. Ensure the desk is stable and that the height and tilt adjustments are used correctly to prevent injuries. The desk has a maximum load capacity of 50 kg.

PRODUCT OVERVIEW

The Juskys Fietje Plus Children's Desk is an ergonomic and versatile workstation designed to grow with your child. It features adjustable height and a tiltable desktop, making it suitable for various activities from drawing to studying. Constructed from robust, scratch-resistant wood, it ensures durability and safety. The desk also includes two practical drawers and an open compartment for organized storage of school supplies and craft materials.

SCRIVANIA FIETJE PLUS

Il compagno perfetto per i bambini



 **JUSKYS**

Image: The Juskys Fietje Plus Children's Desk, shown in a child's room, highlighting its design and suitability for young users. The desk features a white top and natural wood legs, with a child's drawing on the tiltable surface.

DESIGN ADATTO AI BAMBINI

Realizzato in legno



Image: A detailed view of the Juskys Fietje Plus desk, emphasizing its child-friendly design with rounded corners, robust and durable construction, and a scratch-resistant surface for long-lasting use.

SPECIFICATIONS

Brand	Juskys
Model	301452
Color	White, Natural Wood
Product Dimensions (Width x Depth x Height)	93 x 59 x 76 cm
Weight	24 kg
Material	Pine Wood, Engineered Wood (Melamine coated particle board)
Features	Adjustable Height, Tiltable Desktop, Ample Storage, Durable, Scratch-resistant

Drawer Dimensions (each, LxHxD)	23 x 7 x 45 cm
Compartment Dimensions (LxHxD)	27 x 11 x 49 cm
Tilt Angle	Up to 45°
Working Height (4 levels)	54 - 76 cm
Maximum Load Capacity	50 kg

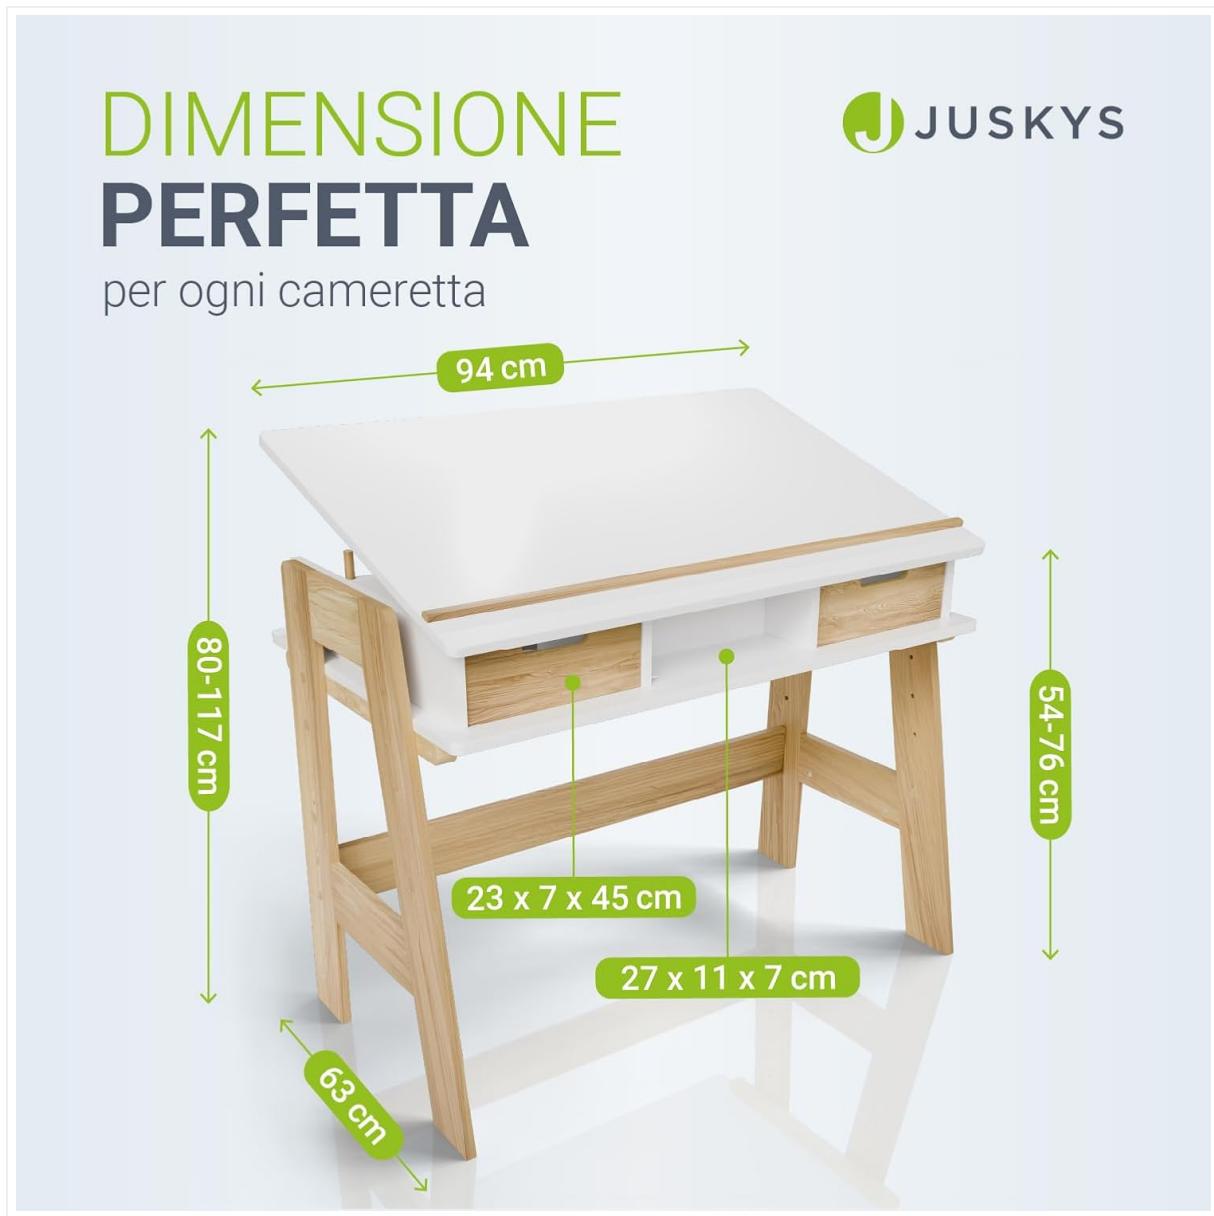


Image: A diagram illustrating the precise dimensions of the Juskys Fietje Plus desk, including overall width (94 cm), depth (63 cm), and adjustable height (54-76 cm working height, 80-117 cm when tilted), along with drawer and compartment sizes.

SETUP AND ASSEMBLY

The Juskys Fietje Plus Children's Desk is delivered as a self-assembly kit. Please ensure all components are present before beginning assembly. An adult must perform the assembly.

- Unpack Components:** Carefully unpack all parts and hardware from the packaging. Verify against the included parts list in the assembly instructions.

2. **Identify Parts:** Familiarize yourself with the different desk components and hardware.
3. **Assemble Frame:** Follow the step-by-step instructions in the provided manual to assemble the main frame of the desk. Ensure all screws and fasteners are tightened securely.
4. **Attach Desktop:** Secure the desktop to the assembled frame. Pay attention to the mechanism for height and tilt adjustment during this step.
5. **Install Drawers:** Assemble and install the two drawers into their designated slots.
6. **Final Check:** Once assembled, ensure the desk is stable and all moving parts (height adjustment, tilt mechanism, drawers) operate smoothly and safely.

Note: The included assembly instructions contain detailed diagrams and steps. Refer to them for precise guidance.

OPERATING INSTRUCTIONS

Adjusting Desk Height

The Juskys Fietje Plus desk features 4 levels of height adjustment, allowing it to adapt as your child grows.

1. **Unlock Adjustment:** Locate the height adjustment mechanism on the desk legs. This typically involves loosening specific fasteners or engaging a lever.
2. **Set Desired Height:** Carefully raise or lower the desktop to one of the four available height settings (54 cm to 76 cm). Ensure both sides are adjusted evenly.
3. **Secure Position:** Once the desired height is reached, securely fasten the adjustment mechanism to lock the desk in place. Verify stability before use.

ALTEZZA REGOLABILE

Cresce con il tuo bambino



Image: The Jusks Fietje Plus desk illustrating its height adjustment feature. An arrow indicates the vertical movement of the desktop, and an inset shows the mechanism on the desk leg for setting one of the four height levels.

Adjusting Desktop Tilt

The desktop can be tilted up to 45° for comfortable drawing, reading, or writing.

1. **Release Lock:** Locate the tilt adjustment mechanism, usually found on the underside or side of the desktop. Release the locking mechanism.
2. **Set Tilt Angle:** Gently lift the front edge of the desktop to the desired angle. The mechanism should allow it to hold in place.
3. **Secure Position:** Ensure the desktop is securely locked at the chosen tilt angle before placing items on it.

FUNZIONE DI INCLINAZIONE

per il massimo comfort



Image: The Juskys Fietje Plus desk demonstrating its tilt function. The desktop is shown raised at an angle, with a checkmark indicating an adjustable tilt up to 45 degrees for ergonomic use.

Using Storage Drawers and Compartment

The desk includes two drawers and a central open compartment for organizing school supplies, art materials, and other items.

- **Drawers:** Use the two pull-out drawers for storing smaller items like pens, pencils, and notebooks.
- **Central Compartment:** The open compartment provides easy access storage for frequently used items or larger supplies.

MOLTO SPAZIO DI ARCHIVIAZIONE

Ampio spazio per articoli scolastici e di bricolage

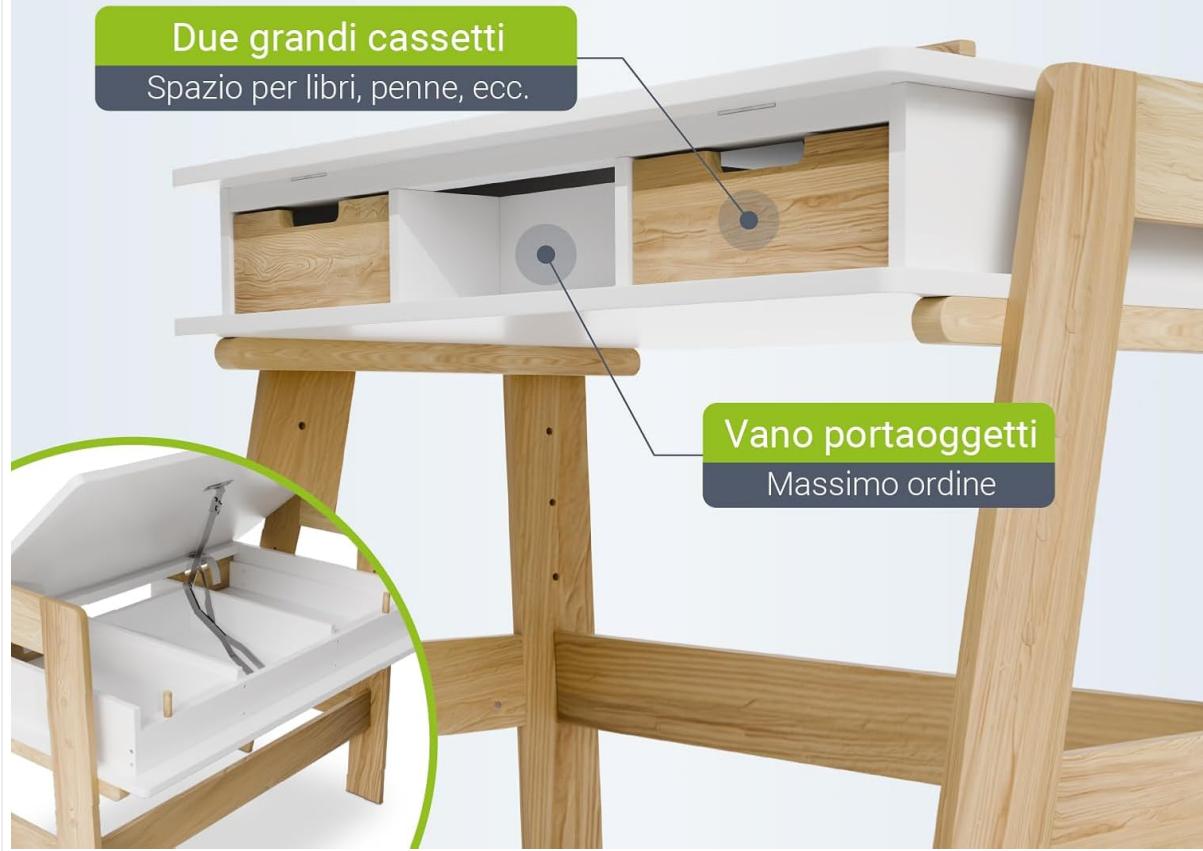


Image: A close-up of the Juskys Fietje Plus desk's storage capabilities, highlighting the two spacious drawers for books and pens, and a central open compartment for maximum organization of school and craft supplies.

MAINTENANCE

To ensure the longevity and appearance of your Juskys Fietje Plus Children's Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe the desk surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood.
- **Protection:** Use placemats or desk pads to protect the surface from scratches, heat, and moisture, especially during art activities.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the wood.

TROUBLESHOOTING

If you encounter any issues with your Juskys Fietje Plus Children's Desk, refer to the following common problems and solutions:

- **Desk is Wobbly:**

- Ensure all assembly screws and fasteners are securely tightened.
- Check that the desk is placed on a flat, even surface.
- Verify that the height adjustment mechanisms on both legs are locked evenly.

- **Desktop Tilt Mechanism Not Holding:**

- Ensure the tilt locking mechanism is fully engaged after setting the desired angle.
- Check for any obstructions or damage to the mechanism.

- **Drawers Stick or Don't Slide Smoothly:**

- Check for any items obstructing the drawer slides.
- Ensure the drawers were assembled correctly and are aligned within their tracks.
- Lightly apply a silicone-based lubricant to the drawer slides if friction persists.

If these steps do not resolve the issue, please contact customer support.

WARRANTY INFORMATION

Please refer to your purchase documentation or the manufacturer's website for detailed warranty information regarding the Juskys Fietje Plus Children's Desk.

CUSTOMER SUPPORT

For further assistance, spare parts, or any questions not covered in this manual, please contact Juskys customer service.

- **Manufacturer:** Juskys
- **Website:** [Visit Juskys Store on Amazon](#)
- **Contact Information:** Please refer to the contact details provided with your purchase or on the official Juskys website.