

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HP](#) /

› [HP Envy TE01-5000t Desktop PC User Manual](#)

## HP TE01-5000t

# HP Envy TE01-5000t Desktop PC

## USER MANUAL

[Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## Introduction

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your HP Envy TE01-5000t Desktop PC. Please read this manual thoroughly before using your new computer to ensure proper functionality and longevity.

## 1. Setup

Follow these steps to set up your HP Envy TE01-5000t Desktop PC.

### 1.1 Unpacking the System

Carefully remove all components from the packaging. Ensure the following items are present:

- HP Envy TE01-5000t Desktop PC
- Wireless Keyboard
- Wireless Mouse
- DKZ USB Port Expander
- Power Cable



Image 1.1: HP Envy TE01-5000t Desktop PC with its wireless keyboard, wireless mouse, and the DKZ USB Port Expander.

## 1.2 Connecting Peripherals

1. **Connect Monitor:** Connect your monitor to the HDMI port on the back of the desktop.
2. **Connect Keyboard and Mouse:** Insert the wireless receiver for the keyboard and mouse into an available USB port on the desktop.
3. **Connect DKZ USB Port Expander:** Plug the DKZ USB Port Expander into an available USB port for additional connectivity.
4. **Connect Power:** Plug the power cable into the desktop's power input and then into a wall outlet.



Image 1.2: Front panel of the HP Envy TE01-5000t Desktop PC, featuring various USB ports, an SD card reader, and audio jacks.



Image 1.3: The DKZ USB Port Expander, an accessory for additional USB connectivity.

### 1.3 Initial Power-On

Press the power button on the front of the desktop. Follow the on-screen instructions to complete the Windows 11 Home setup process.

## 2. Operation

This section covers basic operational aspects of your desktop PC.

### 2.1 Windows 11 Home

Your desktop comes pre-installed with Windows 11 Home. Familiarize yourself with the operating system's interface and features. Microsoft provides extensive online documentation for Windows 11.

### 2.2 Network Connectivity

- **Wi-Fi:** To connect to a wireless network, click the Wi-Fi icon in the taskbar, select your network, and enter the password.
- **Ethernet (RJ-45):** For a wired connection, plug an Ethernet cable into the RJ-45 port on the back of the desktop and connect the other end to your router or modem.

### 2.3 Using USB Ports

The desktop features various USB ports for connecting external devices:

- **USB 3.0 Type-A:** For high-speed data transfer with compatible devices.
- **USB 2.0:** For standard peripherals like keyboards, mice, and printers.
- **USB 3.2 Type-C:** A versatile port for newer devices, supporting data transfer and potentially video output with an adapter.

The included DKZ USB Port Expander provides additional USB ports for convenience.

### 2.4 Audio Connections

The Headphone/Microphone Combo Jack on the front panel allows you to connect a headset for audio input and output.

## 3. Maintenance

---

Proper maintenance ensures the longevity and optimal performance of your desktop PC.

### 3.1 Cleaning

- **Exterior:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to clean the exterior surfaces. Avoid harsh chemicals.
- **Vents:** Regularly check and clean the ventilation openings to prevent dust buildup, which can impede airflow and cause overheating. Use compressed air to gently clear dust.

### 3.2 Software Updates

Keep your operating system and drivers updated. Windows Update automatically manages system updates. Regularly check the HP support website for the latest driver updates for your specific model.

### 3.3 Data Backup

Regularly back up your important data to an external drive or cloud storage to prevent data loss in case of system failure.

## 4. Troubleshooting

---

This section addresses common issues you might encounter.

### 4.1 No Power

- Ensure the power cable is securely connected to both the desktop and the wall outlet.
- Verify the wall outlet is functional by plugging in another device.
- Check the power supply unit (PSU) fan for operation.

### 4.2 No Display

- Confirm the monitor is powered on and the video cable (HDMI) is securely connected to both the desktop and the monitor.
- Try connecting the monitor to a different video port if available, or test with another monitor.

### 4.3 Peripherals Not Responding

- Ensure wireless receivers are properly inserted into USB ports.
- Check battery levels for wireless devices.
- Try connecting the peripheral to a different USB port.

For more complex issues, refer to the HP support website or contact technical support.

## 5. Specifications

---

Component	Detail
Model Name	HP Envy TE01-5000t

Component	Detail
Processor	Intel Core i7-14700 (up to 5.4GHz, 20-Cores, 28-Threads)
Memory (RAM)	16GB DDR4 DIMM
Storage	1TB PCIe NVMe SSD
Graphics	Intel UHD Graphics 770 (Integrated)
Operating System	Windows 11 Home (64-bit)
Power Supply Unit (PSU)	400W
Wireless Connectivity	Wi-Fi 6, Bluetooth 5.3
Wired Connectivity	RJ-45 Ethernet
Video Output	HDMI
USB Ports	2x USB 3.0 Type-A, 4x USB 2.0, 1x USB 3.2 Type-C
Other Ports	SD Reader, Headphone/Microphone Combo Jack
Dimensions (H x W x D)	13.75 x 6.05 x 12.25 inches
Weight	10.1 pounds

## 6. Warranty and Support

### 6.1 Product Warranty

This HP Envy TE01-5000t Desktop PC comes with a 1-year manufacturer warranty provided by GreatPriceTech. Please retain your proof of purchase for warranty claims.

### 6.2 Technical Support

For technical assistance, driver downloads, or further product information, please visit the official HP support website. You can also contact GreatPriceTech for support related to your specific configuration.