

Hisense 32A4NV

Hisense 32A4NV 32-inch Smart Full Array HD VIDAA TV (2025 Model) User Manual

Model: 32A4NV | Brand: Hisense

1. INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your new Hisense 32A4NV 32-inch Smart Full Array HD VIDAA TV (2025 Model). Please read this manual thoroughly before using your television and retain it for future reference.

Key Features:

- **HD Resolution:** Enjoy clear and consistently sharp visuals with a vibrant color spectrum and wide viewing angles.
- **High Contrast:** Experience deep blacks and luminous whites for clear silhouettes and highlights, capturing every scene with intended intensity.
- **Natural Colour Enhancer:** Witness natural scenes with vibrant and lifelike colors, from green grass to blooming wildflowers.
- **Noise Reduction:** Advanced technology scans and filters every frame to reduce graininess, enhancing clarity in both high-speed action and low-light scenes.
- **Depth Enhancer:** Creates lifelike layers and striking details, adding depth to vibrant scenes for a richer viewing experience.

2. WHAT'S INCLUDED

Upon unboxing your Hisense 32A4NV TV, please ensure all the following components are present:

- Hisense 32A4NV Television Unit
- Power Cable
- Remote Control
- User Manual (this document)

- 2 AAAA batteries (for remote control)

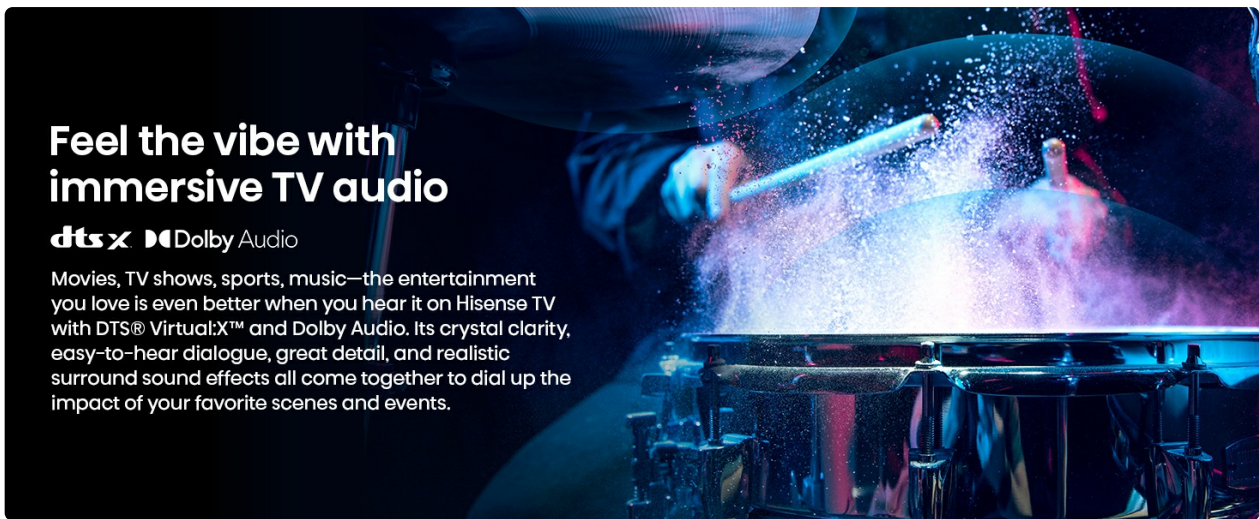 


Image: Hisense 32A4NV TV with included accessories, including the remote control and power cable.

3. SETUP

3.1 Unboxing and Stand Installation

Carefully remove the television from its packaging. It is recommended to have two people for this process to prevent damage. Install the TV stands securely according to the instructions provided in the packaging. Alternatively, the TV supports VESA wall mounting (200 x 200 mm).

Video: An unboxing process for a Hisense TV, demonstrating how to carefully remove the TV from its packaging and prepare it for setup. Note: This video features a 43-inch QLED model, but the unboxing principles apply.

3.2 Connecting Power and Devices

1. Connect the power cable to the TV and then to a power outlet.
2. For external devices (e.g., cable box, gaming console, Blu-ray player), use HDMI cables to connect them to the HDMI ports on the TV. The TV has 2 HDMI ports.
3. For USB devices, connect them to the USB 3.0 port (1 total USB port).
4. Ensure all connections are secure.



Image: Rear view of a Hisense TV highlighting the HDMI and USB connectivity ports for connecting external devices.

3.3 Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process. This includes selecting your language, connecting to a Wi-Fi network, and configuring basic settings. Follow the on-screen prompts.

4. OPERATING INSTRUCTIONS

4.1 Remote Control Usage

The included remote control allows you to navigate the TV's interface, adjust volume, change channels, and access smart features. Insert the provided AAAA batteries into the remote control.

4.2 VIDAA Smart TV Interface

Your Hisense 32A4NV TV runs on the VIDAA operating system, offering a seamless and personalized entertainment experience. Access popular internet applications like Netflix, Hulu, and Amazon Prime Video directly from the home screen.

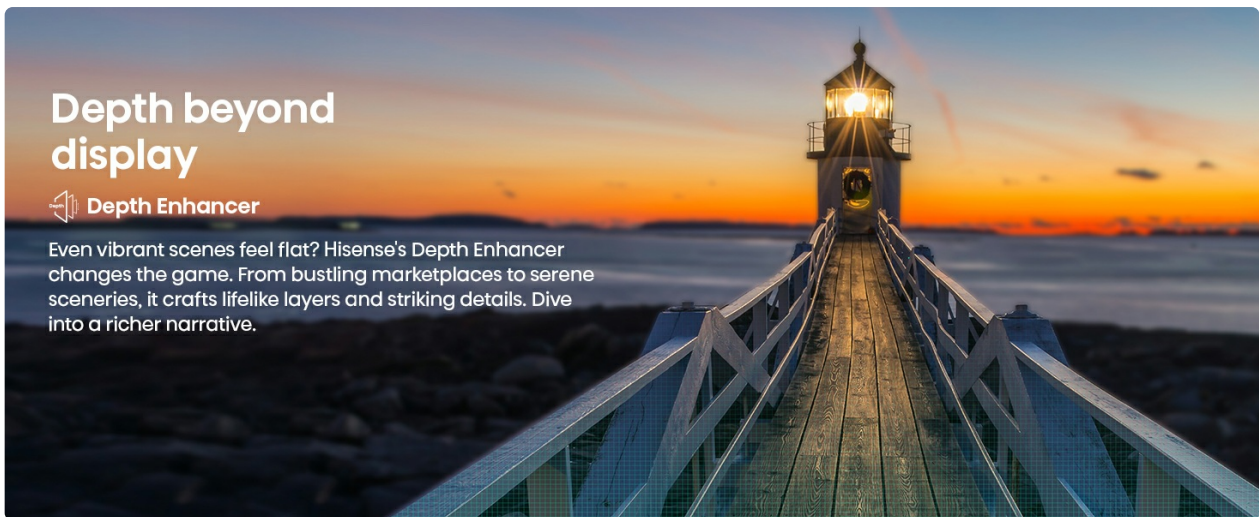 


Image: The home screen of the Hisense VIDAA Smart TV, showcasing a variety of pre-installed streaming applications for easy access to entertainment.

4.3 Picture and Sound Settings

Customize your viewing experience by adjusting picture and sound settings. Navigate to the 'Settings' menu to find options for brightness, contrast, color, and various sound modes (e.g., Standard, Music, Movie). The TV features 2.0 channel speakers with DTS:X sound format for immersive audio.

Easy. Fast. Secure. Global and Local Entertainment.



Welcome to the future of TV! Our state-of-the-art operating system seamlessly unifies your favorite international and local content, tailored to your unique preferences and easy to find. Immerse yourself in a world of endless entertainment, featuring top-rated shows, blockbuster movies, and more - all personalized and conveniently accessible. Upgrade your viewing experience today and take control of your entertainment options!

*The availability of content and applications varies by territory.



Image: A Hisense TV screen displaying vibrant visuals, illustrating the enhanced picture quality and immersive audio capabilities.

4.4 Game Mode

For an optimized gaming experience, activate Game Mode. This feature reduces input lag to 16ms, allowing for precise movements and real-time reactions during gameplay.

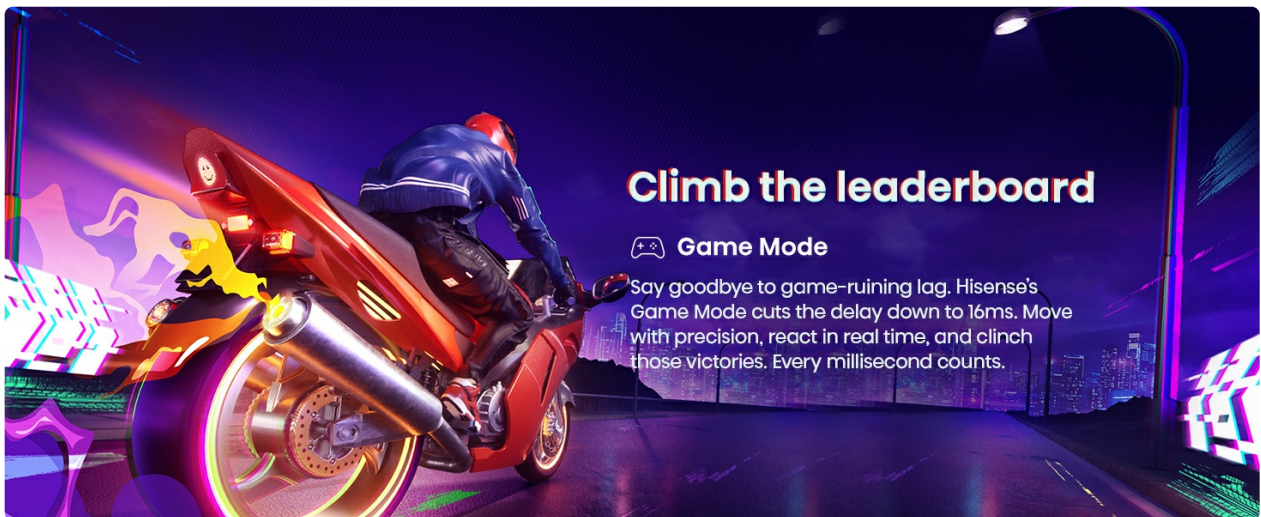 


Image: A Hisense TV displaying a high-speed racing game, demonstrating the benefits of Game Mode for reduced input lag.

5. MAINTENANCE

5.1 Cleaning the Screen

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Avoid using harsh chemicals or abrasive materials.

5.2 General Care

- Keep the TV away from direct sunlight and heat sources.
- Ensure proper ventilation around the TV to prevent overheating.
- Avoid placing heavy objects on top of the TV.
- Do not expose the TV to water or excessive moisture.

6. TROUBLESHOOTING

If you encounter any issues with your TV, refer to the following common troubleshooting steps:

Problem	Possible Solution
No Power	Check if the power cable is securely connected to both the TV and the power outlet. Try a different outlet.
No Picture/Sound	Ensure the correct input source is selected. Check HDMI/AV cable connections. Restart connected devices.
Remote Control Not Working	Replace the batteries (2 AAAA batteries). Ensure there are no obstructions between the remote and the TV's IR sensor.
Network Connection Issues	Check your Wi-Fi router. Reconnect to the Wi-Fi network in the TV's settings. Restart the TV and router.
Poor Picture Quality	Adjust picture settings (brightness, contrast, sharpness). Ensure the input source is providing a high-quality signal.

7. SPECIFICATIONS

Feature	Detail
Model Number	32A4NV
Screen Size	32 Inches
Resolution	1080p (Full HD)
Refresh Rate	60 Hz
Display Technology	LCD with LED Backlight
Operating System	VIDAA
Connectivity Technology	HDMI (2 ports), USB (1 port), Wi-Fi
Audio Output	2.0 channel speakers with DTS:X sound format
Special Features	Chromecast, Noise Reduction, Depth Enhancer, Natural Colour Enhancer, Game Mode
Product Dimensions (D x W x H)	7.8D x 72.2W x 42.6H Centimetres
Item Weight	5 Kilograms
VESA Mount Standard	200 x 200 mm
Color	Black
UPC	888143022284

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Hisense television comes with a **1-year manufacturer's limited warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

8.2 Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official Hisense support website or contact their customer service. Refer to the contact information provided in your product packaging or on the Hisense website.