

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Flamaker](#) /

› [Flamaker 10'x30' Heavy Duty Party Tent Instruction Manual ADL25CNP0083-2](#)

Flamaker ADL25CNP0083-2

Flamaker 10'x30' Heavy Duty Party Tent Instruction Manual

Model: ADL25CNP0083-2

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective assembly, operation, and maintenance of your Flamaker 10'x30' Heavy Duty Party Tent. Please read all instructions carefully before setup and retain this manual for future reference.

The Flamaker 10'x30' Party Tent is designed for temporary outdoor events, offering shelter from sun and light weather conditions. It features a powder-coated steel frame and a UV-resistant Oxford fabric canopy with removable sidewalls.

SAFETY INFORMATION

Important Safety Warnings:

- Always follow assembly and disassembly instructions carefully to prevent injury.
- This tent is intended for use in calm or breezy conditions. **DO NOT use in strong winds, heavy rain, or snow.**
- Always secure the tent base in high winds using appropriate anchoring methods for your ground type.
- Ensure all ropes and fasteners are secure prior to use.
- Avoid using the tent near open flames or heat sources.
- Regularly inspect the tent for any signs of damage or wear. Do not use if damaged.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- Powder-coated steel frame components
- UV-resistant Oxford fabric canopy
- Removable sidewalls (quantity as specified in product details)
- Connectors and joints
- Ground stakes and ropes
- Assembly instructions (this manual)

SETUP INSTRUCTIONS

Assembly typically requires two or more adults. A rubber mallet may be useful for securing connections.

1. **Site Selection:** Choose a level area free from overhead obstructions and sharp objects. Consider wind direction and potential water accumulation.
2. **Unpack Components:** Carefully unpack all frame pieces, connectors, canopy, and sidewalls. Lay them out to identify each part.
3. **Assemble Frame:** Connect the steel poles using the provided plastic joints. Ensure all connections are fully seated and secure. Refer to the included diagram for the correct frame structure.
4. **Attach Canopy:** Drape the main canopy fabric over the assembled frame. Secure it to the frame according to the design, ensuring a snug fit.
5. **Install Sidewalls:** Attach the removable sidewalls to the frame using the integrated fasteners (e.g., Velcro, ties). The tent includes 6 windowed walls and 2 zippered doors.
6. **Secure the Tent:**
 - **Hard Ground (e.g., Concrete/Tile):** Ground stakes are not usable. Place at least 20 lbs of weight on each tent leg (e.g., sandbags, blocks, or other heavy items). Ensure the tent does not move or shake.
 - **Soft Ground (e.g., Grass/Soil):** Insert ground stakes into marked holes as shown in the diagram. Tighten ropes at a 45° angle to the ground.
7. **Final Check:** Verify all connections are secure, the canopy is taut, and the tent is properly anchored.



Figure 1: Exploded view showing the tent frame, canopy, and removable sidewalls.



Arched window



Double reinforced



Ground Nails

Figure 2: Detail of arched windows, double reinforced base, and ground nails for securing the tent.

Tent Wind Resistance Reminder

Please follow the correct fixing method based on ground type to ensure safety.



Scenario 1:

Hard Ground Installation (e.g. Concrete / Tile)

✘ Ground stakes are not usable on hard surfaces.



- 📦 Place at least 20 lbs of weight on each tent leg.
- 💡 Use sandbags, blocks, or other heavy items.
- ✅ Make sure the tent does not move or shake.



Scenario 2:

Soft Ground Installation (e.g. Grass / Soil)

✂️ Ground stakes and ropes must be used.



- 🚩 Insert stakes into marked holes as shown.
- 🔧 Tighten ropes at a 45° angle to the ground.
- 🌿 Wind resistance: up to 50 km/h (Level 5–6)

Wind tunnel tested

Additional Reminders:

Avoid using the tent in storm conditions.

Verify all ropes/fasteners are secure pre-use.



Need Help?

Feel free to contact support

Figure 3: Important reminder on securing the tent based on ground type to ensure wind resistance.

OPERATING INSTRUCTIONS

Your Flamaker Party Tent is designed for versatility and ease of use for various outdoor events.

- **Capacity:** The 10'x30' footprint can accommodate up to 50 guests, making it suitable for intimate gatherings or larger celebrations.
- **UV Protection:** The Oxford fabric canopy provides UPF 80+ UV protection, blocking approximately 80% of harmful UV radiation.
- **Weather Resistance:** The thickened waterproof polyethylene canopy and rust-resistant powder-coated steel frame offer resistance against light rain and wind. However, it is crucial to adhere to the safety warnings regarding strong weather conditions.
- **Removable Sidewalls:** The tent features removable sidewalls and zippered doors, allowing for flexible configurations to suit your event's needs and weather conditions.
- **Entry and Exit:** Utilize the easy-access zippered entry points for convenient guest flow.



Figure 4: The tent configured for an outdoor event, showcasing its spacious interior.



Figure 5: The tent used for an evening event, demonstrating its adaptability to different settings.

MAINTENANCE

Proper maintenance will extend the lifespan of your party tent.

- **Cleaning:** Clean the canopy and sidewalls with mild soap and water. Avoid harsh chemicals or abrasive cleaners, which can damage the fabric's protective coating. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Wipe down the steel frame with a damp cloth to remove dirt. Inspect the powder coating for any chips or scratches and touch up with rust-inhibiting paint if necessary to prevent corrosion.
- **Storage:** Disassemble the tent and store all components in a dry, cool place away from direct sunlight when not in use. Ensure the fabric is completely dry to prevent mold and mildew.
- **Inspection:** Before each use, inspect all poles, connectors, fabric, ropes, and stakes for damage, wear, or corrosion. Replace any compromised parts immediately.

TROUBLESHOOTING

This section addresses common issues you might encounter with your party tent.

Issue: Tent instability or collapse in windy conditions.

Solution: This tent is not designed for strong winds. Ensure the tent is properly anchored according to the ground type (Figure 3). For hard surfaces, use at least 20 lbs of weight per leg. For soft ground, use ground stakes and ropes tightened at a 45° angle. If winds are expected to be strong, it is recommended to disassemble the tent to prevent damage or injury.

Issue: Water pooling on the canopy.

Solution: Water pooling can occur if the canopy is not taut or if there is excessive rainfall. Ensure the canopy is stretched tightly over the frame during assembly. Regularly check for water accumulation and gently push it off from underneath to prevent damage to the canopy or frame.

Issue: Difficulty connecting frame poles.

Solution: Some connections may require a firm push. A rubber mallet can be used to gently tap poles into connectors, ensuring they are fully seated. Avoid excessive force that could damage components.

Issue: Fabric tearing or damage.

Solution: Inspect the fabric for tears or damage upon receipt and before each use. Avoid dragging the fabric over rough surfaces during assembly. Ensure the frame is smooth and free of sharp edges that could snag the canopy. If minor tears occur, repair kits may be available, or contact customer support for replacement parts.

SPECIFICATIONS

Brand	Flamaker
Model Number	ADL25CNP0083-2
Product Dimensions	30' L x 10' W x 8.5' H (120"L x 120"W x 102"H)
Floor Area	300 Square Feet
Item Weight	52 Pounds
Frame Material	Powder-coated steel
Canopy Material	UV-resistant Oxford fabric (Thickened waterproof polyethylene)
Water Resistance Level	Waterproof
Ultraviolet Light Protection	Yes (Blocks 80% UV rays, UPF 80+)
Color	White
Assembly Required	Yes

Product Size



wedding



BBQ



Party



Figure 6: Product dimensions and typical usage scenarios.

WARRANTY INFORMATION

Specific warranty details for the Flamaker 10'x30' Heavy Duty Party Tent are not provided in the product description. For information regarding warranty coverage, terms, and conditions, please contact Flamaker customer support directly.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Flamaker customer support.

- **Manufacturer:** Flamaker
- **Contact:** Refer to the product packaging or the Flamaker official website for the most current customer service contact information.



© 2025 Flamaker. All rights reserved.