

- Manuals.plus /
- › CHOEZON /
- › CHOEZON 47.2" Long Console Table (Model MXG03BB) Instruction Manual

CHOEZON MXG03BB

CHOEZON 47.2" Long Console Table (Model MXG03BB)
Instruction Manual

Model: MXG03BB | Brand: CHOEZON

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your CHOEZON 47.2" Long Console Table, Model MXG03BB. This versatile and minimalist 2-tier table is designed for use in entryways, hallways, or behind sofas, offering both storage and decorative display space. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation. Keep this manual for future reference.



Image 1.1: The CHOEZON 47.2" Long Console Table, showcasing its minimalist design.

2. SAFETY INFORMATION

WARNING: To prevent serious injury, always follow these safety guidelines.

- Always secure the table to the wall using the provided anti-tip kit to prevent tipping. This is crucial for stability and safety, especially in households with children or pets.
- Do not place heavy items on the table if it is not properly secured to the wall.
- Always assemble and install the table strictly according to the provided instructions. Deviations may compromise stability and safety.
- Ensure all screws and fasteners are tightened securely before use. Periodically check and re-tighten as necessary.
- Do not stand or sit on the table. It is designed for display and storage purposes only.
- Keep small parts and assembly tools away from children during assembly.

Anti-Tip Feature

Ensure secure daily use.



Image 2.1: Detail of the anti-tip kit installation, essential for securing the table to the wall.

3. SETUP AND ASSEMBLY

The CHOEZON Console Table is designed for straightforward assembly. All necessary parts are clearly numbered, and an illustrated assembly guide is included. The required installation tools are also provided.

3.1 Unpacking and Part Identification

1. Carefully open the packaging and remove all components.
2. Lay out all parts on a clean, soft surface (e.g., a blanket or carpet) to prevent scratches.
3. Refer to the included parts list in the assembly guide to identify and verify all components and hardware. Contact customer support immediately if any parts are missing or damaged.

3.2 Assembly Steps

Follow the step-by-step illustrated instructions provided in the separate assembly guide. General steps typically include:

- Attaching the side panels to the top panel.
- Securing the bottom shelf to the side panels.
- Ensuring all connections are tight and stable.
- Installing the EVA foot pads to protect your floor and enhance stability.
- **Crucially, install the anti-tip kit as instructed to secure the table to a wall.**

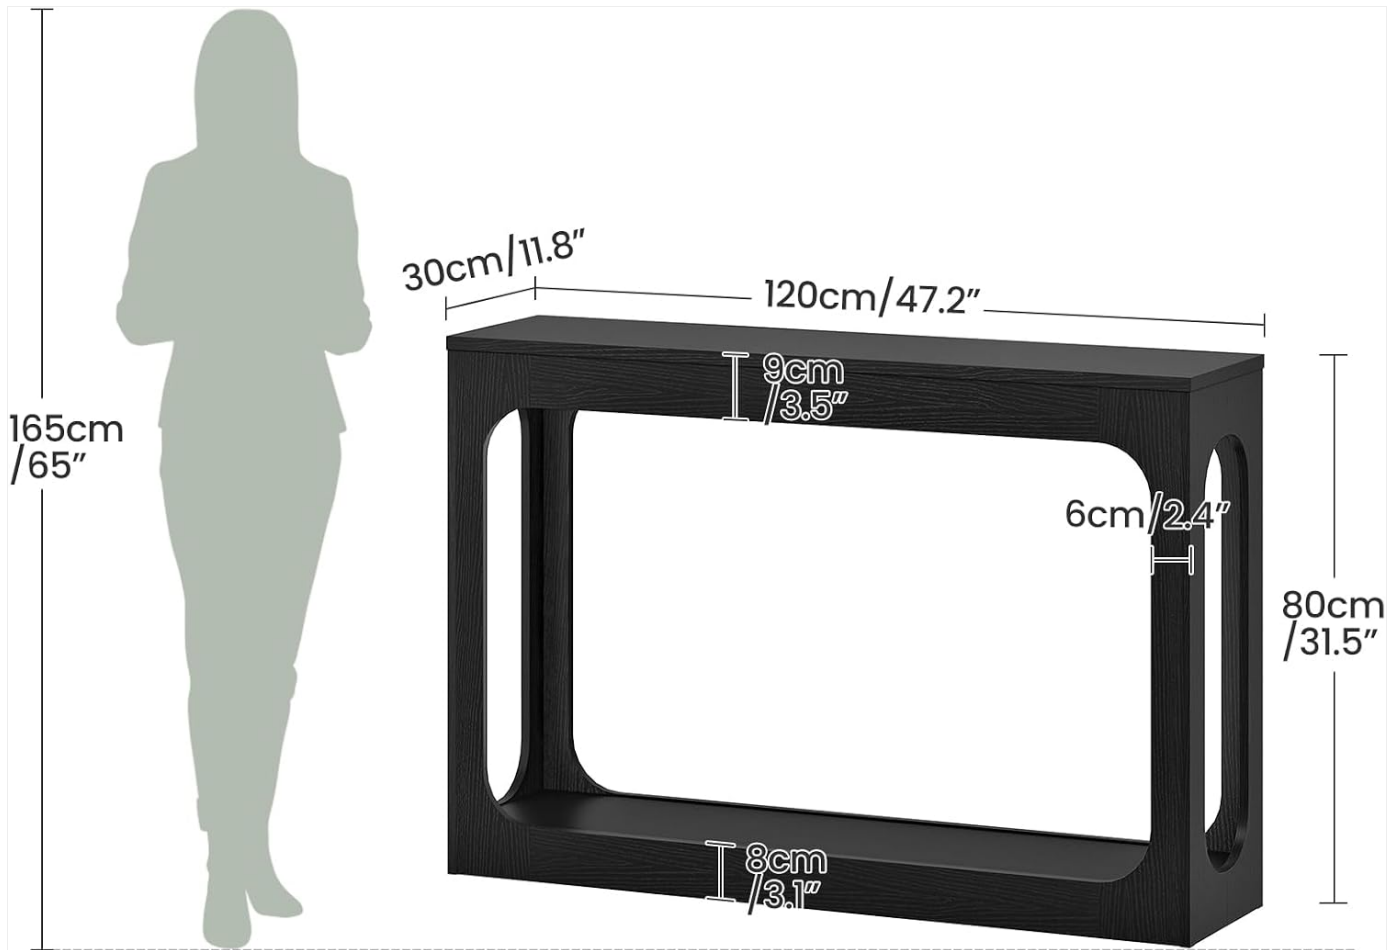


Image 3.1: Dimensional diagram of the console table, useful for planning placement during setup.

Your browser does not support the video tag.

Video 3.1: Official product video demonstrating the console table's features and potential placement. This video is 10 seconds long and provides a quick overview.

4. OPERATING INSTRUCTIONS

The CHOEZON Console Table is designed for versatile use in various areas of your home.

4.1 Placement and Functionality

- **Entryway:** Use as a key station or a welcoming display for decorative items, small plants, or a catch-all for mail.
- **Living Room:** Position behind a sofa to hold lamps, books, or beverages. The two tiers provide ample space for organization and decor.
- **Hallway/Corridor:** Ideal for adding visual interest and functional storage in narrow spaces. Display art pieces, flowers, or greenery.

4.2 Storage and Display

- The **upper layer** is suitable for lighter decorative items such as vases, photo frames, small plants, or personal

essentials.

- The **lower layer** can accommodate larger items like storage baskets, books, or other decorative accents, maximizing space utilization.



Image 4.1: The console table positioned behind a sofa, demonstrating its use as a functional and decorative piece.



Image 4.2: The console table in an entryway, showcasing its use for displaying items and enhancing decor.

5. MAINTENANCE

Proper care will ensure the longevity and appearance of your CHOEZON Console Table.

- **Cleaning:** Wipe the table surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood.
- **Protection:** Use coasters under drinks and placemats under hot items to protect the surface from heat and moisture rings.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration over time.
- **Stability Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary to maintain structural integrity.

6. TROUBLESHOOTING

If you encounter any issues with your console table, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Table is wobbly or unstable.	Loose fasteners; uneven floor; anti-tip kit not installed.	Ensure all screws are tightened. Adjust EVA foot pads if applicable. Install the anti-tip kit to secure the table to the wall. Place on a level surface.
Missing parts or damaged components upon arrival.	Packaging error or shipping damage.	Do not proceed with assembly. Contact CHOEZON customer support immediately with your order details and a description of the issue.
Difficulty during assembly.	Misinterpretation of instructions; incorrect part orientation.	Review the assembly guide carefully, paying close attention to diagrams. Ensure parts are oriented correctly before tightening. Do not force parts together.

7. SPECIFICATIONS

Feature	Detail
Brand	CHOEZON
Model Number	MXG03BB
Product Dimensions (D x W x H)	11.8"D x 47.2"W x 31.5"H (30cm D x 120cm W x 80cm H)
Material Type	Engineered Wood
Color	Black
Shape	Rectangular
Table Design	Console Table
Style Name	Minimalist
Included Components	Accessory Kit, Assembly Guide, Console Table
Required Assembly	Yes
Indoor/Outdoor Usage	Indoor

8. WARRANTY AND SUPPORT

For warranty information, product support, or to report missing/damaged parts, please contact CHOEZON customer service directly. Refer to your purchase documentation or the seller's platform for specific contact details and warranty terms.

When contacting support, please have your model number (MXG03BB) and purchase date readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F37NW3LV>

More documents and user manuals: <https://manuals.plus/>