

[Manuals.plus](#) /

› [Ortizan](#) /

› Ortizan X10 Wireless Portable Bluetooth Speaker User Manual

Ortizan X10

Ortizan X10 Wireless Portable Bluetooth Speaker User Manual

Model: X10 | Brand: Ortizan

INTRODUCTION

Thank you for choosing the Ortizan X10 Wireless Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly to ensure optimal performance and longevity of your device.



The Ortizan X10 speaker, showcasing its compact and portable design.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 × Ortizan X10 Bluetooth Speaker
- 1 × USB-C Charging Cable
- 1 × AUX Audio Cable
- 1 × Carabiner Strap
- 1 × User Manual (this document)


PRODUCT OVERVIEW

Buttons and Ports

VERSATILE INPUT MODES



POWERFUL BASS PERFORMANCE

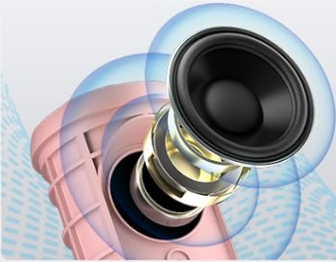

BLUETOOTH 5.3 TECHNOLOGY IN ACTION



Overview of the speaker's control panel and input options.

1. **Power Button:** Press and hold to power on/off. Short press to play/pause.
2. **Volume Up / Next Track:** Short press for volume up. Long press for next track.
3. **Volume Down / Previous Track:** Short press for volume down. Long press for previous track.
4. **Mode Button (M):** Short press to switch between Bluetooth, AUX, and TF Card modes.
5. **EQ Button:** Short press to cycle through EQ sound modes (Vocal, 3D Deep Bass, Extra Bass). Double click to toggle party lights on/off.
6. **Call Button:** Short press to answer/end calls. Long press to reject calls. Double press to redial last number.
7. **USB-C Charging Port:** For charging the speaker.
8. **TF Card Slot:** For playing music directly from a Micro SD/TF card (up to 32GB).
9. **AUX-in Port:** For wired connection to audio devices.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C cable to the speaker's charging port and a 5V/1A power adapter (not included). The charging indicator light will show charging status and turn off when fully charged.

2. Power On/Off

- **To Power On:** Press and hold the Power button for 2-3 seconds. You will hear an audible prompt and the LED indicator will light up.
- **To Power Off:** Press and hold the Power button for 2-3 seconds. You will hear an audible prompt and the LED indicator will turn off.

3. Bluetooth Pairing

The speaker will automatically enter Bluetooth pairing mode when powered on for the first time or if no device is connected. The Bluetooth indicator will flash blue.

1. Ensure the speaker is powered on and in Bluetooth pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Ortizan X10" from the list.
4. Once connected, the Bluetooth indicator will turn solid blue, and you will hear a confirmation tone.

4. True Wireless Stereo (TWS) Pairing

Connect two Ortizan X10 speakers for an enhanced stereo sound experience.

Two Channel Stereo Surround

Truly Enjoy The Surround Sound Of The Cinema



Two Ortizan X10 speakers set up for wireless stereo pairing.

1. Ensure both Ortizan X10 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press the Power button twice quickly. The speaker will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. You will hear a confirmation tone once paired.
4. Now, connect your device to the primary speaker via Bluetooth as described in step 3.

5. AUX Mode

Use the provided AUX cable to connect the speaker to devices without Bluetooth capability.

1. Connect one end of the AUX cable to the speaker's AUX-in port.
2. Connect the other end to the audio output of your device.
3. The speaker will automatically switch to AUX mode, or you can press the 'M' button to select AUX mode.

6. TF Card Mode

Play music directly from a Micro SD/TF card.

1. Insert a Micro SD/TF card (up to 32GB, formatted to FAT32) with MP3 audio files into the TF card slot.
2. The speaker will automatically switch to TF Card mode and begin playing music, or you can press the 'M' button to select TF Card mode.

OPERATING INSTRUCTIONS

1. Music Playback


- **Play/Pause:** Short press the Power button.
- **Volume Up:** Short press the '+' button.
- **Volume Down:** Short press the '-' button.
- **Next Track:** Long press the '+' button.
- **Previous Track:** Long press the '-' button.

2. Call Functions (Bluetooth Mode Only)

- **Answer/End Call:** Short press the Call button.
- **Reject Call:** Long press the Call button.
- **Redial Last Number:** Double press the Call button.

3. Light Modes

The speaker features dynamic RGB lights that sync with the music.

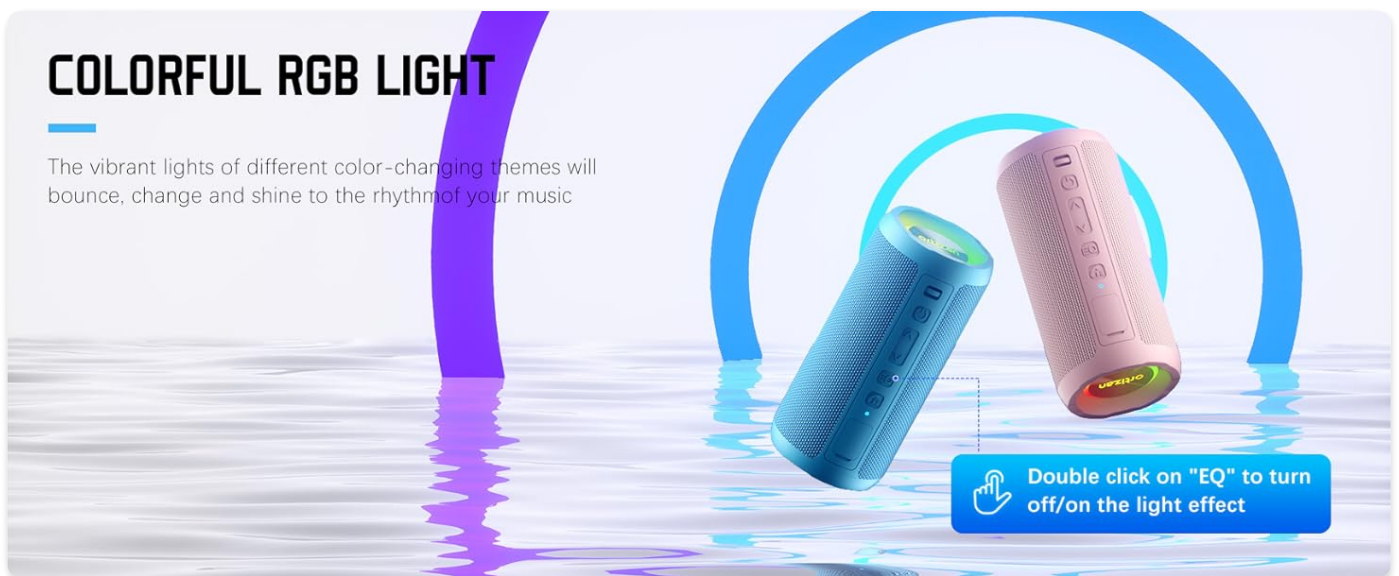

The Ortizan X10 speaker displaying its vibrant RGB lighting effects.


- **Toggle Lights On/Off:** Double click the EQ button.

4. EQ Modes

Adjust the sound profile to your preference.

3 EQ MODES

Clicking on the 'EQ' button switches the equaliser to Vocal, 3D Deep Bass and Extra BASS. The highs are really loud and clear, the mids are warm and the lows are deep.

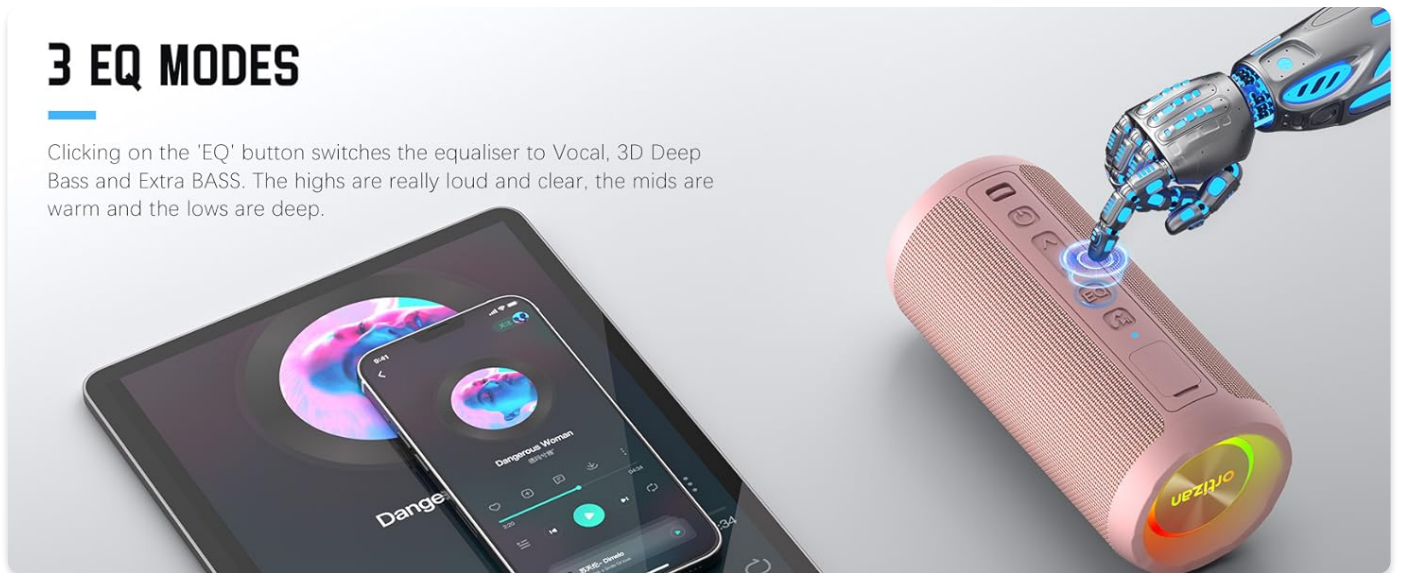

The EQ button on the Ortizan X10 speaker, used for changing sound modes.

- **Cycle EQ Modes:** Short press the EQ button to switch between Vocal, 3D Deep Bass, and Extra Bass modes.

MAINTENANCE

1. Waterproof Care (IPX7)

The Ortizan X10 speaker is IPX7 waterproof, meaning it can be submerged in water up to 1 meter (3.3 feet) for 30 minutes. To maintain its waterproof integrity:

Rain. Pool. Beer. Still Playing

IPX7 = 1 Meter Under for 30 Min



The Ortizan X10 speaker submerged in water, highlighting its IPX7 waterproof capability.

- Ensure the charging port and AUX-in port covers are securely closed before exposing the speaker to water.
- Do not expose the speaker to saltwater or other chemicals, as this may damage the seals.
- After exposure to water, especially chlorinated or saltwater, rinse the speaker with fresh water and dry it thoroughly before charging or using the ports.

2. Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.

3. Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to approximately 50% every few months to prolong battery life.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing blue LED). Turn off Bluetooth on your device and turn it back on. Forget "Ortizan X10" from your device's Bluetooth list and try pairing again. Ensure no other devices are connected to the speaker.
No sound or low volume.	Increase the volume on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, TF Card) is selected. Check if the speaker is muted.
TWS pairing fails.	Ensure both speakers are Ortizan X10 models and are not connected to any other Bluetooth device. Try resetting both speakers and repeating the TWS pairing steps.
Party lights not working.	Double click the EQ button to toggle the lights on/off.

SPECIFICATIONS

Feature	Detail
Model Name	X10
Speaker Maximum Output Power	24W RMS (30W Peak)
Connectivity Technology	Bluetooth 5.3, AUX, TF Card
Bluetooth Range	Up to 66 feet (20 meters)
Water Resistance Level	IPX7 (Waterproof)
Battery Life	Up to 30 hours (at 30% volume)
Battery Capacity	2600mAh
Charging Time	Approximately 3 hours
Dimensions (D x W x H)	3.11" x 3.11" x 6.69" (7.9cm x 7.9cm x 17cm)
Weight	0.45 Kilograms
Material	Acrylonitrile Butadiene Styrene (ABS), Aluminum
Additional Features	Built-in Microphone, 7-Color Dynamic RGB Lights, 3 EQ Modes, True Wireless Stereo (TWS) Pairing

OFFICIAL PRODUCT VIDEOS

Ortizan X10 Speaker Features Overview

This video provides a visual overview of the Ortizan X10 speaker's key features, including its sound quality, waterproof design, and light effects.

WARRANTY AND SUPPORT

Warranty Information

The Ortizan X10 Wireless Portable Bluetooth Speaker comes with a **1-Year Manufacturer's Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support

For technical support, warranty claims, or any questions regarding your Ortizan X10 speaker, please contact Ortizan customer service through the retailer's platform or visit the official Ortizan website for contact information.