



Manuals.plus /

› **STORAGE MANIAC /**

› STORAGE MANIAC Collapsible Laundry Cart with Wheels (Model B0F37QGY69) Instruction Manual

STORAGE MANIAC B0F37QGY69

STORAGE MANIAC Collapsible Laundry Cart with Wheels

INSTRUCTION MANUAL - MODEL B0F37QGY69

1. INTRODUCTION

Thank you for choosing the STORAGE MANIAC Collapsible Laundry Cart with Wheels. This manual provides essential information for the safe assembly, operation, and maintenance of your new laundry cart. Please read these instructions carefully before use and retain them for future reference.

This laundry cart is designed to simplify laundry tasks by offering a portable and spacious solution for collecting, transporting, and organizing clothes. Its collapsible design allows for convenient storage in narrow spaces when not in use.

2. SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight capacity of 22 lbs (10 kg) for the upper basket and 11 lbs (5 kg) for the lower basket.
- Keep hands and fingers clear of moving parts, especially during folding and unfolding.
- Do not allow children to play with or climb on the laundry cart.
- Use the cart on flat, stable surfaces. Engage wheel brakes when the cart needs to remain stationary.
- Avoid exposing the canvas liner to open flames or excessive heat.

3. PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly. Each piece is typically labeled with a letter for easy identification.

- X-frame steel structure (pre-assembled folding mechanism)
- Upper canvas liner with side pocket
- Lower canvas basket

- Four (4) swivel wheels (two with brakes)
- Assembly hardware (screws, wrench if needed)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. Follow these steps:

1. **Unfold the Frame:** Carefully unfold the X-frame steel structure until it forms a stable base. Ensure the locking mechanisms (if any) click into place.
2. **Attach the Wheels:** Insert the four swivel wheels into the designated holes at the bottom of the frame legs. Two of these wheels have brakes. Ensure they are securely fastened.
3. **Install the Upper Canvas Liner:** Drape the upper canvas liner over the top frame. Secure it by fastening any provided straps, buttons, or clips to the frame. Ensure the side pocket is positioned as desired.
4. **Install the Lower Canvas Basket:** Place the lower canvas basket onto the bottom support bars of the frame. Secure it in place using any provided fasteners.



Figure 1: Fully assembled laundry cart.



Figure 2: Laundry cart in use (left) and folded for compact storage (right).

5. OPERATING INSTRUCTIONS

5.1. Loading the Cart

Place dirty laundry into the upper canvas liner. The side pocket can be used for small items like laundry clips or delicates. The lower basket provides additional storage for folded clothes, towels, or laundry supplies.

5.2. Moving the Cart

To move the cart, ensure the brakes on the two locking wheels are disengaged. Grip the metal handle and push or pull the cart to your desired location. The 360° swivel casters allow for easy maneuverability.



Easy to Move & Lock

Convenient for indoor or outdoor use

360° Rotation
Wheels
2 Wheels with Brakes



Figure 3: Detail of the 360° rotation wheels, including two with locking brakes.

5.3. Locking the Wheels

To keep the cart stationary, push down the levers on the two braked wheels until they lock. To unlock, lift the levers.

5.4. Folding for Storage

To fold the cart, remove all contents from both baskets. Disengage any frame locks, then gently push the sides of the X-frame together until the cart collapses into a flat profile. This allows for compact storage in narrow spaces.

6. MAINTENANCE

6.1. Cleaning the Canvas Liner

The canvas liner is machine washable. Remove it from the frame before washing. Use a mild detergent and follow the care instructions on the fabric label. Air dry or tumble dry on low heat.



Figure 4: Detail of the durable, washable canvas fabric.

6.2. Frame and Wheels

Wipe the steel frame with a damp cloth as needed. Periodically check the wheels for any debris or lint that might hinder smooth rolling. Clean as necessary.

7. TROUBLESHOOTING

- **Cart does not roll smoothly:** Check wheels for tangled hair or debris. Ensure brakes are disengaged.
- **Cart feels unstable:** Verify that the X-frame is fully extended and all connections are secure. Do not overload the baskets.
- **Difficulty folding/unfolding:** Ensure no items are obstructing the frame's movement. Apply gentle, even pressure.

8. SPECIFICATIONS

Feature	Specification
Product Dimensions (Assembled)	24.2"L x 16.1"W x 31.5"H
Folded Dimensions	Approx. 16.1"W x 5.5"D x 39"H (based on visual reference)
Capacity (Upper Basket)	65L / 17 Gallons (Max 22 lbs / 10 kg)
Capacity (Lower Basket)	Max 11 lbs / 5 kg
Material	Alloy Steel Frame, Canvas Liner
Color	Beige
Wheels	4 x 360° Swivel Casters (2 with brakes)



Figure 5: Detailed dimensions of the laundry cart.



Figure 6: Illustration of maximum weight capacities for each basket.

9. WARRANTY AND SUPPORT

STORAGE MANIAC products are manufactured with quality and durability in mind. If you encounter any issues with your laundry cart, or if you have questions regarding assembly or operation, please contact our customer support team.

For assistance, please send your question via email. Our team aims to provide a professional solution within 24 hours.

Please refer to your purchase documentation for specific warranty terms and contact information.