

MAHANCRIS TVBK140E01

MAHANCRIS TV Stand Model TVBK140E01 User Manual

Comprehensive Guide for Assembly, Setup, and Maintenance

1. INTRODUCTION

Thank you for choosing the MAHANCRIS TV Stand Model TVBK140E01. This manual provides essential information for the safe and correct assembly, installation, operation, and maintenance of your new TV stand. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image 1.1: Fully assembled MAHANCRIS TV Stand Model TVBK140E01, showcasing its design with a television, gaming controllers, and decorative elements. The stand features open shelving, fabric drawers, and integrated LED lighting.

2. SAFETY INFORMATION

To ensure safe use and prevent damage, please observe the following safety guidelines:

- **Weight Limit:** Do not exceed a total weight limit of 110 lb (50 kg) on the TV stand. Distribute weight evenly.
- **Sharp Edges:** Exercise caution around sharp edges during assembly and handling to prevent injury.
- **Stability:** Ensure the stand is placed on a flat, stable surface to prevent tipping.
- **Children and Pets:** Keep small parts and packaging materials away from children and pets. Do not allow children to climb on the stand.
- **Power Connection:** Only connect the power cord to a properly grounded electrical outlet. Do not overload the integrated power outlets.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

3.1. Components List

- Top Panel
- Side Panels (Left & Right)
- Middle Shelf Panels
- Bottom Panel
- Back Support Bars
- Metal Frame Legs
- Fabric Drawers (Quantity: 4)
- LED Light Strip with Power Cord
- Integrated Power Outlet Unit (with AC outlets and USB ports)
- Game Controller Stands (Quantity: 2)
- Assembly Hardware (Screws, bolts, cam locks, dowels, drawer slides, etc.)
- Assembly Tools (Hex key, screwdriver)

3.2. Product Dimensions

Refer to the diagram below for the overall dimensions of the TV stand and its internal compartments.

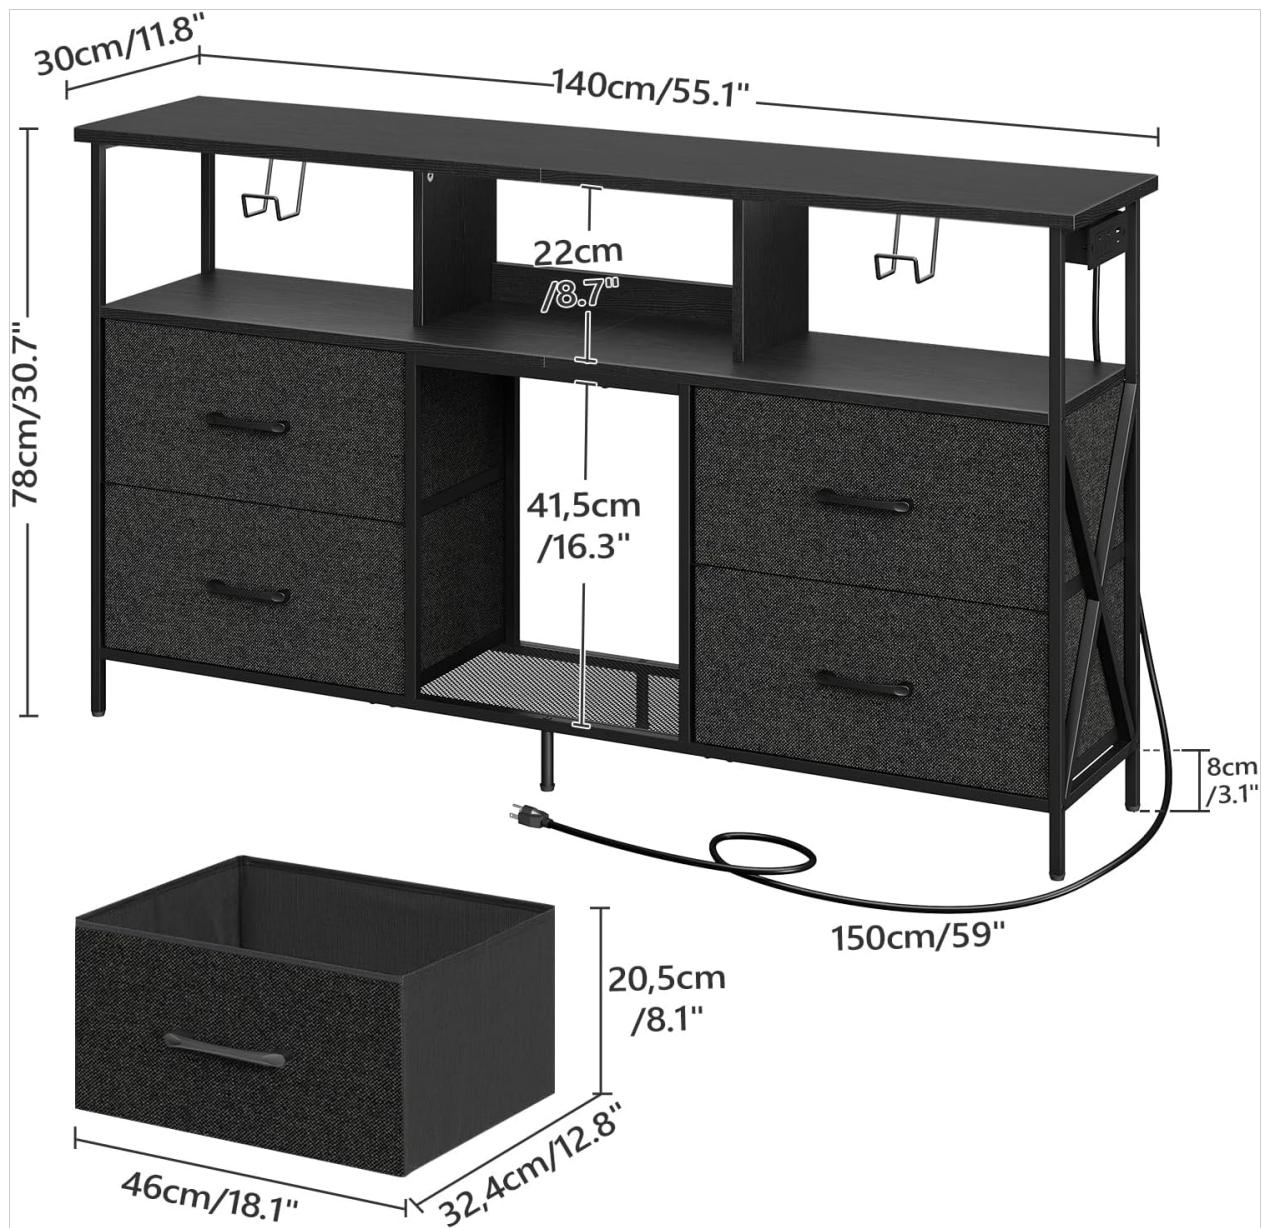


Image 3.1: Detailed dimensional drawing of the TV stand, indicating a total width of 140cm (55.1"), height of 78cm (30.7"), and depth of 30cm (11.8"). Individual shelf and drawer dimensions are also provided.

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults and approximately 1-2 hours. Follow the steps precisely. All hardware components are labeled alphabetically; do not remove labels until the part is used.

- 1. Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Identify each part using the provided labels and the component list.
- 2. Assemble the Metal Frame:** Connect the metal frame legs and support bars according to the diagrams in your separate assembly booklet. Ensure all screws are tightened securely.
- 3. Attach Side and Bottom Panels:** Secure the wooden side panels and bottom panel to the metal frame using the designated hardware.
- 4. Install Middle Shelves:** Insert and secure the middle shelf panels. Pay attention to the orientation of any pre-drilled holes for the power unit.
- 5. Install Drawer Rails:** Attach the drawer slide rails to the internal wooden panels. **Crucially, ensure all drawer rails are oriented correctly so that the drawer stops face the same direction.** Incorrect orientation will prevent drawers from closing properly.

6. **Attach Top Panel:** Secure the top panel to the assembled frame.
7. **Install Integrated Power Unit:** Mount the power outlet unit into its designated slot on the top panel. Connect its power cord.
8. **Install LED Light Strip:** Affix the LED light strip to the front edge of the upper shelf, ensuring it is positioned to illuminate the open compartments effectively. Connect the LED power cable.
9. **Assemble Fabric Drawers:** Unfold the fabric drawers and insert the bottom support panels. Attach the handles.
10. **Insert Drawers:** Carefully slide the assembled fabric drawers into their respective compartments.
11. **Attach Game Controller Stands:** Mount the game controller stands to the designated locations on the side of the upper shelf.

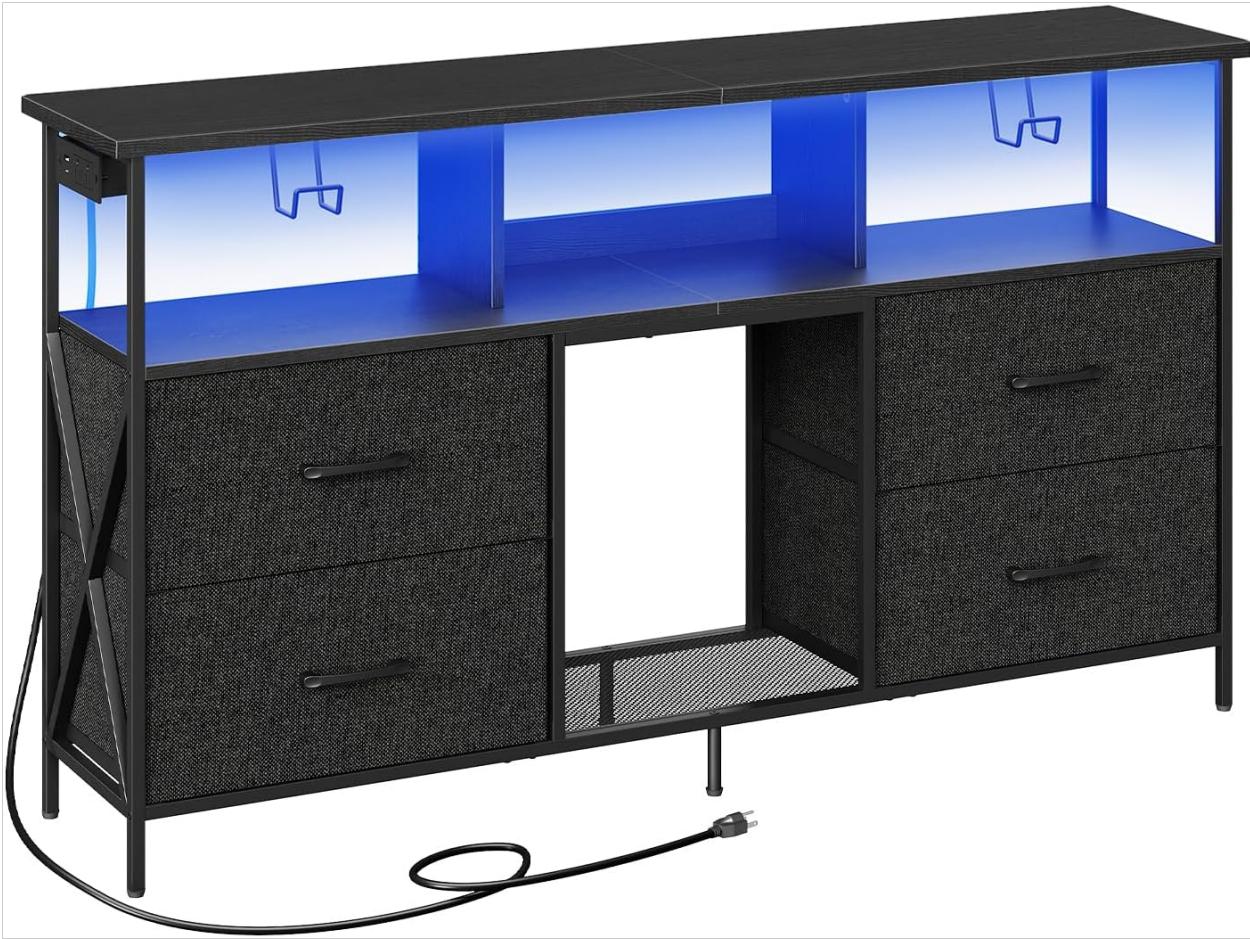


Image 4.1: Angled view of the TV stand, showing the LED light strip installed along the front edge of the upper shelf and the power cord for the integrated power unit.

5. INITIAL SETUP

After assembly, follow these steps for initial setup:

1. **Placement:** Position the TV stand in your desired location, ensuring it is on a level and stable surface.
2. **Connect Power:** Plug the main power cord from the integrated power unit into a wall outlet.
3. **Place Television:** Carefully place your television on the top surface of the stand. Ensure it is centered and stable.
4. **Organize Cables:** Utilize the open back design to route and manage TV and device cables neatly.

6. OPERATION

6.1. Integrated Power Outlets and USB Ports

The TV stand features an integrated power unit with 2 AC outlets and 2 USB ports (5V/2A) for convenient charging and powering of your electronic devices.

- **AC Outlets:** Plug in your TV, gaming console, or other appliances. Do not exceed the maximum wattage rating of the unit.
- **USB Ports:** Use these ports to charge smartphones, tablets, gaming controllers, or other USB-powered devices.



Image 6.1: Detail of the integrated power unit, featuring two standard AC outlets and two USB charging ports.

6.2. LED Lighting

The LED light strip provides ambient lighting for the open compartments. It is typically controlled via a switch or remote (if included). Refer to the LED light strip's specific instructions for detailed operation, including color changes or brightness adjustments.

6.3. Game Controller Stands

The two included game controller stands are designed to neatly hold your gaming controllers, providing easy

access and a tidy appearance.



2 Game Controller Stand

Neatly hanging gamepads for a cool visual effect.

Image 6.2: A gaming controller placed on one of the dedicated stands, illustrating its function.

7. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Fabric Drawers:** The fabric drawers can be spot cleaned with a mild detergent and water. Allow to air dry completely.

8. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose fasteners; uneven floor.	Ensure all screws and bolts are tightened. Move to a level surface or use shims under legs.
Drawers do not slide smoothly or close completely.	Drawer rails installed incorrectly; obstruction.	Check the orientation of the drawer rails; ensure the stops are facing the correct direction. Remove any obstructions.
LED lights are not working.	Power cord not connected; faulty connection; LED strip damage.	Ensure the LED power cord is securely plugged into the power unit and the wall outlet. Check for any loose connections. If issues persist, contact customer support.
Power outlets/USB ports not working.	Main power cord not connected; circuit breaker tripped; faulty unit.	Verify the main power cord is plugged in. Check your household circuit breaker. Avoid overloading the outlets.

9. SPECIFICATIONS

Technical details for the MAHANCRIS TV Stand Model TVBK140E01:

Feature	Detail
Brand	MAHANCRIS
Model	TVBK140E01
Product Dimensions	139.95 x 29.97 x 77.98 cm (55.1 x 11.8 x 30.7 inches)
Item Weight	17.01 kg (37.5 lbs)
Material Type	Engineered Wood, Metal, Fabric
Mounting Type	Floor Mount
Special Features	Integrated LED Light, 2 AC Outlets, 2 USB Ports (5V/2A), 2 Game Controller Stands
Color	Black
Recommended Uses	Bedroom, Entertainment, Living Room

10. WARRANTY AND SUPPORT

MAHANCRIS products are designed for quality and durability. For warranty information, missing parts, or technical support, please contact your retailer or MAHANCRIS customer service directly. Please have your

model number (TVBK140E01) and purchase date available when contacting support.

For further assistance, visit the MAHANCRIS store online:[MAHANCRIS Store](#)

© 2025 MAHANCRIS. All rights reserved.