

Cevera 52-3085-1

Cevera 52 Inch Low Profile Ceiling Fan with Lights and Remote

Model: 52-3085-1

1. INTRODUCTION

Thank you for choosing the Cevera 52 Inch Low Profile Ceiling Fan. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions thoroughly before beginning installation or use, and retain this manual for future reference.

2. SAFETY INFORMATION

To reduce the risk of electric shock, fire, or personal injury, always follow these basic safety precautions:

- Ensure the power is turned off at the circuit breaker or fuse box before installation or servicing.
- All electrical wiring must be performed by a qualified electrician and comply with all local and national electrical codes.
- The fan must be mounted to a ceiling joist or support structure capable of supporting a minimum of 35 lbs (15.9 kg).
- Do not bend the blade holders during installation, balancing, or cleaning.
- Keep hands, clothing, and other objects away from the fan blades when the fan is operating.
- Do not operate the fan if there is any visible damage to the blades or motor housing.
- This fan is suitable for indoor and outdoor covered usage, but avoid direct contact with water.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Ceiling Fan Motor Housing
- Solid Wood Fan Blades (3)
- Light Kit (Integrated LED)
- Remote Control
- Wall Control Switch
- Mounting Bracket
- Hardware Pack (screws, wire nuts, etc.)



HANDMADE SOLID WOOD FAN BLADES



More Durable



Family Friendly



Paulownia Wood



Real wood grain



Suitable for **outdoor covered** courtyards,
but **not in direct contact with water**



SOLID WOOD

VS



deform and sag

PLYWOOD/PLASTIC



Image: All components of the Cevera 52 Inch Low Profile Ceiling Fan, including the motor housing, three solid wood blades, light kit, remote control, and wall control switch.

4. INSTALLATION (SETUP)

Follow these steps for proper installation of your ceiling fan. A detailed installation video is also available for visual guidance.

4.1 Pre-Installation Checklist

- Ensure power is disconnected at the main circuit breaker.
- Confirm the mounting location can support the fan's weight.
- Gather necessary tools (screwdriver, wire strippers, ladder, etc.).

4.2 Mounting Options

This fan is designed for flush mount installation on flat ceilings. It cannot be installed with a downrod or on sloping ceilings.



Image: Diagram illustrating the flush mount installation on a flat ceiling, indicating a 0-degree angle for proper mounting.

4.3 Installation Steps

1. Attach the mounting bracket to the ceiling electrical box.
2. Connect the fan's electrical wires to the household wiring according to the wiring diagram in the manual.
3. Secure the fan motor housing to the mounting bracket.
4. Install the three solid wood fan blades to the motor housing.
5. Attach the LED light kit and light cover.
6. Install the wall control switch if desired, following the provided instructions.

Your browser does not support the video tag.

Video: Official Cevera installation guide for the Low Profile Ceiling Fan, demonstrating each step of the assembly and mounting process.

5. OPERATION

Your Cevera ceiling fan can be controlled using the included remote control or the wall control switch.

5.1 Remote and Wall Control Functions

Both controls allow adjustment of fan speed, light settings, and timer functions.

- **Fan Speed:** 6 adjustable speeds (1-6).
- **Light Control:** Dimmable (10%-100%) with three color temperature options (Warm, Neutral, Cool White).
- **Timer:** Set fan to turn off after 2 or 4 hours.
- **Reversible Motor:** Switch between summer (downward airflow) and winter (upward airflow) modes.

- **Natural Wind Mode:** Simulates natural breeze by varying fan speed.
- **Memory Function:** The fan retains the last used speed and light settings after being turned off and on.



Image: The remote control and wall control switch for the Cevera ceiling fan, highlighting their dual control functionality.

Your browser does not support the video tag.

Video: Demonstration of the Cevera Low Profile Ceiling Fan's functions using the wall control, including speed and light adjustments.

5.2 Light Settings

The integrated LED light offers adjustable brightness and color temperature:

- **Brightness:** Dimmable from 10% to 100%.
- **Color Temperatures:** 3000K (Warm), 4500K (Neutral), 6000K (Cool White).



Image: Visual representation of the dimmable LED light and its three color temperature settings (Warm, Neutral, Cool White).

5.3 Reversible DC Motor

The fan features a reversible DC motor for year-round comfort:

- **Summer Mode:** Blades rotate counter-clockwise, pushing cool air downwards.
- **Winter Mode:** Blades rotate clockwise, drawing cool air up and circulating warm air downwards.

Easy installation

Contact us with any installation questions

- Most of the equipment has already been installed
- Provide installation instructions and video
- Please disconnect the power before installation



Image: Diagram illustrating the reversible airflow function for both summer (cooling) and winter (warming) modes.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- Blade Care:** The solid wood blades are durable but should not be exposed to direct water. Wipe them gently to remove dust.
- Tightness:** Periodically check all screws and connections to ensure they are secure.
- Lubrication:** The DC motor is permanently lubricated and does not require additional oiling.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote/wall control battery low.	Check circuit breaker; Verify wiring connections; Replace batteries in remote/wall control.
Fan makes noise	Loose screws; Unbalanced blades; Motor issue.	Tighten all screws; Ensure blades are balanced; Contact support if motor noise persists.
Light does not work	Loose wiring; LED driver issue.	Check light kit wiring; Contact support for LED driver replacement.
Remote/Wall control not working	Battery low/dead; Incorrect pairing; Obstruction.	Replace batteries; Re-pair remote/wall control with fan (refer to specific pairing instructions); Ensure clear line of sight.
Low airflow	Incorrect fan direction (winter mode); Low speed setting.	Switch to summer mode for downward airflow; Increase fan speed.

If the problem persists after attempting these solutions, please contact Cevera customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Ceversa
Model Number	52-3085-1
Size	52 Inch
Color	Darkwood
Product Dimensions	52"D x 52"W x 10.6"H
Blade Material	Wood (Paulownia)
Number of Blades	3
Motor Type	Brushless DC Motor
Noise Level	28 Decibels
Number of Speeds	6
Light Type	Integrated LED
Dimmable Light	Yes (10%-100%)
Color Temperatures	3 (Warm, Neutral, Cool White)
Control Method	Remote Control, Wall Control
Voltage	120 Volts
Wattage	35 watts
Indoor/Outdoor Usage	Indoor, Outdoor (covered patios)
Mounting Type	Flush Mount

9. WARRANTY AND SUPPORT

Ceversa provides comprehensive after-sales support for your ceiling fan.

- **Motor Warranty:** 10 years.
- **Fan Components Warranty:** 2 years (covering the entire fan, excluding the motor).

If you encounter any problems or have questions regarding installation, operation, or warranty claims, please contact Ceversa customer service. Our team is ready to assist you promptly.

For support, please refer to the contact information provided in your product packaging or visit the official Ceversa website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question