

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [ROBUD](#) /
- > [ROBUD Wooden Baby Walker WG368 Instruction Manual](#)

ROBUD WG368

ROBUD Wooden Baby Walker WG368 Instruction Manual

Model: WG368 | Brand: ROBUD

INTRODUCTION

The ROBUD Wooden Baby Walker is designed to support your child's early development, offering a stable aid for learning to walk and an engaging activity center. Crafted from premium wood with non-toxic paint, it prioritizes durability and safety. The walker features non-slip rubber wheels for smooth movement and floor protection, while also helping to regulate speed for new walkers.

This walker is thoughtfully designed with smooth, rounded edges to ensure a burr-free surface, gentle on tiny hands. Its balanced structure helps prevent tipping, providing sturdy support to strengthen leg muscles, enhance balance, and encourage independent walking.

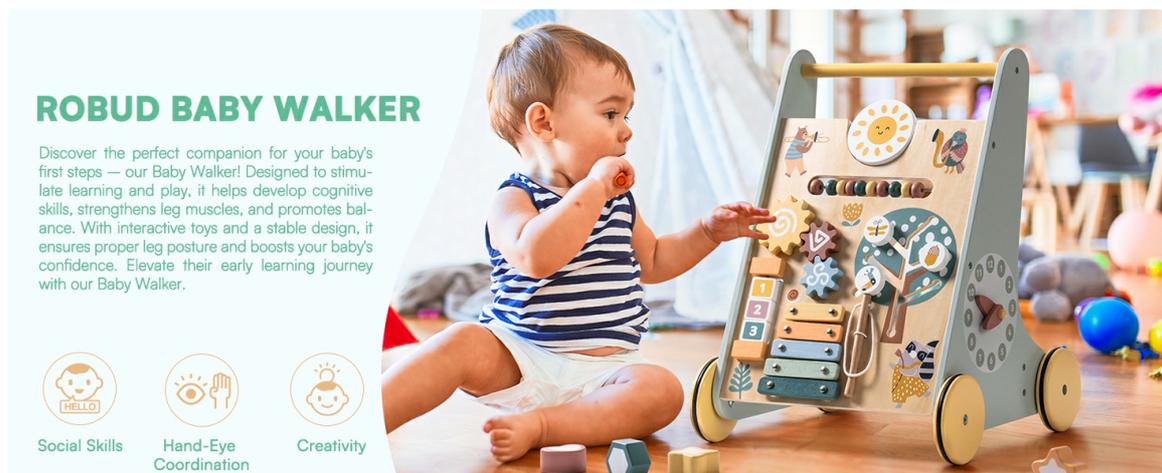


Figure 1: Proper posture with the ROBUD Wooden Baby Walker to support healthy leg development.

IMPORTANT SAFETY GUIDELINES

- Always ensure adult supervision when the child is using the product.
- After opening, keep all packaging materials (plastic film, bags) away from babies and children to prevent suffocation.
- Remove this toy when the child begins to crawl or get up on their hands and knees to prevent entanglement or injury.
- Do not use the xylophone stick close to the ear; misuse may cause damage to hearing.
- Keep the product away from fire, flammable substances, and humid environments to prevent damage.
- The assembly tool should be kept for future use and stored where children cannot access it.

WHAT'S IN THE BOX

Please check that all components are present before assembly:

- Main Activity Board (1)
- Side Panels (2)
- Handlebar (1)
- Wheels (4)
- Shape Sorter Blocks (Star, Heart, Hexagon, Square) (4)
- Xylophone Stick (1)
- Assembly Hardware (Screws, Nuts, Washers, Wrench)

OPERATING INSTRUCTIONS & FEATURES

The ROBUD Wooden Baby Walker offers multiple interactive features to stimulate curiosity and develop fine motor skills:

- **Push Walker Function:** The sturdy handle and stable wheels provide support for children learning to stand and walk. Encourage your child to hold the handle and push the walker forward.
- **Activity Center:** The front panel is equipped with various engaging elements:
 - **Mirror:** A small, child-safe mirror for self-discovery.
 - **Abacus:** Colorful beads that slide along a rod, great for counting and fine motor skills.
 - **Gears:** Interlocking gears that can be spun, promoting understanding of cause and effect.
 - **Xylophone:** A colorful xylophone with a wooden stick to create musical sounds. The stick is tethered to prevent loss.
 - **Wisdom Tree (Tracking Game):** A maze-like feature where small pieces can be moved along tracks.
 - **Number Puzzles:** Sliding blocks with numbers and illustrations to encourage early learning.
 - **Clock:** A movable clock face with hands to introduce time concepts.
- **Shape Sorter:** The side panels feature cut-outs for matching the included shape blocks (star, heart, hexagon, square), aiding in shape recognition and problem-solving.
- **Storage Space:** A convenient storage area at the bottom allows your child to carry their favorite toys or books.

VARIOUS INTERESTING GAMES

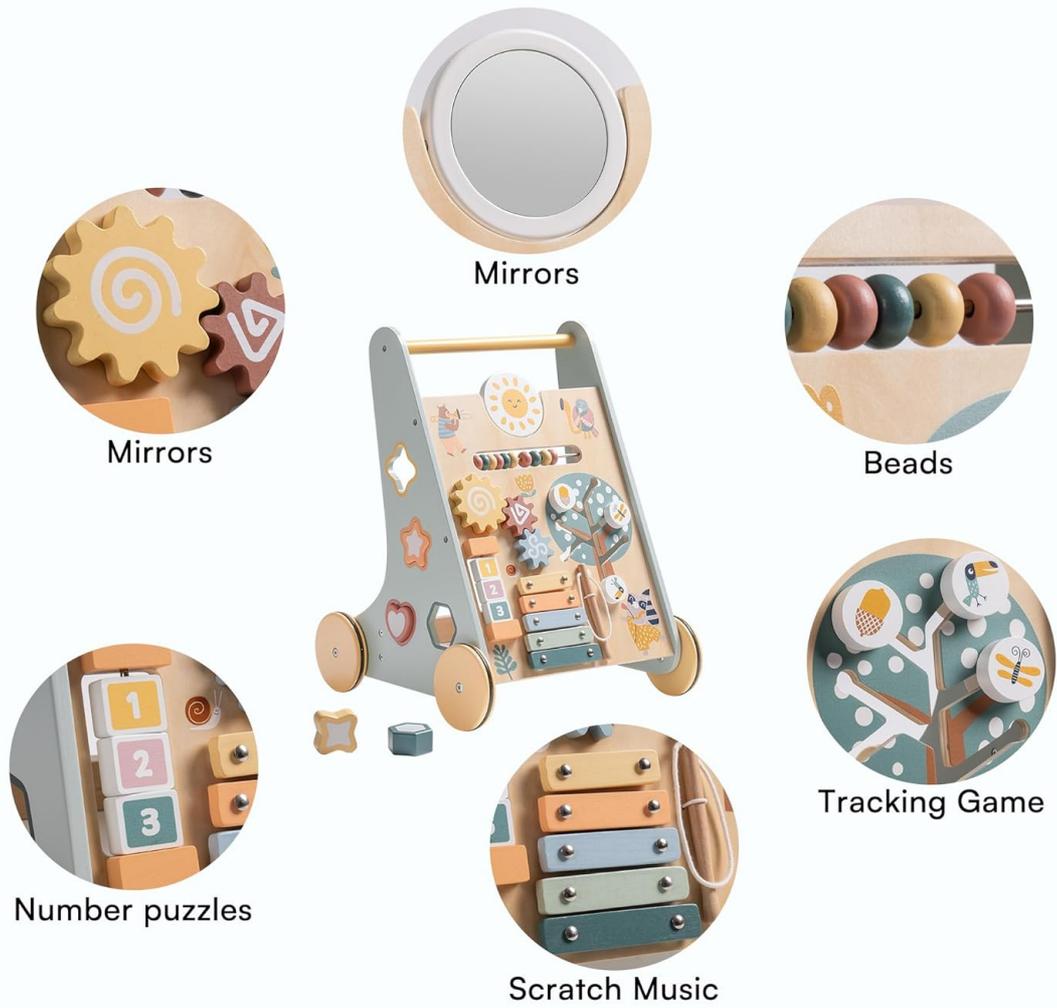


Figure 3: Various interactive games on the walker's activity panel.

VXTRA FUN WITH TOY STORAGE

Let your baby bring their favorite toys along for the ride!



※ Tip: The doll is not included

Figure 4: The integrated toy storage space.

Watch the ROBUD Wooden Baby Walker in action:

Your browser does not support the video tag.

Video 2: Demonstration of the ROBUD Wooden Baby Walker's features and functionality.

MAINTENANCE


- **Cleaning:** Wipe the product with a dry, soft cloth. Do not use chemical cleansers such as alcohol, ammonia-based cleansers, or window cleaner, as these can damage the wood and paint.
- **Storage:** Store the walker in a dry environment, away from direct sunlight and extreme temperatures, to prevent warping or damage to the wood.
- **Inspection:** Regularly check all screws and connections to ensure they are tight and secure. Tighten any loose parts immediately.

TROUBLESHOOTING

- **Wheels Not Rolling Smoothly:** If the wheels appear stuck or do not roll freely, check the washer installation. Ensure that the washers are correctly placed on both sides of each wheel and that the nuts are tightened sufficiently to secure the wheel without impeding its rotation.
- **Loose Parts:** If any part of the walker feels loose, immediately stop use and tighten all screws and connections. Refer to the assembly instructions if needed.

SPECIFICATIONS

Feature	Detail
Model Number	WG368
Product Dimensions	13.4 x 15 x 18.5 inches
Item Weight	5.84 pounds
Material Type	Wood
Material Composition	Wood
Color	Blue
Age Range (Description)	Toddler
Batteries Required	No

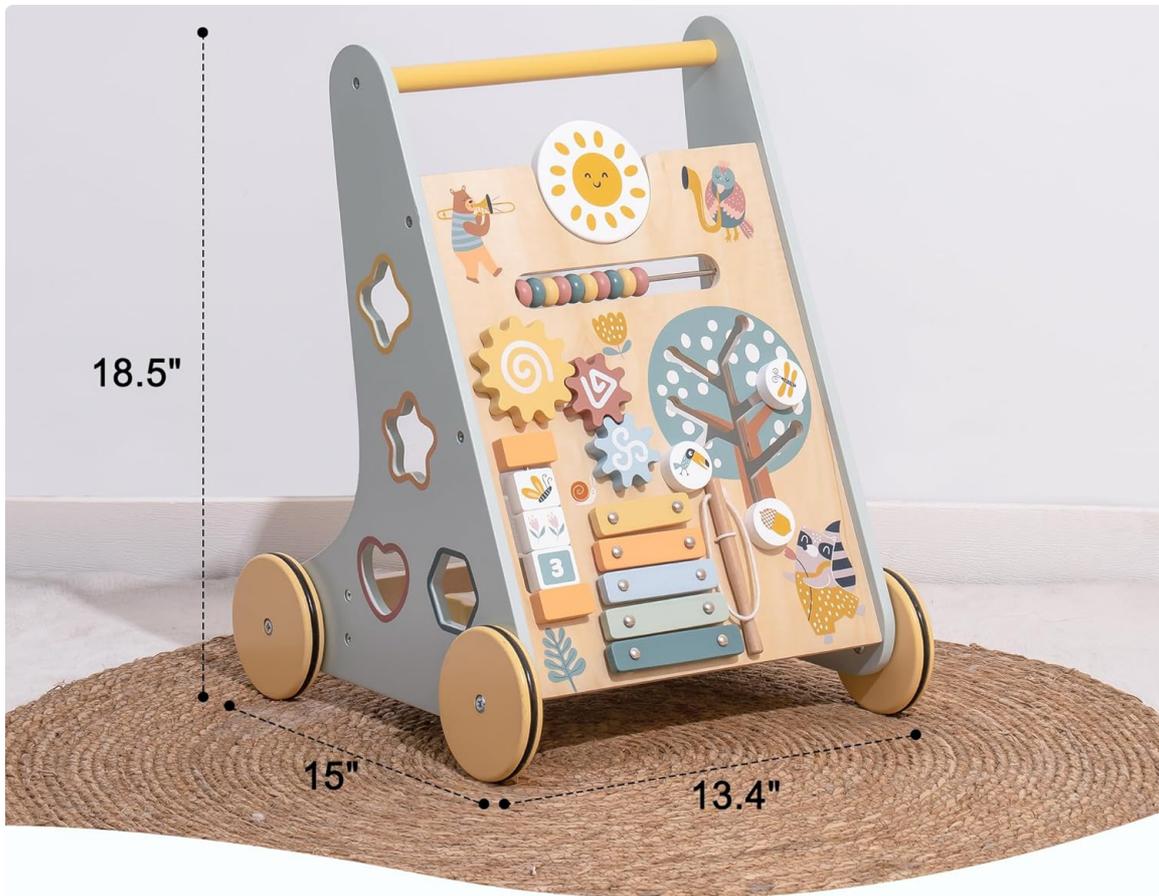

High-quality wood



Age Recommendation



Weight

Figure 5: Product dimensions of the ROBUD Wooden Baby Walker.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ROBUD Wooden Baby Walker, please contact ROBUD customer service. Specific warranty details may vary; please refer to your purchase documentation or contact the seller for more information.