

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [acer](#) /

› Acer Nitro V Gaming Laptop User Manual (15.6" FHD, Intel i5-13420H, RTX 4050)

acer Nitro V

Acer Nitro V Gaming Laptop User Manual

Model: Nitro V

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Acer Nitro V Gaming Laptop. Please read this manual thoroughly to ensure proper use and to maximize the performance and longevity of your device.



Figure 1: Front view of the Acer Nitro V Gaming Laptop.

1. INITIAL SETUP

1.1 Unpacking and First Power On

Carefully remove the laptop and all accessories from the packaging. Connect the power adapter to the laptop's power input port and then to an electrical outlet. Open the laptop lid and press the power button to turn on the device. Follow the on-screen prompts to complete the initial Windows 11 setup.

1.2 Connecting Peripherals

Your Acer Nitro V laptop includes various ports for connecting external devices:

- **USB Ports:** Connect USB devices such as external hard drives, keyboards, or mice to the available USB 3.2 Gen 1 Type-A

ports (3x) or the USB 3.2 Gen 2 Type-C port (1x).

- **HDMI Port:** Connect an external monitor or TV using an HDMI cable to the HDMI 2.1 port.
- **Ethernet Port:** For a wired network connection, plug an Ethernet cable into the RJ-45 port.
- **Headphone Jack:** Connect headphones or external speakers to the 3.5mm audio jack.



Figure 2: Left side ports including power, Ethernet, HDMI, USB-A, and USB-C.



Figure 3: Right side ports including USB-A and headphone jack.

2. OPERATING YOUR LAPTOP

2.1 Keyboard and Touchpad

The laptop features a full-size keyboard with a dedicated numeric keypad. The keyboard is backlit, which can be toggled on or off using the designated function key (Fn + F9, or similar, refer to your specific model's key layout). The precision touchpad supports multi-touch gestures for enhanced navigation.



Figure 4: Backlit keyboard and touchpad.

2.2 Display Features

The 15.6-inch Full HD (1920 x 1080) IPS display offers a 144Hz refresh rate for smooth visuals, especially beneficial for gaming. The anti-glare coating helps reduce reflections, and the 45% NTSC color gamut provides vibrant colors.

2.3 Wireless Connectivity

The laptop supports Wi-Fi (IEEE 802.11ax standard) and Bluetooth for wireless network access and connecting wireless peripherals.

2.4 Audio and Webcam

Integrated stereo speakers provide audio output, and a built-in microphone is available for voice communication. The 720p webcam allows for video calls and conferencing.

3. MAINTENANCE AND CARE

3.1 General Cleaning

To clean the laptop's exterior, use a soft, lint-free cloth dampened with a mild cleaning solution. For the screen, use a specialized screen cleaner and a microfiber cloth. Avoid spraying liquids directly onto the screen or keyboard.

3.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. For extended storage, charge the battery to approximately 50-60% and store the laptop in a cool, dry place. The average battery life is approximately 8 hours under typical usage conditions.

3.3 Cooling System

Ensure that the laptop's ventilation openings are not obstructed to allow for proper airflow and cooling. Operating the laptop on a hard, flat surface is recommended. Regular cleaning of the vents can help maintain optimal cooling performance.

4. TROUBLESHOOTING

4.1 Power Issues

- **Laptop does not turn on:** Ensure the power adapter is securely connected to both the laptop and a working electrical outlet. Check if the power indicator light is on.
- **Battery not charging:** Verify the power adapter is functioning correctly. Try a different outlet.

4.2 Display Issues

- **No image on screen:** Connect an external monitor to check if the issue is with the laptop's internal display. Ensure the display brightness is not set to minimum.
- **Flickering or distorted image:** Update graphics drivers. Adjust display resolution and refresh rate settings.

4.3 Connectivity Problems

- **Wi-Fi not connecting:** Check if Wi-Fi is enabled. Restart your router and the laptop. Ensure correct Wi-Fi password.
- **Bluetooth device not pairing:** Ensure Bluetooth is enabled on both devices. Place devices close to each other.

For more detailed troubleshooting or issues not covered here, please refer to the official Acer support website or contact customer service.

5. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	Acer Nitro V Gaming Laptop
Processor	13th Gen Intel Core i5-13420H (up to 4.60GHz, 8 Cores, 12MB Cache)
Graphics	NVIDIA GeForce RTX 4050 6GB GDDR6 (Dedicated)
RAM	16GB DDR5 SDRAM
Storage	512GB PCIe NVMe SSD
Display	15.6" FHD (1920 x 1080) IPS, 144Hz, Anti-glare, 45% NTSC
Operating System	Windows 11 Home
Ports	1x HDMI 2.1, 3x USB 3.2 Gen 1 Type-A, 1x USB 3.2 Gen 2 Type-C, 1x RJ-45 (Ethernet), 1x Headphone Jack
Wireless	IEEE 802.11ax (Wi-Fi 6), Bluetooth
Webcam	720p HD
Keyboard	Backlit Keyboard
Battery Life	Approximately 8 hours (average)
Dimensions (LxWxH)	14.3 x 9.4 x 0.93 inches
Weight	4.66 lbs (2.11 kg)

6. WARRANTY AND SUPPORT

6.1 Product Warranty

Your Acer Nitro V Gaming Laptop is covered by a manufacturer's warranty. For detailed information regarding the terms, conditions, and duration of your warranty, please refer to the warranty card included with your product or visit the official Acer support website. Keep your proof of purchase for warranty claims.

6.2 Customer Support

For technical assistance, service, or further inquiries, please contact Acer customer support. You can find contact information and support resources on the official Acer website: www.acer.com/support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F38399YH>

More documents and user manuals: <https://manuals.plus/>