

[manuals.plus](#) /› [Lepwings](#) /› [Lepwings Electric Cleaning Brush BX-QJ2404 User Manual](#)

Lepwings BX-QJ2404

Lepwings Electric Cleaning Brush BX-QJ2404 User Manual

Model: BX-QJ2404

1. INTRODUCTION

Thank you for choosing the Lepwings Electric Cleaning Brush. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read this manual thoroughly before use and retain it for future reference.

Safety Information

- Do not immerse the main unit in water. The device is IP65 rated, meaning it is protected against water jets, but not full immersion.
- Keep out of reach of children.
- Use only the provided charging cable and adapter.
- Ensure the brush head is securely attached before operation.
- Avoid using the brush on delicate surfaces that may be scratched. Test on an inconspicuous area first.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Electric Cleaning Brush Main Unit
- Telescopic Handle (extendable)
- Large Brush Head
- Small Brush Head
- Pointed Brush Head
- Scouring Pad
- Sponge Brush
- Wool Pad
- Large Microfiber Pad
- Small Microfiber Pad
- USB-C Charging Cable

- Wall Mount Hook



Figure 2.1: Overview of the Lepwings Electric Cleaning Brush and its included accessories.

3. PRODUCT OVERVIEW

The Lepwings Electric Cleaning Brush is a versatile cleaning tool designed for various household tasks. It features a powerful motor, multiple interchangeable brush heads, and an adjustable telescopic handle for extended reach.

Key Components:

- **Main Unit:** Contains the motor, battery, control buttons, and digital display.
- **Telescopic Handle:** Extends the reach of the brush, adjustable from 35 cm to 135 cm.
- **Brush Head Connector:** Allows for quick attachment and detachment of various cleaning heads.
- **Angle Adjustment Button:** Enables adjustment of the brush head angle up to 90 degrees.
- **Power/Speed Button:** Controls power on/off and switches between 3 speed modes.
- **Digital Display:** Shows battery level and current speed mode.

4. SETUP

4.1 Assembling the Handle

1. Connect the telescopic handle sections by twisting them together until they lock securely.
2. Attach the assembled handle to the main brush unit by aligning the connectors and twisting until it clicks into place.
3. To adjust the length, twist the handle sections to unlock, extend or retract to the desired length (35-135 cm), and twist to lock.

4.2 Attaching Brush Heads

1. Select the appropriate brush head for your cleaning task.
2. Align the brush head with the connector on the main unit.
3. Press firmly until the brush head snaps into place. Ensure it is securely attached before use.
4. To remove, pull the brush head off the connector.



Figure 4.1: Visual guide for handle assembly, brush head installation, and angle adjustment.

5. CHARGING

The Lepwings Electric Cleaning Brush is equipped with a built-in 4400mAh rechargeable battery.

1. Before first use, fully charge the device.
2. Connect the USB-C charging cable to the charging port on the main unit.
3. Plug the other end of the USB-C cable into a compatible USB power adapter (not included).
4. The digital display will indicate the charging status. A full charge takes approximately 3.5 hours.

5. Once fully charged, the device can operate for up to 120 minutes, depending on the speed setting and cleaning intensity.



Figure 5.1: Battery life, charging time, and battery indicator details.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Speed Selection

1. Press the Power/Speed button once to turn on the device at the lowest speed (310 RPM).
2. Press the button again to cycle through the speeds: Medium (410 RPM), High (490 RPM).
3. Press the button a fourth time to turn off the device.
4. The digital display will show the current speed setting and remaining battery life.

6.2 Adjusting the Angle

To adjust the angle of the brush head, press and hold the angle adjustment button located near the brush head connector, then pivot the head to the desired angle (up to 90 degrees). Release the button to lock the angle.



Figure 6.1: Illustration of the three speed modes and the variety of brush heads.

7. BRUSH HEAD USAGE GUIDE

The Lepwings Electric Cleaning Brush comes with 8 versatile brush heads for different cleaning needs:

- **Large Brush Head:** Ideal for cleaning large flat surfaces such as floors, walls, and bathtubs.



Figure 7.1: Large brush head in action on a floor.

- **Small Brush Head:** Perfect for smaller areas, corners, and edges like sinks or shower trays.



Figure 7.2: Small brush head used in a bathtub.

- **Pointed Brush Head:** Designed to reach into grout lines, crevices, and other hard-to-access areas, such as around toilet bases.



Figure 7.3: Pointed brush head cleaning around a toilet.

- **Scouring Pad:** For tackling stubborn dirt, limescale, and soap residue on surfaces like stovetops or shower walls.



Figure 7.4: Scouring pad cleaning a stovetop.

- **Sponge Brush:** Suitable for delicate surfaces such as glass, mirrors, or chrome fixtures.



Figure 7.5: Sponge brush cleaning a window.

- **Wool Pad:** For gentle polishing or drying tasks on various surfaces, including car interiors.



Figure 7.6: Wool pad used for cleaning a car seat.

- **Large Microfiber Pad:** Excellent for cleaning large glass surfaces, tiles, or stainless steel appliances.



Figure 7.7: Large microfiber pad cleaning a car exterior.

- **Small Microfiber Pad:** Ideal for cleaning faucets, sinks, window frames, and other smaller, detailed areas.



Figure 7.8: Small microfiber pad cleaning a sofa.

8. MAINTENANCE

8.1 Cleaning the Brush Heads

After each use, remove the brush head and rinse it thoroughly under running water. For stubborn dirt, use a mild detergent. Allow brush heads to air dry completely before storing.

8.2 Cleaning the Main Unit

Wipe the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water. The device has an IP65 rating, meaning it is resistant to water splashes, making it suitable for use in wet environments like showers or bathtubs. However, it should not be submerged.

Batterie puissante

4400mAh

Nettoyage sans interruption –
jusqu'à 120 min d'autonomie



USB-C



3,5 h de charge



Figure 8.1: IP65 water resistance rating. Do not immerse the device.

8.3 Storage

Store the cleaning brush and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures. Use the provided wall mount hook for convenient storage.

9. TROUBLESHOOTING

If you encounter any issues with your Lepwings Electric Cleaning Brush, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully.
Brush head stops spinning or spins slowly.	Low battery; excessive pressure applied; brush head obstructed.	Recharge the device; reduce pressure; clear any obstructions from the brush head.
Brush head detaches during use.	Brush head not securely attached.	Ensure the brush head is firmly snapped into place.
Water enters the main unit.	Device was immersed in water.	Immediately turn off the device and allow it to dry completely. Do not immerse the device; it is only splash-resistant.

If the problem persists, please contact customer support.

10. SPECIFICATIONS

Feature	Specification
Brand	Lepwings
Model Number	BX-QJ2404

Feature	Specification
Color	White
Product Dimensions (L x W x H)	135 x 5 x 5 cm (fully extended)
Item Weight	1.3 Kilograms
Handle Material	Acrylonitrile Butadiene Styrene
Battery Capacity	4400mAh
Charging Time	Approx. 3.5 hours
Operating Time	Up to 120 minutes
Speed Modes	3 (310 RPM, 410 RPM, 490 RPM)
Waterproof Rating	IP65
Telescopic Handle Length	35 cm to 135 cm
Number of Brush Heads	8
UPC	657381393414

WARRANTY AND SUPPORT


For warranty information or technical support, please contact the seller directly through your purchase platform or visit the official Lepwings brand store.

Brand Store: [Lepwings Official Store](#)

© 2025 Lepwings. All rights reserved.


Related Documents - BX-QJ2404

	<p>Lepwings LED Candle Light User Guide AY-LZ25002</p> <p>Comprehensive user guide for the Lepwings LED Candle Light (Model AY-LZ25002). Includes product specifications, key features, package contents, detailed instructions on how to use, safety precautions, maintenance tips, troubleshooting advice, and warranty information.</p>
	<p>GEBE Ersatzteilkatalog für Lichtmaschinen 2018/2019</p> <p>Umfassender Katalog von GEBE für Lichtmaschinen-Ersatzteile (2018/2019). Enthält detaillierte Listen von Kohlebürsten, Reglern, Gleichrichtern und mehr. Ermöglicht die einfache Suche über den GEBE-Compass.</p>

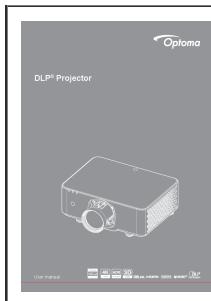


[Optoma DLP Projector User Manual](#)

Comprehensive user manual for Optoma DLP projectors, covering safety, setup, operation, image adjustment, advanced features, troubleshooting, and specifications.

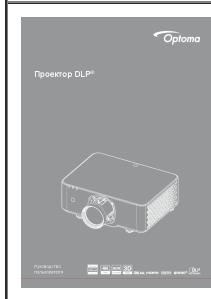


[Руководство пользователя проектора Optoma DLP](#)

Подробное руководство пользователя для проектора Optoma DLP, охватывающее установку, настройку, использование, технические характеристики и устранение неполадок.

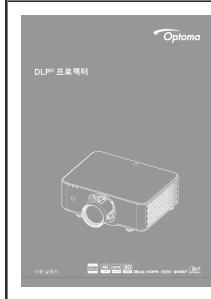

[Optoma DLP](#)

Optoma DLP

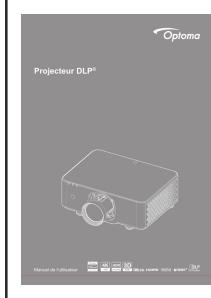

[Manuel de l'utilisateur du projecteur Optoma DLP](#)

Ce manuel de l'utilisateur fournit des instructions détaillées pour l'installation, la configuration et l'utilisation du projecteur Optoma DLP, incluant les consignes de sécurité, les spécifications et le dépannage.