



110.70052990

Instruction Manual for Generic Replacement Dryer Lint Screen Filter

Compatible with Kenmore Dryer Model 110.70052990

1. INTRODUCTION

This manual provides essential instructions for the installation, operation, and maintenance of your new Generic replacement lint screen filter. Please read this manual thoroughly before installation to ensure proper function and safety. This replacement part is designed to be compatible with specific Kenmore dryer models, including model **110.70052990**.

2. COMPATIBILITY

This lint screen filter is a replacement part compatible with Kenmore dryer model **110.70052990**. It may also be compatible with other Kenmore dryer models. Before installation, always verify that the replacement part matches your original lint screen filter in terms of dimensions and design. Refer to your dryer's original manual or the part number (e.g., p5304834, p5303040) for confirmation.



Image 1: Generic Replacement Dryer Lint Screen Filter. This image shows the full view of the white plastic frame with a fine mesh screen, designed to capture lint from a dryer. The filter has a handle at the top for easy removal and insertion.

3. SAFETY INFORMATION

- Always disconnect power to the dryer before attempting any installation or maintenance.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- Ensure the lint screen is fully seated in its housing before operating the dryer.
- Never operate the dryer without the lint screen in place, as this can lead to fire hazards and damage to the appliance.

4. INSTALLATION

1. **Disconnect Power:** Unplug the dryer from the electrical outlet or turn off the circuit breaker supplying power to the dryer.
2. **Locate Old Lint Screen:** Open the dryer door and locate the existing lint screen. It is typically found in a slot near the dryer opening.
3. **Remove Old Lint Screen:** Grasp the handle of the old lint screen and pull it straight out of its housing.
4. **Clean Housing (Optional):** While the lint screen is removed, use a vacuum cleaner attachment to remove any accumulated lint from the lint screen housing and ductwork.
5. **Insert New Lint Screen:** Take the new Generic replacement lint screen filter. Ensure it is oriented correctly. Slide the new lint screen firmly into the housing until it is fully seated and flush with the

dryer opening.

6. **Restore Power:** Plug the dryer back into the electrical outlet or turn on the circuit breaker.

Note: The replacement lint screen should fit snugly. Do not force it if it does not slide in easily. Recheck the orientation and ensure no obstructions are present.

5. OPERATION

The lint screen filter operates passively by collecting lint as air passes through it during the drying cycle. No specific user action is required for its operation beyond ensuring it is correctly installed before each use.

- Always ensure the lint screen is clean before starting a new drying cycle.
- A clean lint screen promotes efficient drying and reduces energy consumption.

6. MAINTENANCE

Regular cleaning of the lint screen is crucial for dryer performance and safety.

1. **After Every Load:** Pull the lint screen out and remove all accumulated lint by hand. Dispose of the lint properly.
2. **Periodic Deep Cleaning (Every 6 months or as needed):**
 - Remove the lint screen.
 - Wash the screen with warm, soapy water and a soft brush to remove any fabric softener residue or stubborn lint that may clog the mesh.
 - Rinse thoroughly under running water.
 - Allow the lint screen to air dry completely before reinserting it into the dryer.

Warning: A clogged lint screen can restrict airflow, leading to longer drying times, increased energy use, and potential overheating, which poses a fire risk.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lint screen does not fit.	Incorrect part for your dryer model.	Verify compatibility with your dryer model (e.g., Kenmore 110.70052990). Ensure the part number matches.
Dryer takes too long to dry.	Clogged lint screen or dryer vent.	Clean the lint screen thoroughly. Check and clean the dryer's exhaust vent system.
Lint screen appears damaged or torn.	Wear and tear; physical damage.	Replace the lint screen with a new one to maintain optimal performance and safety.

8. SPECIFICATIONS

Product Type: Replacement Dryer Lint Screen Filter

Brand: Generic

Compatible Dryer Models: Kenmore 110.70052990 (and others as specified by manufacturer)

Part Numbers: p5304834, p5303040 (verify with your specific dryer model)

Material: Plastic frame with mesh screen

Package Includes: 1 PC Lint Screen Filter

9. WARRANTY AND SUPPORT

As a generic replacement part, warranty coverage may vary. Please refer to the seller's return policy or contact the seller directly for information regarding warranty, returns, or technical support. Always retain your proof of purchase.