

[Manuals.plus](#) /

> [amazon basics](#) /

> Amazon Basics Pro Series Triple Mode Wireless Ergonomic Mouse (Model ABKY-M660) User Manual

## amazon basics ABKY-M660

# Amazon Basics Pro Series Triple Mode Wireless Ergonomic Mouse

MODEL: ABKY-M660

## Introduction

---

Thank you for choosing the Amazon Basics Pro Series Triple Mode Wireless Ergonomic Mouse. This manual provides essential information for setting up, operating, and maintaining your new mouse. Please read these instructions carefully before use to ensure optimal performance and longevity of the product.

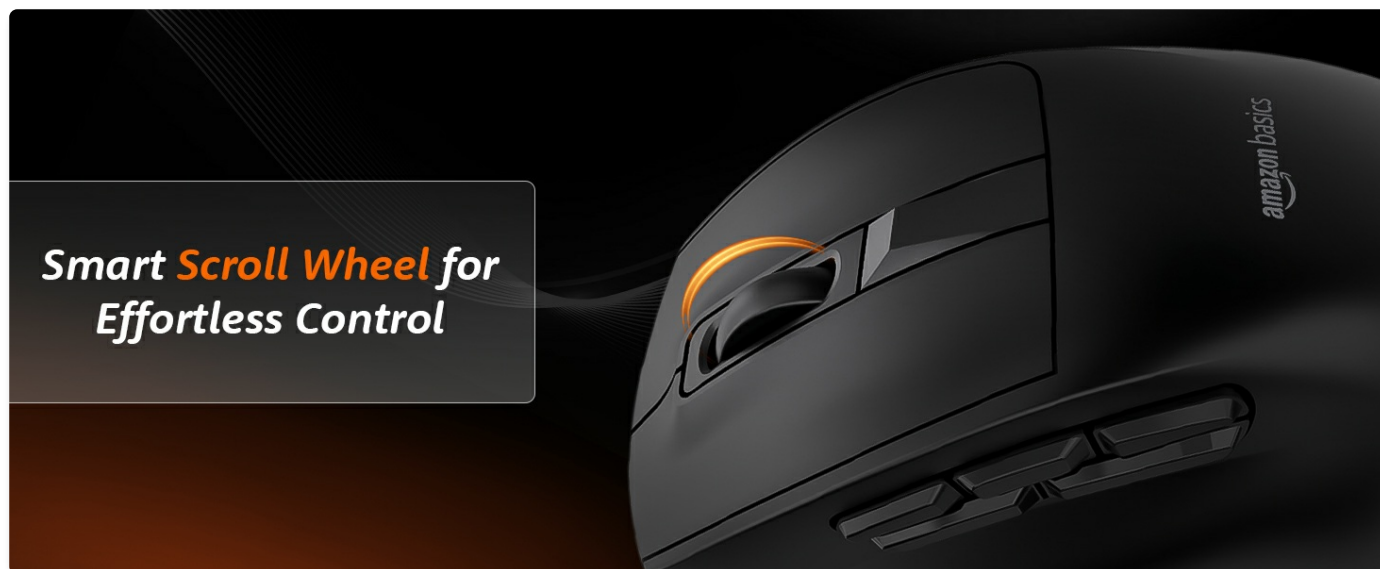


Image: The Amazon Basics Pro Series Triple Mode Wireless Mouse, showcasing its ergonomic design.

## Package Contents

---

- Amazon Basics Pro Series Triple Mode Wireless Ergonomic Mouse
- USB 2.4G Receiver
- USB Type-C Charging Cable (100cm)
- User Manual

## Product Features

- **Triple Mode Connectivity:** Seamlessly switch between 2.4G wireless, Bluetooth 1, Bluetooth 2, or wired USB connection.
- **9 Button Control:** Features 9 programmable buttons for enhanced productivity and customization.
- **Adjustable DPI (800–2400):** Select your preferred sensitivity level with LED indicators showing the active DPI setting.
- **Ergonomic Comfort:** Sculpted design provides a natural fit for your hand, reducing fatigue during extended use.
- **Rechargeable 500mAh Battery:** Equipped with a built-in 500mAh battery, offering up to 70 days of use on a single charge. Includes a 100cm Type-C charging cable.
- **Speed-Adaptive Scroll Wheel:** Automatically shifts between click-to-click and hyper-fast scrolling based on scrolling speed.
- **Smart Device Switching:** Pair with up to 3 devices and switch between them with a single button press for cross-platform control.

## Setup

### 1. Charging the Mouse

Before first use, it is recommended to fully charge the mouse. Connect the provided USB Type-C cable to the mouse's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status.



Image: The mouse connected via its Type-C charging cable.

### 2. Connecting the Mouse

The mouse supports three connectivity modes: 2.4G Wireless, Bluetooth (BT1 & BT2), and Wired USB.

#### 2.1. 2.4G Wireless Mode

1. Locate the USB 2.4G receiver, usually stored in a compartment on the underside of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Turn on the mouse using the power switch on the underside.
4. Select the 2.4G mode using the mode switch on the mouse. The mouse should connect automatically.



Image: The mouse and its compact mini USB receiver for 2.4GHz wireless connection.

## 2.2. Bluetooth Mode (BT1 & BT2)

1. Turn on the mouse using the power switch.
2. Select either BT1 or BT2 mode using the mode switch on the mouse.
3. Press and hold the Bluetooth pairing button (often located on the underside or a dedicated button) until the LED indicator flashes, indicating pairing mode.
4. On your device (computer, tablet, smartphone), go to Bluetooth settings and search for new devices.
5. Select "Amazon Basics Mouse" or a similar name from the list of available devices to pair.
6. Repeat for BT2 if connecting to a second Bluetooth device.



Image: The mouse in Bluetooth mode, illustrating effortless pairing with BT1 and BT2.

## 2.3. Wired USB Mode

1. Connect the provided USB Type-C cable to the mouse's charging port.
2. Connect the other end of the USB Type-C cable to an available USB port on your computer.
3. The mouse will function as a wired mouse and will also charge simultaneously.

## Operating Instructions

---

## 1. Button Functions

The mouse features 9 buttons for various functions:

- **Left Click:** Standard selection and activation.
- **Right Click:** Context menu.
- **Scroll Wheel Click:** Middle click, often used for opening links in new tabs or auto-scrolling.
- **DPI Adjustment Button:** Cycles through DPI settings.
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Backward Button:** Navigates backward in web browsers or file explorers.
- **Screenshot Button:** Captures a screenshot.
- **Search Button:** Opens a search function.
- **Desktop Button:** One-click return to desktop.



Image: Diagram showing the functions of the smart side buttons: Forward, Backward, Search, Screenshot, and One Click back to desktop.



Image: The mouse highlighting its contoured shape, quick DPI control button, and smart buttons for quick control.

## 2. DPI Adjustment

Press the DPI adjustment button (located behind the scroll wheel) to cycle through the available DPI settings (800, 1200, 1600, 2000, 2400). An LED indicator will briefly show the current DPI level.

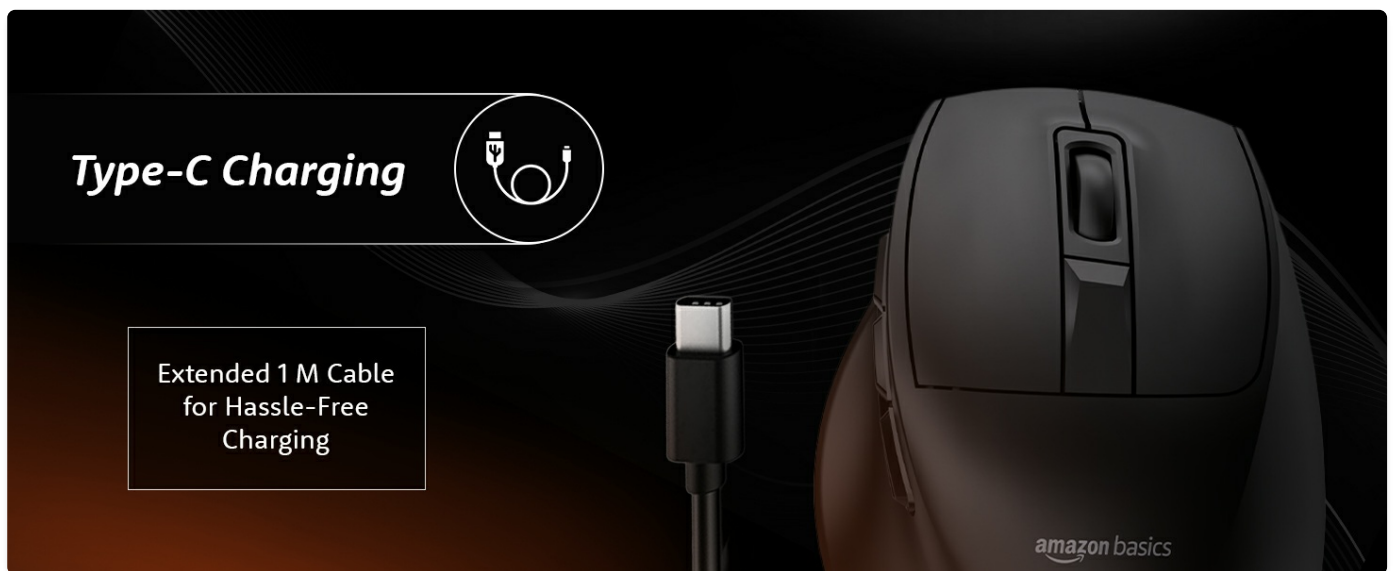


Image: Visual representation of adjustable DPI levels from 800 to 2400 for high-accuracy performance.



Image: The mouse with an overlay indicating 2400 High DPI Control for precision.

### 3. Speed-Adaptive Scroll Wheel

The scroll wheel automatically switches between precise click-to-click scrolling and hyper-fast scrolling depending on the speed of your scroll. This allows for efficient navigation through long documents or web pages.

### 4. Smart Device Switching

If you have paired the mouse with multiple devices (e.g., via 2.4G, BT1, BT2), you can switch between them using the mode switch on the underside of the mouse. This enables seamless control across different platforms.

## Charging and Battery

The mouse is equipped with a built-in 500mAh rechargeable battery. A full charge can last up to 70 days, depending on usage. Use the provided USB Type-C cable for charging. The LED indicator will show charging status (e.g., red for charging, off or green for fully charged).



Image: The mouse highlighting its built-in 500mAh rechargeable battery and Type-C charging capability.

## Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the device.
- **Storage:** Store the mouse in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the mouse when the low battery indicator appears.
- **Receiver Storage:** When not in use, store the USB 2.4G receiver in its designated slot on the mouse to prevent loss.

## Troubleshooting

| Problem                                  | Possible Cause                                                                              | Solution                                                                                                                                    |
|------------------------------------------|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Mouse not responding                     | Low battery; Incorrect mode selected; Receiver not plugged in (2.4G); Bluetooth not paired. | Charge the mouse; Ensure correct mode (2.4G/BT1/BT2/Wired) is selected; Plug in the USB receiver; Re-pair Bluetooth.                        |
| Intermittent disconnections              | Interference; Distance from receiver/device; Low battery.                                   | Move closer to the receiver/device; Remove sources of interference (e.g., other wireless devices); Charge the mouse.                        |
| Cursor movement is erratic or inaccurate | Dirty optical sensor; Mouse used on unsuitable surface; Incorrect DPI setting.              | Clean the optical sensor; Use a mouse pad or a smooth, non-reflective surface; Adjust DPI setting.                                          |
| Cannot pair via Bluetooth                | Mouse not in pairing mode; Device's Bluetooth is off; Already paired to maximum devices.    | Ensure mouse is in BT pairing mode (flashing LED); Turn on Bluetooth on your device; Forget previous pairings on your device and try again. |

## Specifications

| Feature                       | Specification                                  |
|-------------------------------|------------------------------------------------|
| Brand                         | amazon basics                                  |
| Model Number                  | ABKY-M660                                      |
| Connectivity Technology       | 2.4G Wireless, Bluetooth (BT1, BT2), USB Wired |
| Movement Detection Technology | Optical                                        |
| DPI Sensitivity               | 800, 1200, 1600, 2000, 2400 (Adjustable)       |
| Number of Buttons             | 9                                              |
| Battery Type                  | Rechargeable Lithium-ion                       |
| Battery Capacity              | 500mAh                                         |
| Battery Average Life          | Up to 70 days (50 hours of continuous use)     |
| Charging Port                 | USB Type-C                                     |
| Compatible Devices            | Laptop, Personal Computer, Smartphone, Tablet  |
| Color                         | Black                                          |
| Item Weight                   | 97 Grams                                       |

## Warranty and Support

This Amazon Basics product comes with a **1 Year Warranty** from the date of purchase. For warranty claims or technical support, please contact the manufacturer or authorized service center.

**Manufacturer:** YAS Co Ltd.

**Importer/Packer Contact Information:** Your Accessories Store, B-36, 3rd Floor, Mayapuri Industrial Area, Phase 1, New Delhi - 110064, India

Please retain your proof of purchase for warranty purposes.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0F389QTNV>

More documents and user manuals: <https://manuals.plus/>