

[manuals.plus](#) /

- › [Redkey](#) /
- › [Redkey M1 Electric Spin Mop User Manual](#)

Redkey M1

Redkey M1 Electric Spin Mop User Manual

Model: M1 | Brand: Redkey

1. PRODUCT OVERVIEW

The Redkey M1 Electric Spin Mop is a cordless cleaning device designed for efficient and effortless floor maintenance. It features a self-cleaning bucket, LED headlight, and water sprayer, making it suitable for various hard floor types including hardwood and tile.



Figure 1.1: Redkey M1 Electric Spin Mop and accessories.

Self-Cleaning Electric Spin Mop



Figure 1.2: Overview of Redkey M1 key features.

2. WHAT'S IN THE BOX

Verify that all components are present in your package:

- Cordless electric mop with LED light
- Self-Cleaning Bucket
- Adaptor (for charging)
- Aluminum tube (handle sections)
- Handle
- Water measuring cup
- 2 Cleaning pads
- 2 Waxing pads
- User Manual (this document)

What's in the Package

- ①Cordless electric mop with LED light
- ②Self- Cleaning Bucket
- ③Adaptor
- ④Water measuring cup
- ⑤4 Cleaning pad
- ⑥2 Waxing pad
- ⑦User Manual



Figure 2.1: Package contents of the Redkey M1 Electric Spin Mop.

3. ASSEMBLY

Follow these steps to assemble your Redkey M1 Electric Spin Mop:

1. **Attach Handle to Aluminum Tube:** Connect the handle section to the top of the aluminum tube. Ensure it clicks securely into place.
2. **Attach Aluminum Tube to Mop Head:** Connect the bottom of the aluminum tube to the mop head. Press the aluminum tube button to align and snap the sections together.
3. **Attach Mop Pads:** Align the cleaning or waxing pads with the hook-and-loop fasteners on the bottom of the mop head. Press firmly to secure them.

One-button start, One-button cleaning, One-button spraying.



Figure 3.1: Assembly and water filling points.

It can be adjusted to different angles to meet different needs

Dirt has no hiding places.



Figure 3.2: Mop head flexibility for reaching difficult areas.

4. OPERATING INSTRUCTIONS

4.1. Charging the Mop

Before first use, fully charge the mop. Connect the adaptor to the charging port located on the mop head. The indicator lights will show charging status. A full charge provides approximately 60 minutes of runtime.

High Efficiency & Long Life Electric Spin Mop

Cleans an entire house on once charge!



Figure 4.1: Extended runtime for whole-house cleaning.

4.2. Filling the Water Tank

Locate the water inlet cover on the mop head. Use the provided water measuring cup to fill the 250ml water tank with clean water. You may add a small amount of diluted floor cleaner suitable for your floor type. Do not overfill.

4.3. Mopping Operation

- Power On:** Press the ON/OFF button on the handle to start the mop. The LED headlight will illuminate.
- Adjust Handle:** The telescopic pole can be adjusted from 37 to 48.8 inches. Press the aluminum tube button to extend or retract the handle to a comfortable height. The mop head also swivels 90 degrees for easy maneuverability under furniture.
- Spray Water:** Press and hold the water spray button on the handle to release water onto the floor. Release the button to stop spraying.
- Clean:** Guide the mop across the floor. The dual motors (250r/min) will spin the pads to clean effectively.
- Dry Mode:** For instant drying, release the water spray button and continue moving the mop over the wet area.

Works on a wide variety of floor types



Figure 4.2: Suitable for various floor types including wood, marble, and tile.

Your browser does not support the video tag.

Video 4.1: Demonstration of the Redkey Electric Spin Mop with Self-Cleaning Bucket in use.

4.4. Self-Cleaning Function

To clean the mop pads and remove dirty water from the mop head:

1. Place the mop head into the self-cleaning bucket, ensuring it is properly seated.
2. Press and hold the spray button on the handle for 2 seconds to activate the auto-cleaning function. The mop will automatically clean and spin-dry the pads.
3. The self-cleaning process typically involves 15 seconds of cleaning followed by 30 seconds of scrubbing. It will stop automatically.
4. The self-cleaning bucket features separate compartments for clean and dirty water, ensuring effective cleaning.

Self-Cleaning Mop Bucket

Hold the spray button for 2 seconds to start auto-cleaning. Automatically stops after 15 seconds of cleaning + 30 seconds of scrubbing.

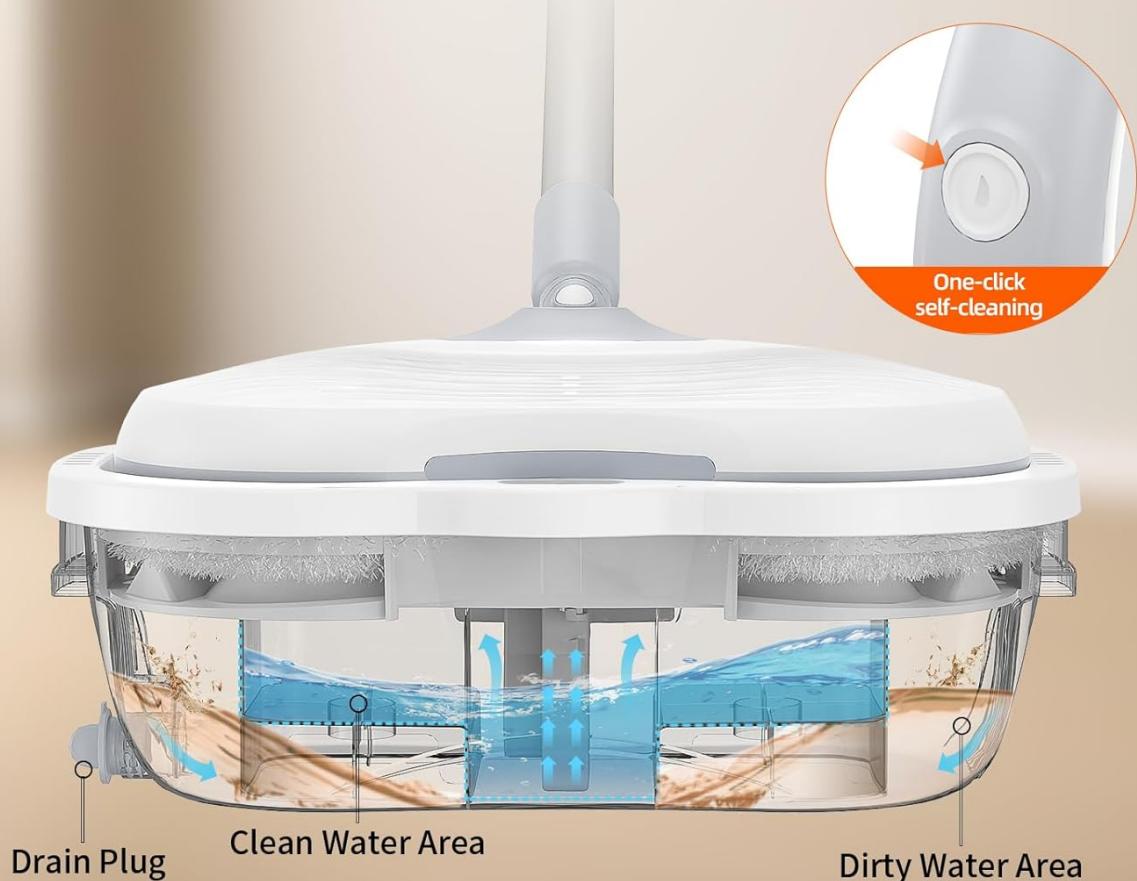


Figure 4.3: Self-cleaning mop bucket mechanism.

Self-Cleaning Electric Mop Turns Cleaning Into a Breeze

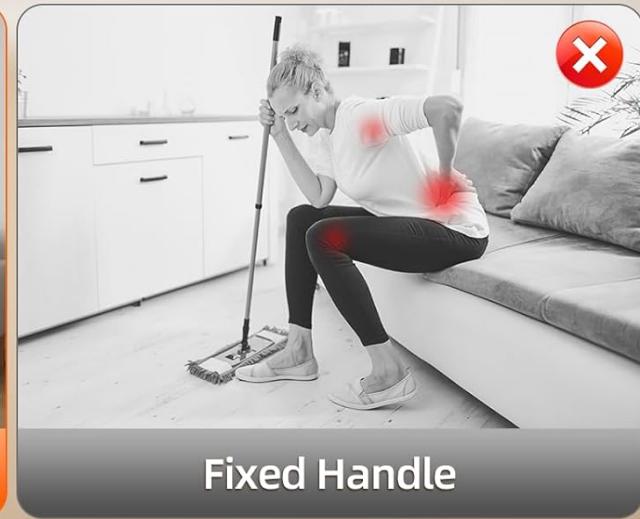


Figure 4.4: Benefits of the self-cleaning feature and retractable handle.

5. MAINTENANCE

5.1. Cleaning Mop Pads

The mop comes with both cleaning and waxing pads. After use, the pads can be removed from the mop head and washed. For optimal performance, regularly clean or replace the pads.

5.2. Emptying Dirty Water

After using the self-cleaning function, the dirty water will collect in a separate compartment of the bucket. Locate the drain plug on the side of the self-cleaning bucket and open it to empty the dirty water. Rinse the bucket with clean water after emptying.

5.3. Storage

The Redkey M1 is designed to stand upright for convenient storage. Ensure the mop is clean and dry before storing. Store in a cool, dry place away from direct sunlight.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mop not turning on.	Low battery or not charged.	Charge the mop fully using the provided adaptor.
No water spray.	Water tank is empty or clogged nozzle.	Refill the water tank. Check the spray nozzle for any blockages and clear if necessary.
Pads not spinning effectively.	Pads are too dirty or not properly attached.	Clean or replace the mop pads. Ensure pads are securely attached to the mop head.
Self-cleaning function not working.	Mop not correctly seated in the bucket or button not held long enough.	Ensure the mop head is fully seated in the self-cleaning bucket. Press and hold the spray button for 2 seconds.

7. SPECIFICATIONS

Model: M1

Brand: Redkey

Power: 60W

Motor Speed: 250r/min (Dual Motor)

Water Tank Capacity: 250ml

Runtime: Up to 60 minutes

Adjustable Pole Length: 37-48.8 inches

Item Weight: 11.88 pounds

Product Dimensions: 6 x 4 x 3 inches

Battery: 1 Lithium Ion battery (included)

Noise Level: Approximately 50dB

Surface Compatibility: Tile, Wood, Hard Floor

UPC: 765150878526

Country of Origin: China

8. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact Redkey customer service. Refer to the contact details provided on the product packaging or the official Redkey website.

Keep your purchase receipt as proof of purchase for warranty claims.