

JCL32FHDS, JCL43UHDS, EK43FHDTV, EK50UHDTV

Generic Remote Control User Manual

For JCL JCL32FHDS, JCL43UHDS, ENKOR EK43FHDTV, EK50UHDTV Televisions

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your new Generic remote control. This remote is designed to be compatible with various television models, including JCL JCL32FHDS, JCL43UHDS, ENKOR EK43FHDTV, and EK50UHDTV. Please read this manual thoroughly before using the product and retain it for future reference.

Package Contents

- 1 x Generic Remote Control
- (Batteries are typically not included and must be purchased separately)

2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the remote control or injury to yourself:

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not immerse the remote control in water or other liquids.
- Keep out of reach of children to prevent accidental ingestion of small parts or batteries.
- If batteries leak, remove them immediately and clean the battery compartment thoroughly. Avoid contact with skin and eyes.
- Dispose of used batteries according to local regulations.

3. SETUP

Battery Installation

The remote control requires two AAA alkaline batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.

3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Figure 3.1: Remote control with an indication of the battery compartment. The image displays the front of a black remote control with

various buttons, and the back where the battery cover is typically located.

4. OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote control and the TV's IR receiver.

Basic Functions

- **Power Button (●):** Press to turn the TV on or off.
- **Channel Up/Down (CH+/CH-):** Press to change channels.
- **Volume Up/Down (VOL+/VOL-):** Press to adjust the volume level.
- **Mute (M):** Press to mute or unmute the TV sound.
- **Input/Source:** Press to select different input sources (e.g., HDMI, AV).
- **Number Buttons (0-9):** Use to directly enter channel numbers.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Use to navigate menus and select options.
- **OK/Enter:** Confirms selections in menus.

Note: Specific button functions may vary slightly depending on your TV model. Refer to your TV's user manual for detailed information on its remote control functions.

5. MAINTENANCE

Cleaning the Remote Control

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface or internal components.

Battery Replacement

Replace the batteries when the remote control becomes unresponsive or its range decreases significantly. Follow the battery installation steps outlined in Section 3. Always replace both batteries at the same time with new alkaline batteries of the same type.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--------------------------------|--|---|
| Remote control is not working. | <ul style="list-style-type: none">• Batteries are dead or inserted incorrectly.• Obstruction between remote and TV.• Remote control is too far from the TV.• TV's IR receiver is blocked or faulty. | <ul style="list-style-type: none">• Replace batteries with new ones, ensuring correct polarity.• Remove any objects blocking the line of sight.• Move closer to the TV.• Check TV's IR receiver for obstructions. Test with another remote if available. |

| Problem | Possible Cause | Solution |
|--------------------------------|---|--|
| Some buttons are unresponsive. | <ul style="list-style-type: none"> • Low battery power. • Button is stuck or dirty. | <ul style="list-style-type: none"> • Replace batteries. • Clean the remote control, especially around the unresponsive button. |

7. SPECIFICATIONS

| | |
|--------------------------------|--|
| Brand | Generic |
| Compatible Devices | JCL JCL32FHDS, JCL43UHDS, ENKOR EK43FHDTV, EK50UHDTV Televisions |
| Connectivity Technology | Infrared (IR) |
| Controller Type | Button Control |
| Power Source | 2 x AAA Alkaline Batteries (not included) |
| Manufacturer | Infratex |

8. WARRANTY AND SUPPORT

Product Warranty

This product typically comes with a 1-year limited warranty from the date of purchase. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact the retailer or manufacturer's customer support. Refer to your purchase documentation for specific contact details.

