

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [wolfcraft](#) /

> [wolfcraft PRO SAFETY 18mm Snap-Off Blade Cutter - Model 4290000 User Manual](#)

wolfcraft 4290000

wolfcraft PRO SAFETY 18mm Snap-Off Blade Cutter - Model 4290000 User Manual

Professional-grade utility knife for precise and safe cutting tasks.

INTRODUCTION

Thank you for choosing the wolfcraft PRO SAFETY 18mm Snap-Off Blade Cutter, Model 4290000. This professional-grade utility knife is engineered for high performance and safety, featuring an ultra-sharp blade and optimal ergonomics for both left and right-handed users. It is ideal for cutting sheet materials, carpets, and wood. Please read this manual carefully before use to ensure safe and effective operation.



Image: The wolfcraft PRO SAFETY 18mm Snap-Off Blade Cutter, showcasing its ergonomic design and retractable blade.

SAFETY INSTRUCTIONS

- Always handle the blade with extreme care. Blades are very sharp.
- Keep the cutter out of reach of children.
- Wear appropriate personal protective equipment, such as safety gloves and eye protection, when using the cutter.
- Ensure the blade is fully retracted when not in use.
- Only use the cutter for its intended purpose.
- Dispose of used blades safely in a designated container.



Image: The automatic blade retraction safety feature of the wolfcraft PRO SAFETY cutter, showing the blade retracting when pressure is released.

SETUP AND BLADE INSTALLATION

The wolfcraft PRO SAFETY cutter features tool-free blade changes for convenience.

1. To open the blade housing, locate the release mechanism at the rear of the cutter.

2. Press the release button or slide the cover to open the housing.
3. Carefully remove the old blade.
4. Insert a new 18mm snap-off blade (e.g., wolcraft PRO SHARP black blade) into the blade guide. Ensure it is seated correctly.
5. Close the blade housing until it clicks securely into place.

Always ensure the blade is securely locked before use.

Your browser does not support the video tag.

Video: Demonstrates the tool-free blade change process and various cutting applications of the wolcraft PRO SAFETY cutter.

OPERATING INSTRUCTIONS

General Use

- Extend the blade to the desired length using the slider. For safety, extend only the necessary segment.
- The central blade slider allows for comfortable use by both left and right-handed individuals.
- The ergonomic handle with finger grooves and a soft-grip zone provides optimal grip and control, preventing slippage during use.
- Apply firm, even pressure when cutting.
- For materials like cardboard, film, carpet, cork, and wood, ensure a stable cutting surface.



Image: Detailed view of the wolcraft PRO SAFETY cutter's ergonomic design, highlighting features like grip zones and blade guide.

lame ultra-tranchante

pour les utilisations professionnelles

- ✓ carton
- ✓ film
- ✓ moquette
- ✓ liège
- ✓ bois

Image: A user demonstrating the wolcraft PRO SAFETY cutter for cutting a rolled material, highlighting its versatility.

Safety Features

- **Automatic Blade Retraction:** The blade automatically retracts into the housing when pressure is released, minimizing the risk of accidental cuts.
- **Automatic Locking Function:** For tasks requiring a fixed blade, engage the automatic locking function to keep the blade extended.



Image: Illustrates the automatic locking function, allowing the blade to remain extended for specific cutting needs.

MAINTENANCE

Blade Replacement

When the blade becomes dull, snap off the used segment to reveal a fresh, sharp edge. The cutter includes a removable cap with a snap-off aid for safe blade segment removal.

1. Retract the blade fully.
2. Remove the cap from the rear of the cutter.
3. Insert the dull blade segment into the slot on the cap.
4. Carefully snap off the dull segment.
5. Dispose of the snapped-off segment safely.
6. Reattach the cap securely.



Image: The removable cap with an integrated snap-off aid, demonstrating how to safely break off dull blade segments.

Cleaning and Storage

- Clean the cutter regularly to remove debris and ensure smooth operation of the blade slider.
- Use a dry cloth to wipe down the metal and plastic components. Avoid harsh chemicals.
- Store the cutter in a dry place with the blade fully retracted.

TROUBLESHOOTING

Blade not extending/retracting smoothly

- **Check for debris:** Dust or material fragments can obstruct the blade mechanism. Clean the blade guide thoroughly.
- **Blade condition:** A bent or damaged blade can cause issues. Replace the blade if necessary.

Poor cutting performance

- **Dull blade:** Snap off the dull segment to expose a fresh edge, or replace the entire blade if all segments are used.
- **Incorrect technique:** Ensure you are applying consistent pressure and using the correct angle for the material being cut.

SPECIFICATIONS

Feature	Detail
Model Number	4290000
Blade Size	18 Millimetres
Material (Body)	Metal
Material (Handle)	Thermoplastic Rubber (TPR)
Material (Blade)	Stainless Steel
Color	Black and Turquoise
Ergonomics	Optimized for left and right-handed users
Safety Features	Automatic blade retraction, automatic locking function, removable cap with snap-off aid

WARRANTY INFORMATION

wolcraft products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product or visit the official wolcraft website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

Should you have any questions, require assistance, or need to order replacement parts, please contact wolcraft customer support. Contact information can be found on the product packaging or the official wolcraft website.

Manufacturer: wolcraft GmbH, Wolffstraße 1, 56746 Kempenich, Germany