



Manuals.plus /

› Bontempi /

› Bontempi Mini Wireless Unicorn Speaker (Model 49 01001) User Manual

## Bontempi 49 01001

# Bontempi Mini Wireless Unicorn Speaker User Manual

MODEL: 49 01001

## 1. Introduction

---

Thank you for choosing the Bontempi Mini Wireless Unicorn Speaker. This compact and portable speaker is designed for easy wireless connection to your audio devices, making it ideal for children's entertainment and parties. Please read this manual carefully before using the product to ensure proper operation and safety.

## 2. Safety Information

---

- **Adult Supervision:** This product is intended for use under adult supervision, especially for young children.
- **Choking Hazard:** Keep small parts away from children to prevent choking.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or excessive moisture.
- **Power Source:** Use only the specified charging method and power source.
- **Temperature:** Do not expose the speaker to extreme temperatures or direct sunlight.
- **Cleaning:** Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.

## 3. Package Contents

---

Ensure all items are present in the package:

- 1 x Bontempi Mini Wireless Unicorn Speaker
- 1 x Charging Cable (USB-A to Micro-USB, typically included)
- 1 x User Manual (this document)



Image 1: Bontempi Mini Wireless Unicorn Speaker in its retail packaging.

## 4. Setup

### 4.1 Charging the Speaker

1. Locate the Micro-USB charging port on the speaker.
2. Connect the small end of the charging cable to the speaker's charging port.
3. Connect the larger USB-A end of the cable to a standard USB power adapter (not included) or a computer's USB port.
4. The charging indicator light (if present) will illuminate during charging and turn off or change color when fully charged.
5. A full charge typically takes 1-2 hours.

### 4.2 Powering On/Off

- To power on, press and hold the power button (usually located on the bottom or side) for a few seconds until you hear an audible prompt or see an indicator light.
- To power off, press and hold the power button again for a few seconds.

### 4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (indicated by a flashing LED light, usually blue). If it doesn't enter pairing mode automatically, refer to the operating instructions for manual pairing.
2. On your audio device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices. The speaker will typically appear as "Bontempi Speaker" or a similar name.
4. Select the speaker from the list to pair. Once paired, you will hear a confirmation sound, and the LED light will stop flashing and remain solid.



Image 2: Front and back view of the Bontempi Mini Wireless Unicorn Speaker, showing the charging port and speaker grille.

## 5. Operating Instructions

### 5.1 Playing Audio

Once paired, open your preferred music or audio application on your connected device and begin playback. Audio will stream wirelessly to the Bontempi Mini Wireless Unicorn Speaker.

### 5.2 Volume Control

Volume is primarily controlled via your connected audio device. Some speakers may have touch controls for volume adjustment; refer to the product's physical interface for specific buttons or touch areas.

### 5.3 Phone Function (Hands-Free Calling)

If your speaker supports a phone function, you can answer incoming calls through the speaker. When a call comes in, press the multi-function button (often the power button) once to answer. Press again to end the call.

### 5.4 Selfie Shutter Function

Some models include a selfie shutter function. After pairing with your phone, open your phone's camera app. Press the multi-function button on the speaker to remotely trigger your phone's camera shutter.

### 5.5 True Wireless Stereo (TWS) Pairing (If applicable)

If you have two Bontempi Mini Wireless Speakers of the same model, they might support TWS pairing for stereo sound. Refer to specific instructions provided with your product for TWS pairing, which typically involves powering on both speakers and pressing a specific button on one to initiate TWS pairing.

## 6. Maintenance

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.

## 7. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or depleted.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; Bluetooth is off on device; device is too far.	Ensure speaker is in pairing mode (flashing LED). Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters).
No sound.	Volume is too low; device is not playing audio; speaker is not connected.	Increase volume on both speaker and connected device. Ensure audio is playing on your device. Verify Bluetooth connection.
Poor audio quality.	Device is too far; interference.	Move device closer to speaker. Avoid obstacles between speaker and device.

## 8. Specifications

Feature	Detail
Brand	Bontempi
Model Number	49 01001
Color	Unicorn
Product Dimensions	4.2 x 4.5 x 4.2 cm
Weight	70 grams
Power Source	Battery Powered
Connectivity Technology	Wireless (Bluetooth)
Audio Output Mode	Stereo
Control Method	Touch
Material	Plastic
Waterproof	False
Recommended Uses	For parties, For children
Compatible Devices	Wireless audio devices

## 9. Warranty and Support

---

### 9.1 Warranty Information

This Bontempi product comes with a limited warranty. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

### 9.2 Customer Support

For technical assistance, warranty inquiries, or any questions regarding your Bontempi Mini Wireless Unicorn Speaker, please contact Bontempi customer support through their official website or the retailer where the product was purchased. Please have your model number (49 01001) and proof of purchase ready when contacting support.