

[Manuals.plus](#) /

› [Bontempi](#) /

› Bontempi 32-Key Electronic Keyboard with Microphone User Manual

Bontempi 12 3200

Bontempi 32-Key Electronic Keyboard with Microphone User Manual

Model: 12 3200

INTRODUCTION

Thank you for choosing the Bontempi 32-Key Electronic Keyboard with Microphone. This instrument is designed to provide an engaging and educational musical experience for young musicians and beginners. It features a compact design, a variety of sounds and rhythms, and a dedicated learning function to help develop musical skills. Please read this manual carefully to ensure proper use and maintenance of your new electronic keyboard.

SAFETY INFORMATION

- **Adult Supervision:** This product should be used under adult supervision.
- **Power Source:** Use only the specified power sources (AC adapter, USB cable, or batteries). Do not mix old and new batteries, or different types of batteries.
- **Water and Moisture:** Keep the keyboard away from water and moisture to prevent electric shock or damage.
- **Cleaning:** Clean the keyboard with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Disassembly:** Do not attempt to disassemble or modify the keyboard. Refer all servicing to qualified personnel.

WHAT'S IN THE BOX

Upon unpacking, please ensure all items are present:

- Bontempi 32-Key Electronic Keyboard
- Microphone
- User Manual (this document)



Image: The Bontempi 32-Key Electronic Keyboard with its included microphone, showcasing its compact design.

SETUP

1. **Unpack the Keyboard:** Carefully remove the electronic keyboard and all accessories from its packaging.
2. **Power Connection:**
 - **AC Adapter (not included):** Connect a compatible AC adapter (not included) to the keyboard's power input and then to a wall outlet.
 - **USB Cable (not included):** Connect a compatible USB cable (not included) to the keyboard's USB port and to a USB power source (e.g., computer, USB wall adapter).
 - **Batteries (not included):** Open the battery compartment (usually on the underside), insert the required number of batteries (e.g., AA or AAA, refer to compartment markings) ensuring correct polarity (+/-), and close the compartment securely.
3. **Microphone Connection:** Plug the microphone into the designated microphone input jack on the keyboard.

4. **Power On:** Locate the power button (or switch) and turn the keyboard ON.

OPERATING INSTRUCTIONS

1. **Playing Notes:** Press any of the 32 keys to play musical notes.
2. **Selecting Sounds:** Use the "Sound" or "Tone" selection buttons to switch between the 2 available instrument sounds.
3. **Choosing Rhythms:** Use the "Rhythm" selection buttons to choose from the 8 available rhythmic patterns. Press the "Start/Stop" button to begin or end the rhythm.
4. **Playing Melodies:** Use the "Melody" selection buttons to choose from the 8 pre-programmed melodies. Press the "Play" button to start a melody.
5. **Learning Function (Okon Mode):**
 - Activate the "Okon" mode using its dedicated button.
 - Follow the illuminated keys or on-screen prompts (if available) to learn how to play specific songs or exercises.
6. **Recording and Playback:**
 - Press the "Record" button to begin recording your performance.
 - Play your desired notes and rhythms.
 - Press the "Stop" button to end recording.
 - Press the "Playback" or "Replay" button to listen to your recorded performance.
7. **Volume Control:** Adjust the master volume using the dedicated volume control buttons or knob to your preferred level.
8. **Using the Microphone:** Speak or sing into the microphone while playing the keyboard. The microphone output will be mixed with the keyboard sound.

FEATURES OVERVIEW

- **32-Key Electronic Keyboard:** Compact design with 32 keys, suitable for beginners and young musicians.
- **Integrated Microphone:** Allows for singing along or vocal recording.
- **2 Instrument Sounds:** Explore different tonal qualities.
- **8 Rhythmic Patterns:** Provides various background beats for practice and play.
- **8 Pre-programmed Melodies:** Enjoy and learn from built-in songs.
- **"Okon" Learning Function:** A dedicated mode to assist in learning musical basics.
- **Recording and Playback:** Capture and review your musical creations.
- **Adjustable Volume:** Control the output level for comfortable listening.
- **Flexible Power Options:** Can be powered by AC adapter, USB cable, or batteries (not included).

MAINTENANCE

- **Cleaning:** Wipe the keyboard surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water, then wipe dry immediately. Avoid using harsh chemicals or abrasive materials.

- **Storage:** When not in use, store the keyboard in a cool, dry place, away from direct sunlight and extreme temperatures. If storing for an extended period, remove batteries to prevent leakage.
- **Battery Replacement:** Replace all batteries at the same time. Do not mix old and new batteries. Dispose of used batteries responsibly according to local regulations.
- **Microphone Care:** Handle the microphone gently. Avoid dropping it or exposing it to excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard does not power on.	No power, low batteries, or incorrect power connection.	• Ensure the AC adapter or USB cable is securely connected and the power source is active. • Replace all batteries with fresh ones, ensuring correct polarity. • Check if the power button/switch is fully engaged.
No sound from the keyboard.	Volume too low, mute activated, or faulty connection.	• Increase the master volume. • Ensure no headphones are plugged in if you expect sound from the speakers. • Check if any mute function is active.
Microphone is not working.	Microphone not connected, faulty microphone, or volume too low.	• Ensure the microphone is securely plugged into its jack. • Check the microphone's volume settings if available. • Test with another microphone if possible to rule out a faulty unit.
Batteries drain quickly.	Keyboard not fully turning off, or continuous use.	• Ensure the power button is fully pressed to turn off the device when not in use. • Consider using an AC adapter or USB power source for extended play sessions to conserve battery life.

SPECIFICATIONS

Feature	Detail
Brand	Bontempi
Model Number	12 3200
UPC	047663335391
Number of Keys	32

Feature	Detail
Instrument Type	Electronic Keyboard
Color	Black
Material	Plastic
Item Dimensions (L x W x H)	46.5 x 12.5 x 3.2 cm
Power Source	AC Adapter, Battery
Educational Objective	Musical Learning
Manufacturer Recommended Minimum Age	3.0 years
Manufacturer Recommended Maximum Age	3 years (Note: This may be a typo in source data, typically for older children)

WARRANTY AND SUPPORT

Warranty Information: The Bontempi 32-Key Electronic Keyboard with Microphone comes with a **2 Year Limited Warranty** from the manufacturer. Please retain your proof of purchase for warranty claims.

Customer Support: For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Bontempi customer service. Refer to the product packaging or the official Bontempi website for the most up-to-date contact information.

You can visit the official Bontempi store for more information: [Bontempi Store](#)

© 2026 Bontempi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question