



Manuals.plus /

› CUSHYBITE /

› CUSHYBITE OP4040408 40V Lithium-Ion 4.0 Ah Battery and Fast Charger Kit Instruction Manual

CUSHYBITE OP4040408

CUSHYBITE OP4040408 40V Lithium-Ion 4.0 Ah Battery and Fast Charger Kit Instruction Manual

Model: **OP4040408** | Brand: **CUSHYBITE**

1. IMPORTANT SAFETY INFORMATION

Read all instructions before using this product. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

- **Battery Safety:** Do not immerse battery in water or other fluids. Do not store battery where temperature may reach or exceed 125°F (50°C). Do not incinerate the battery.
- **Charger Safety:** Do not charge battery in a damp or wet location. Do not use the charger if the cord or plug is damaged. Do not use the charger for any purpose other than charging the specified battery pack.
- **General Safety:** Keep children away from the battery and charger. Do not short-circuit the battery terminals. Use only with specified tools and chargers.

2. PRODUCT OVERVIEW

The CUSHYBITE OP4040408 kit includes a 40V Lithium-Ion 4.0 Ah battery and a fast charger. This system is designed to provide reliable power and efficient charging for compatible 40V tools.



Image 1: The CUSHYBITE 40V Lithium-Ion 4.0 Ah Battery and Fast Charger Kit.

3. SETUP

3.1 Unpacking

1. Carefully remove all components from the packaging.
2. Inspect the battery and charger for any signs of damage. Do not use if damaged.
3. Retain packaging materials for future storage or transport.

3.2 Initial Charging

It is recommended to fully charge the battery before first use.



Image 2: The CUSHYBITE 40V Fast Charger.

1. Plug the charger into a standard 120V AC outlet. The charger's LED indicator will show its status.
2. Align the battery with the charger port and slide it in until it clicks securely into place.
3. Allow the battery to charge until the charger's LED indicates a full charge.

3.3 Battery Installation (into compatible tool)



Image 3: The CUSHYBITE 40V Lithium-Ion 4.0 Ah Battery.

1. Ensure the tool is turned off before installing the battery.
2. Align the battery with the battery port on your compatible 40V tool.
3. Slide the battery into the tool until it clicks securely into place. The quick-release button ensures effortless installation and removal.
4. To remove, press the quick-release button and slide the battery out.

4. OPERATING INSTRUCTIONS

4.1 Charging the Battery

- Connect the charger to a power source.
- Insert the 40V battery into the charger.
- The charger's LED indicators will show the charging status. A 4.0 Ah battery typically charges in under an hour.
- Once fully charged, remove the battery from the charger.

4.2 Using the Battery

- Ensure the battery is fully charged before beginning tasks.

- Insert the battery into a compatible 40V tool as described in Section 3.3.
- Operate the tool according to its specific instruction manual.
- The 4.0 Ah battery provides extended runtime for demanding tasks.

4.3 LED Fuel Gauge

The battery features a high-visibility LED fuel gauge. Press the button on the battery to illuminate the LEDs, indicating the remaining power level. This allows for easy monitoring of battery life.

5. MAINTENANCE

5.1 Battery Care

- Keep the battery clean and free of debris.
- Avoid exposing the battery to extreme temperatures.
- Do not attempt to disassemble the battery pack.

5.2 Charger Care

- Regularly inspect the charger cord and plug for damage.
- Clean the charger's ventilation slots to ensure proper airflow and prevent overheating.
- Store the charger in a dry, indoor location.

5.3 Storage

- Store the battery and charger in a cool, dry place, away from direct sunlight and moisture.
- For long-term storage, charge the battery to approximately 50% capacity.
- Keep out of reach of children.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Battery not charging	Charger not plugged in; Battery not properly seated; Damaged charger/battery	Ensure charger is plugged in; Re-seat battery firmly; Inspect for damage, replace if necessary
Battery not powering tool	Battery not charged; Battery not properly seated; Tool malfunction	Charge battery fully; Re-seat battery firmly; Consult tool's manual or contact tool support
Charger LED not indicating status	No power to charger; Faulty charger	Check power outlet; Contact customer support for charger replacement

7. SPECIFICATIONS

- **Model Number:** OP4040408
- **Battery Type:** Lithium-Ion
- **Battery Voltage:** 40V

- **Battery Capacity:** 4.0 Ah
- **Charger Type:** Fast Charger
- **Approximate Charge Time (4.0 Ah battery):** Under 1 hour
- **Item Weight:** 4.8 pounds (kit)
- **Package Dimensions:** 9.5 x 8 x 4.25 inches

8. WARRANTY INFORMATION

This CUSHYBITE OP4040408 40V Lithium-Ion 4.0 Ah Battery and Fast Charger Kit is backed by a **3-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation included with your product or contact CUSHYBITE customer support.

9. SUPPORT

For technical assistance, troubleshooting, or warranty inquiries, please contact CUSHYBITE customer support. Refer to the contact information provided on the product packaging or the official CUSHYBITE website.

Online Resources: Visit the official CUSHYBITE website for FAQs, product registration, and additional support materials.