

OUKITEL C59 Pro

OUKITEL C59 Pro Android 15 Smartphone User Manual

1. INTRODUCTION

Welcome to the OUKITEL C59 Pro user manual. This guide provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new Android 15 smartphone. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

2. SAFETY INFORMATION

To prevent injury to yourself or others, or damage to your device, read all safety information before using the device. Keep this manual for future reference.

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Use only OUKITEL-approved chargers, batteries, and accessories.
- Avoid dropping or subjecting the device to severe impact.
- Do not disassemble, modify, or repair the device yourself.
- Maintain a safe distance from medical devices to avoid interference.
- Dispose of the device and its components responsibly according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in your product box:

- OUKITEL C59 Pro Smartphone
- Phone Case
- USB Cable (Type-C)
- SIM Ejector Tool
- Power Adapter

4. DEVICE OVERVIEW

Familiarize yourself with the physical features and components of your OUKITEL C59 Pro smartphone.



Image: General view of the OUKITEL C59 Pro smartphone, showcasing its sleek design and rear camera module.

4.1 Physical Buttons and Ports

- **Power Button:** Located on the side, used to power on/off the device or wake/sleep the screen. Integrates fingerprint recognition.
- **Volume Buttons:** Located on the side, used to adjust media volume and ringtone volume.
- **USB Type-C Port:** Located at the bottom, used for charging and data transfer.
- **SIM/MicroSD Card Slot:** Located on the side, for inserting Nano SIM cards and a MicroSD card.
- **110lm LED Flashlight:** An exclusive physical flashlight located at the top of the device, activated by a dedicated button.

4.2 Display

The OUKITEL C59 Pro features a large 6.88-inch HD+ display with a 90Hz refresh rate and 450 nits brightness, providing a clear and smooth visual experience.

6.88 Inch Large Display

 **6.88HD+**
Aspect Ratio

 **450 nits**
Brightness

 **90 Hz**
Refresh Rate

 **1640*720**
Resolution



The image shows a large smartphone with a 6.88-inch display. The screen displays a snowboarder in mid-air, performing a trick. The snowboarder is wearing a dark jacket and helmet. The snowboard is blue with a white lightning bolt logo. The background is a snowy mountain landscape. Large white numbers '90147' are overlaid on the background behind the phone.

Image: The OUKITEL C59 Pro's 6.88-inch HD+ display, highlighting its size and visual clarity.

4.3 Cameras

The device is equipped with a dual rear camera system, featuring a 13MP main camera, and a 5MP front camera for selfies and video calls.



Image: Close-up of the OUKITEL C59 Pro's rear camera module and examples of photos taken with the 13MP main camera and 5MP front camera.

4.4 Flashlight

The OUKITEL C59 Pro features a powerful 110 lumen LED flashlight at the top. This flashlight can be activated instantly by pressing a dedicated physical button on the side of the phone, even when the screen is locked.

Fearless in The Dark

110LM LED Flashlight
Illuminates any Darkness.



Image: The OUKITEL C59 Pro's 110lm LED flashlight illuminating dark environments, demonstrating its brightness and utility in various scenarios.

5. SETUP

5.1 Inserting SIM and MicroSD Cards

Your OUKITEL C59 Pro supports Dual Nano SIM cards and a MicroSD card for expandable storage up to 1TB.

1. Locate the SIM card tray on the side of the device.
2. Insert the SIM ejector tool into the small hole next to the tray to open it.
3. Place your Nano SIM cards and/or MicroSD card into the designated slots on the tray, ensuring correct orientation.
4. Gently push the tray back into the device until it clicks into place.



Image: The SIM card tray of the OUKITEL C59 Pro, showing slots for two Nano SIM cards and one MicroSD card.

5.2 Charging the Device

Before first use, fully charge your OUKITEL C59 Pro. The device supports 18W fast charging.

1. Connect the USB Type-C cable to the charging port at the bottom of the phone.
2. Connect the other end of the USB cable to the power adapter.
3. Plug the power adapter into a wall outlet.
4. A full charge typically takes approximately four hours.



Image: Visual representation of the OUKITEL C59 Pro's 10000mAh battery capacity, indicating extended standby, talk, flashlight, and video playback times.

5.3 Powering On/Off

- **To Power On:** Press and hold the Power button until the OUKITEL logo appears.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

6. OPERATING YOUR SMARTPHONE

6.1 Android 15 Operating System

Your OUKITEL C59 Pro runs on the latest Android 15 operating system, offering enhanced energy efficiency, privacy protection, and multi-device integration capabilities optimized with artificial intelligence.



Image: A visual representation of the Android 15 operating system interface, showcasing its modern design and various application icons.

6.2 Biometric Security (Fingerprint & Face ID)

Unlock your device securely using the side-mounted fingerprint sensor or Face ID recognition.

- **Fingerprint Recognition:** Register your fingerprints in the Security settings. To unlock, simply place your registered finger on the side power button.
- **Face ID:** Set up Face ID in the Security settings. To unlock, hold the phone in front of your face.

6.3 Connectivity Features (NFC, GPS)

The OUKITEL C59 Pro supports NFC for contactless payments and data transfer, and GPS for navigation and location services.

- **NFC:** Enable NFC in Settings > Connected devices > Connection preferences > NFC. Tap your phone to compatible devices for quick pairing or payments.
- **GPS:** Location services are enabled by default. You can manage them in Settings > Location.

6.4 Memory and Storage

The device comes with 24GB RAM (8GB physical + 16GB virtual) and 256GB internal storage, expandable up to 1TB via MicroSD card.



Image: A graphical representation of the OUKITEL C59 Pro's memory configuration, showing 24GB RAM (8GB + 16GB expansion) and 256GB ROM (expandable to 1TB).

6.5 OTG Functionality

The OUKITEL C59 Pro supports OTG (On-The-Go) reverse charging, allowing you to transfer data to other devices or use your phone as an emergency power bank.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your smartphone.

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the device. Avoid using harsh chemicals or abrasive materials.

- **Software Updates:** Regularly check for and install system updates to ensure your device has the latest features and security patches. Go to Settings > System > System update.
- **Battery Care:** Avoid fully discharging the battery frequently. For long-term storage, charge the battery to about 50%.
- **Storage Management:** Periodically clear unnecessary files and apps to free up storage space and improve performance.

8. TROUBLESHOOTING

If you encounter issues with your device, try the following solutions:

- **Device Not Responding:** Press and hold the Power button for about 10-15 seconds to force a restart.
- **Apps Crashing:** Clear the cache and data of the problematic app in Settings > Apps > [App Name] > Storage. If the issue persists, uninstall and reinstall the app.
- **Poor Battery Life:** Check battery usage in Settings > Battery to identify power-hungry apps. Reduce screen brightness, disable unnecessary features like GPS or Wi-Fi when not in use.
- **Network Issues:** Ensure SIM cards are correctly inserted. Try restarting the device. Check network settings or contact your service provider.
- **Overheating:** Avoid using the device while charging or during prolonged heavy usage. Close background apps.
- **Factory Reset:** As a last resort, if software issues persist, you can perform a factory reset. **Warning: This will erase all data on your device. Back up important data before proceeding.** Go to Settings > System > Reset options > Erase all data (factory reset).

9. SPECIFICATIONS

Detailed technical specifications for the OUKITEL C59 Pro smartphone.

Feature	Specification
Brand	OUKITEL
Model Name	OUKITEL C59 Pro
Operating System	Android 15
Installed RAM Size	24 GB (8GB physical + 16GB virtual)
Storage Capacity	256 GB
Max Supported Flash Memory Size	1024 GB (1TB)
Screen Size	6.88 Inches
Resolution	1640 x 720 Pixels
Refresh Rate	90 Hz
Display Type	LCD

Cellular Technology	4G
Connectivity Technology	4G
Color	GREEN
Number of SIM Card Slots	Dual SIM
SIM Card Size	Nano
Connector Type	USB Type C
Form Factor	Bar
Biometric Security Feature	Fingerprint Recognition, Face ID
Water Resistance Level	Not Waterproof
Headphone Jack	None
Rear Camera Resolution	13 MP
Number of Rear Cameras	2
Number of Front Cameras	1
Video Capture Resolution	1080p
Frame Rate	30fps, 60fps, 120fps
Battery Capacity	10000 mAh
Battery Life	50 Hours (Talk Time)
GPS	Yes
Included Components	Phone case, USB cable, SIM ejector tool, Power adapter
Specific Product Uses	Gaming, Photography, Streaming, Video Conferencing

10. WARRANTY AND SUPPORT

10.1 Warranty Information

The OUKITEL C59 Pro smartphone comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, warranty claims, or any other inquiries regarding your OUKITEL C59 Pro, please contact OUKITEL customer support through their official website or the contact information provided with your purchase. Ensure you have your device model and purchase details ready when contacting support.

