

[Manuals.plus](#) /

› [FELEMAN](#) /

› FELEMAN Mini DVD Player User Manual

FELEMAN Mini DVD Player (B0F3CH322W)

FELEMAN Mini DVD Player

USER MANUAL

Model: Mini DVD Player

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your FELEMAN Mini DVD Player. This compact and versatile player supports a wide range of disc and media formats, offering 1080P video output, HDMI and AV connectivity, and USB/TF card input for enhanced media playback. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

Package Contents

Please verify that all items listed below are included in your package:

- 1 x Compact DVD Player
- 1 x HDMI Cable
- 1 x AV Cable
- 1 x USB Cable
- 1 x Remote Control
- 1 x Power Adapter
- 1 x User Manual

What's in the box?

① Remote Control

② USB cable

③ User Manual

④ DVD Player

⑤ AV cable

⑥ HDMI cable



Figure 1: Included accessories and the FELEMAN Mini DVD Player.

Product Overview

Familiarize yourself with the various components and controls of your Mini DVD Player and its remote control.



- ① Open or Close the disc cover
- ② Pause/Play
- ③ Stop
- ④ Previous
- ⑤ Next
- ⑥ Repeat
- ⑦ Switch DVD/USB mode
- ⑧ Power ON/OFF

- ⑩ Remote control receiving window
- ⑨ Display screen

- ⑪ Volume adjustment
- ⑫ Earphone /AUX out port
- ⑬ TF card port
- ⑭ USB port
- ⑮ AV OUT port
- ⑯ HDMI OUT port
- ⑰ Power port

Figure 2: Front and rear views of the DVD player with labeled controls and ports, alongside the remote control.

- 1. Open or Close the disc cover
- 2. Pause/Play
- 3. Stop
- 4. Previous
- 5. Next
- 6. Repeat

7. Switch DVD/USB mode
8. Power ON/OFF
9. Display screen
10. Remote control receiving window
11. Volume adjustment
12. Earphone / AUX out port
13. TF card port
14. USB port
15. AV OUT port
16. HDMI OUT port
17. Power port (DC 5V)

Setup Instructions

Follow these steps to connect your FELEMAN Mini DVD Player to your television or projector.

1. Power Connection

- Connect the provided USB cable to the player's Power port (DC 5V).
- Connect the other end of the USB cable to the power adapter, then plug the adapter into a wall outlet.
- Alternatively, the player can be powered via a car charger, power bank, or TV USB charger using the provided USB cable.

Memory Playback & Fast Reading

Not included rechargeable batteries

USB cable is included



Wall
Charger



Car
Charger



Bank
Power



TV USB
Charger

Figure 3: Powering the DVD player using different sources.

2. Connecting to a Display Device

The player offers both HDMI and AV (RCA) output options for compatibility with various display devices.

- **HDMI Connection (Recommended for Smart TVs, Projectors, Monitors):**

Connect one end of the HDMI cable to the HDMI OUT port on the DVD player and the other end to an HDMI input port on your TV, projector, or monitor. Select the corresponding HDMI input on your display device.

- **AV Connection (For Older TVs or Analog Devices):**

Connect the AV cable (red, white, yellow RCA connectors) to the AV OUT port on the DVD player. Match the colors of the connectors to the corresponding input ports on your TV. Select the AV input on your display device.



Figure 4: Connection options for the DVD player to various display devices.

Operating Instructions

1. Disc Playback

- Press the Power ON/OFF button to turn on the player.
- Press the "Open or Close the disc cover" button to open the disc tray.
- Place a compatible DVD or CD disc gently onto the disc tray with the label side facing up.
- Close the disc cover. The player will automatically begin reading the disc.
- Use the remote control or front panel buttons (Play/Pause, Stop, Previous, Next) to control playback.

2. USB/TF Card Playback

- Insert a USB flash drive into the USB port or a TF card into the TF card port. Ensure the storage device is formatted to FAT32 and does not exceed 32GB.
- Press the "Switch DVD/USB mode" button on the player or remote to switch to USB/TF mode.
- Navigate through your media files using the remote control.
- Supported media formats for USB/TF card include: MPEG-1V, MPEG-2V, H.263, XVID, DX50, DIVX, MP3, MP2, WMA, AC3, PCM, JPG (resolution up to 720p).
- **Note:** The player does not support MP4 files or Blu-ray Discs.

Region Free & Multiple Formats Support

Do not support blue-ray disc and MP4 files.



DVD Video / DVD±R / DVD±RW / VCD / Xvid / CD / CD-R / CD-RW / MP3 / WMA



MPEG-1V, H.263, XVID
MPEG-2V, DX50, DIVX



MP3, MP2,
AC3, PCM



JPG

Figure 5: Supported disc and media formats for the FELEMAN Mini DVD Player.

3. Advanced Features

- **1080P HD Resolution:** The player supports 1080P HD resolution for clear and detailed video playback.
- **All-Region Free Capability:** Play DVDs from any region worldwide.
- **Last Memory Function:** The player remembers the last playback position, allowing you to resume watching from where you left off, even after powering off.
- **Fast Reading:** Discs are read quickly, reducing waiting times.

- **Noise Cancellation:** Designed for quiet disc loading and playback.
- **Error Correction:** Improves readability of slightly scratched discs.
- **Anti-Shock Protection:** Ensures a smooth and stable viewing experience.

Memory Playback & Fast Reading

Smooth and fast playback



Memory
Playback



Fast
Reading



A-B
Repeat



Noise
Cancellation



Figure 6: Key features including Memory Playback, Fast Reading, A-B Repeat, and Noise Cancellation.

Full HD 1080P UPSCALING

Smooth, detailed HD video

OURS

OTHERS



Figure 7: Visual comparison of 1080P HD upscaling quality.

Specifications

Feature	Description
Brand	FELEMAN

Model	Mini DVD Player
Dimensions (L x W x H)	5.9 IN x 6.3 IN x 1.1 IN (approx. 15cm x 16cm x 2.8cm)
Weight	1.1 lbs (approx. 0.5 kg)
Resolution	1080p HD
Connectivity	HDMI, AV (RCA), USB, TF Card
Supported Disc Formats	DVD, SVCD, CD, MP3, Kodak Picture, Photo CD, DivX
Supported USB/TF Formats	MPEG-1V, MPEG-2V, H.263, XVID, DX50, DIVX, MP3, MP2, WMA, AC3, PCM, JPG (max 32GB, FAT32 format, up to 720p)
Special Features	Compact, Region Free, Multi-Format Playback, Multi-Language Support, Anti-Shock, Last Memory, Noise Cancellation, Error Correction
Power Input	DC 5V

Note: Does not support Blu-ray Discs or MP4 files. Cannot be connected to a computer as an optical drive.

Troubleshooting

If you encounter issues with your DVD player, please refer to the following common problems and solutions:

- **No Power:**
 - Ensure the power adapter is securely plugged into a working wall outlet and the USB cable is firmly connected to the player's power port.
 - Try a different power outlet or USB power source.
- **No Picture/Sound:**
 - Verify that the HDMI or AV cables are correctly connected to both the player and your display device.
 - Ensure your TV/projector is set to the correct input source (e.g., HDMI 1, AV).
 - Check the volume level on both the player and your display device.
- **Disc Not Playing/Reading:**
 - Ensure the disc is clean and free of scratches or smudges. Gently wipe the disc with a soft, lint-free cloth from the center outwards.
 - Verify the disc format is supported (e.g., not a Blu-ray disc).
 - Ensure the disc is placed correctly in the disc tray with the label side facing up.
- **USB/TF Card Not Reading:**
 - Ensure the USB drive or TF card is formatted to FAT32 and its capacity does not exceed 32GB.
 - Verify that the media files are in supported formats (e.g., not MP4 files).
 - Try reinserting the USB drive or TF card.
- **Remote Control Not Working:**
 - Ensure there are no obstructions between the remote control and the player's remote control receiving window.
 - Check and replace the batteries in the remote control if necessary.

Maintenance

Proper care and maintenance will extend the life of your FELEMAN Mini DVD Player.

- **Cleaning:**
 - Wipe the exterior of the player with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
 - For disc cleaning, use a soft, lint-free cloth and wipe from the center to the outer edge.
- **Storage:**
 - Store the player in a cool, dry place away from direct sunlight, high temperatures, and humidity.
 - Avoid placing heavy objects on top of the player.
- **Handling:**
 - Handle discs carefully by the edges to avoid fingerprints and scratches.
 - Do not force discs into the tray.

Warranty and Support

Your FELEMAN Mini DVD Player comes with a comprehensive warranty and dedicated customer support.

- **Warranty:** The product includes a one-year guarantee.
- **Maintenance:** Lifetime maintenance support is provided.
- **Customer Support:** For any problems or inquiries, please contact our customer service team. We are committed to providing all-round, professional, and caring support.

Please refer to the contact information provided on the product packaging or our official website for support.

© 2025 FELEMAN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F3CH322W>

More documents and user manuals: <https://manuals.plus/>