

[Manuals.plus](#) /

› [NEEWER](#) /

› NEEWER Basic Mini Desk Tripod TP02 Instruction Manual

## NEEWER TP02

# NEEWER Basic Mini Desk Tripod TP02 Instruction Manual

Model: TP02

## INTRODUCTION

The NEEWER Basic Mini Desk Tripod TP02 is a compact and versatile support system designed for cameras, webcams, action cameras, and smartphones. Constructed from durable aluminum alloy, it offers stability and flexibility for various photography and videography needs, including vlogging, live streaming, and filmmaking. Its portable design makes it an ideal companion for on-the-go creators.

## PRODUCT OVERVIEW

The TP02 Mini Desk Tripod features a 3-way pan tilt head for precise adjustments, a built-in handle for easy control, and 720° rotatable non-slip rubber feet for enhanced stability on diverse surfaces. Its 3-section legs and extendable center column allow for effortless height adjustments.

## PRODUCT DETAILS



**Image:** Detailed diagram illustrating the components of the NEEWER Basic Mini Desk Tripod TP02, including the quick release lock knob, mounting screw, quick release plate, vertical tilt lock knob, handle, horizontal rotation lock knob, center column, center column adjustment handle, center column locking knob, hook, leg flip lock, and 720° rotatable non-slip rubber feet.

## SETUP INSTRUCTIONS

- 1. Unpack the Tripod:** Carefully remove the tripod and its carrying bag from the packaging.
- 2. Extend the Legs:** Release the leg flip locks on each of the three sections. Extend the legs to your desired height and secure the flip locks.
- 3. Adjust Leg Angle:** The legs can be independently adjusted to different angles for stability on uneven surfaces. Ensure all legs are firmly planted.
- 4. Extend Center Column (Optional):** Loosen the center column locking knob. Gently pull up the center column adjustment handle to raise the center column. Tighten the knob to secure it at the desired height.
- 5. Attach Camera/Device:**
  - Locate the quick release plate on the 3-way pan tilt head.
  - Press the quick release lock knob to detach the plate.
  - Screw your camera or device (using appropriate adapters if necessary, not included) onto the

mounting screw of the quick release plate. Ensure it is securely fastened.

- Slide the quick release plate with your device back into the tripod head until it clicks into place. Secure it by tightening the quick release lock knob.

Your browser does not support the video tag.

**Video:** This video demonstrates the unboxing and initial setup of the NEEWER Mini Desk Tripod, showing how to unpack the tripod and prepare it for use.

Your browser does not support the video tag.

**Video:** This video provides a detailed overview of the NEEWER Portable Desktop Mini Tripod, showcasing its features and basic setup procedures.

## OPERATING INSTRUCTIONS

---

- **Pan and Tilt Adjustments:** Use the handle on the 3-way pan tilt head to smoothly pan horizontally and tilt vertically. Loosen the horizontal rotation lock knob for horizontal movement and the vertical tilt lock knob for vertical movement. Tighten them to lock the position.
- **Vertical/Horizontal Composition:** The 3-way pan tilt head allows for seamless transitions between horizontal and vertical shooting compositions. Adjust the head as needed to achieve the desired orientation.
- **Leveling:** Utilize the built-in bubble level to ensure your shots are perfectly aligned and level.
- **Stability:** For added stability, especially with heavier equipment, use the hook located at the bottom of the center column to hang a counterweight (e.g., a bag of sand or your camera bag). The 720° rotatable non-slip rubber feet provide excellent grip on various surfaces.

## 3 WAY PAN & TILT HEAD WITH BUILT IN HANDLE

With a 3 way pan tilt head, you can effortlessly achieve seamless transitions from horizontal to vertical compositions.



**Image:** This image illustrates the versatility of the 3-way pan tilt head, showing how to achieve vertical, low angle, and horizontal shooting compositions with the NEEWER Basic Mini Desk Tripod TP02.

# EFFORTLESS HEIGHT ADJUSTMENT

The tripod offers effortless height adjustment from 12.6"/32cm to 24.2"/61.5cm.



**Image:** This image demonstrates the effortless height adjustment capabilities of the tripod, ranging from 12.6 inches (32cm) to 24.2 inches (61.5cm), including the elevated center column for overhead shots.

## MAINTENANCE

- **Cleaning:** Wipe down the tripod with a soft, dry cloth after each use to remove dust and debris. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid harsh chemicals.
- **Lubrication:** Periodically check moving parts for smooth operation. If any parts feel stiff, apply a small amount of silicone-based lubricant. Avoid over-lubricating.
- **Storage:** Store the tripod in its carrying bag in a cool, dry place away from direct sunlight and extreme temperatures. Ensure all knobs are slightly loosened before storage to prevent stress on components.
- **Inspection:** Regularly inspect all screws, knobs, and leg locks for tightness and wear. Tighten any loose components and replace worn parts as needed to maintain optimal performance and safety.

## TROUBLESHOOTING

- **Tripod Instability:**
  - Ensure all leg flip locks are fully engaged and tightened.

- Verify that the tripod legs are spread evenly and firmly on the surface.
  - If using heavy equipment, consider hanging a counterweight from the hook on the center column.
- **Camera Not Secure:**
    - Check that the quick release plate is correctly attached to your camera and the mounting screw is tight.
    - Ensure the quick release plate is fully inserted into the tripod head and the quick release lock knob is securely tightened.
- **Stiff Pan/Tilt Movement:**
    - Loosen the horizontal rotation lock knob and vertical tilt lock knob sufficiently.
    - Clean any accumulated dust or debris from the pan/tilt mechanism. If necessary, apply a small amount of silicone lubricant.

## SPECIFICATIONS

| Feature            | Detail   |
|--------------------|--|
| Model Name         | TP02   |
| Brand              | NEEWER   |
| Material           | Aluminum Alloy, Plastic  |
| Color              | Black  |
| Compatible Devices | DSLR Camera, Webcam, Action Camera, Smartphone (adapter/holder not included) |
| Max Load Capacity  | 4.4lb / 2kg  |
| Item Weight        | 1.6lb / 731g   |
| Minimum Height     | 12.6" / 32cm   |
| Maximum Height     | 24.2" / 61.5cm   |
| Folded Size        | 13.4"x4.7"x3.9" / 34x12x10cm   |
| Tripod Head Type   | 3-Way Pan Tilt Head  |
| Mounting Screw     | 1/4"   |

# Specifications



1 x Mini Tripod with 3 Way Head

Model: TP02

Item Type: Mini Desk Tripod

Compatible with: DSLR/Action Camera/Phone

Application: Photo & Video

Main Features: 3 Way Pan Tilt Head & Handle

Mounting Points: 1/4"

Main Material: Aluminum Alloy, Plastic

Load Capacity: 4.4lb/2kg

Dimensions: 12.6"-24.2"/32-61.5cm

Folded Size: 13.4"x4.7"x3.9"/34x12x10cm

Weight: 1.6lb/731g



1 x Carrying Bag

**Image:** A visual representation of the NEEWER Basic Mini Desk Tripod TP02 alongside its key specifications, including model, item type, compatibility, application, main features, mounting points, material, load capacity, dimensions, folded size, and weight.

## WHAT'S IN THE BOX

- 1 x Mini Tripod with 3-Way Head
- 1 x Carrying Bag



**Image:** The NEEWER Basic Mini Desk Tripod TP02 shown folded and stored within its black carrying bag, highlighting its portability.

## WARRANTY AND SUPPORT

This NEEWER product comes with a **1 Year Manufacturer Warranty**. For any support inquiries or warranty claims, please contact NEEWER customer service directly or visit their official website for assistance.