

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Duux](#) /

> [Duux Whisper 2 Standing Fan with Remote Control, 26 Cooling Speeds, Height Adjustable, Multi-direction Oscillation, Quiet Fan with Night Mode and Timer, Grey Whisper 2 Grey](#)

Duux DXCF27UK

Duux Whisper 2 Standing Fan User Manual

Model: DXCF27UK | Brand: Duux

INTRODUCTION

Thank you for choosing the Duux Whisper 2 Standing Fan. This manual provides essential information for the safe and efficient operation of your fan. Please read it thoroughly before use and retain it for future reference.





Figure 1: Duux Whisper 2 Standing Fan and Remote Control

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Do not operate any fan with a damaged cord or plug.
- Do not run cord under carpeting.
- Do not immerse the fan in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use or before cleaning.
- Use only as described in this manual.

PACKAGE CONTENTS

Verify that all components are present in the package:

- Duux Whisper 2 Fan Unit (Base, Pole, Fan Head)
- Remote Control
- User Manual (this document)

SETUP AND ASSEMBLY

Follow these steps to assemble your Duux Whisper 2 fan:

1. Carefully remove all components from the packaging.
2. Place the fan base on a stable, flat surface.
3. Insert the main pole into the base, ensuring it clicks securely into place.
4. Attach the fan head to the top of the pole.
5. Connect the power cord to a suitable electrical outlet.



Figure 2: Fan height adjustment options (95 cm and 73 cm)

The fan's height can be adjusted between 73 cm and 95 cm by extending or retracting the telescopic pole. This allows for personalized cooling based on your needs.



Figure 3: Effortless height transition between 73-95cm

OPERATING INSTRUCTIONS

Controls

The Duux Whisper 2 fan can be controlled via the integrated digital LED display on the base or the included remote control.

DUUX®

ENDLESS POSSIBILITIES



26 SPEEDS



NATURAL WIND MODE



NIGHT MODE

Figure 4: Fan base controls and display

The remote control offers convenient operation from a distance. It can be magnetically stored on the fan unit when not in use.

DUUX®

SLEEK &
MINIMALIST
DESIGN



With magnetic
remote control
storage



Figure 5: Magnetic remote control storage

Fan Speeds and Modes

The fan offers 26 wind speeds and multiple operating modes:

- **Normal Mode:** Provides a continuous airflow at your selected speed (1-26).
- **Natural Wind Mode:** Simulates a natural breeze by varying the fan speed.
- **Night Mode:** Operates at an ultra-quiet level (as low as 13 dB) with dimmed display lights for undisturbed sleep.

duux®

WHISPER
QUIET

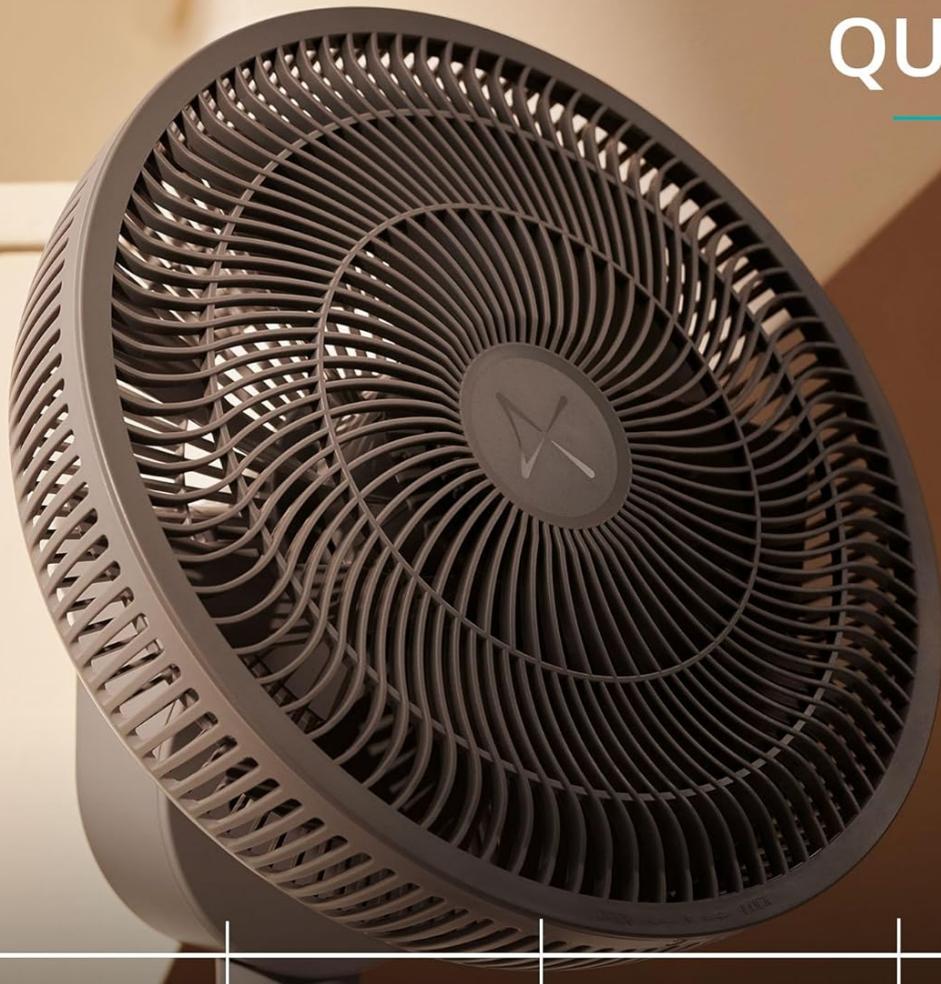


Figure 6: Whisper-quiet operation at 13 decibels

Oscillation

The fan features multi-directional oscillation to distribute air effectively throughout the room.

- **Horizontal Oscillation:** Up to 120 degrees.
- **Vertical Oscillation:** Up to 100 degrees.

DUUX®

MULTIDIRECTIONAL OSCILLATION

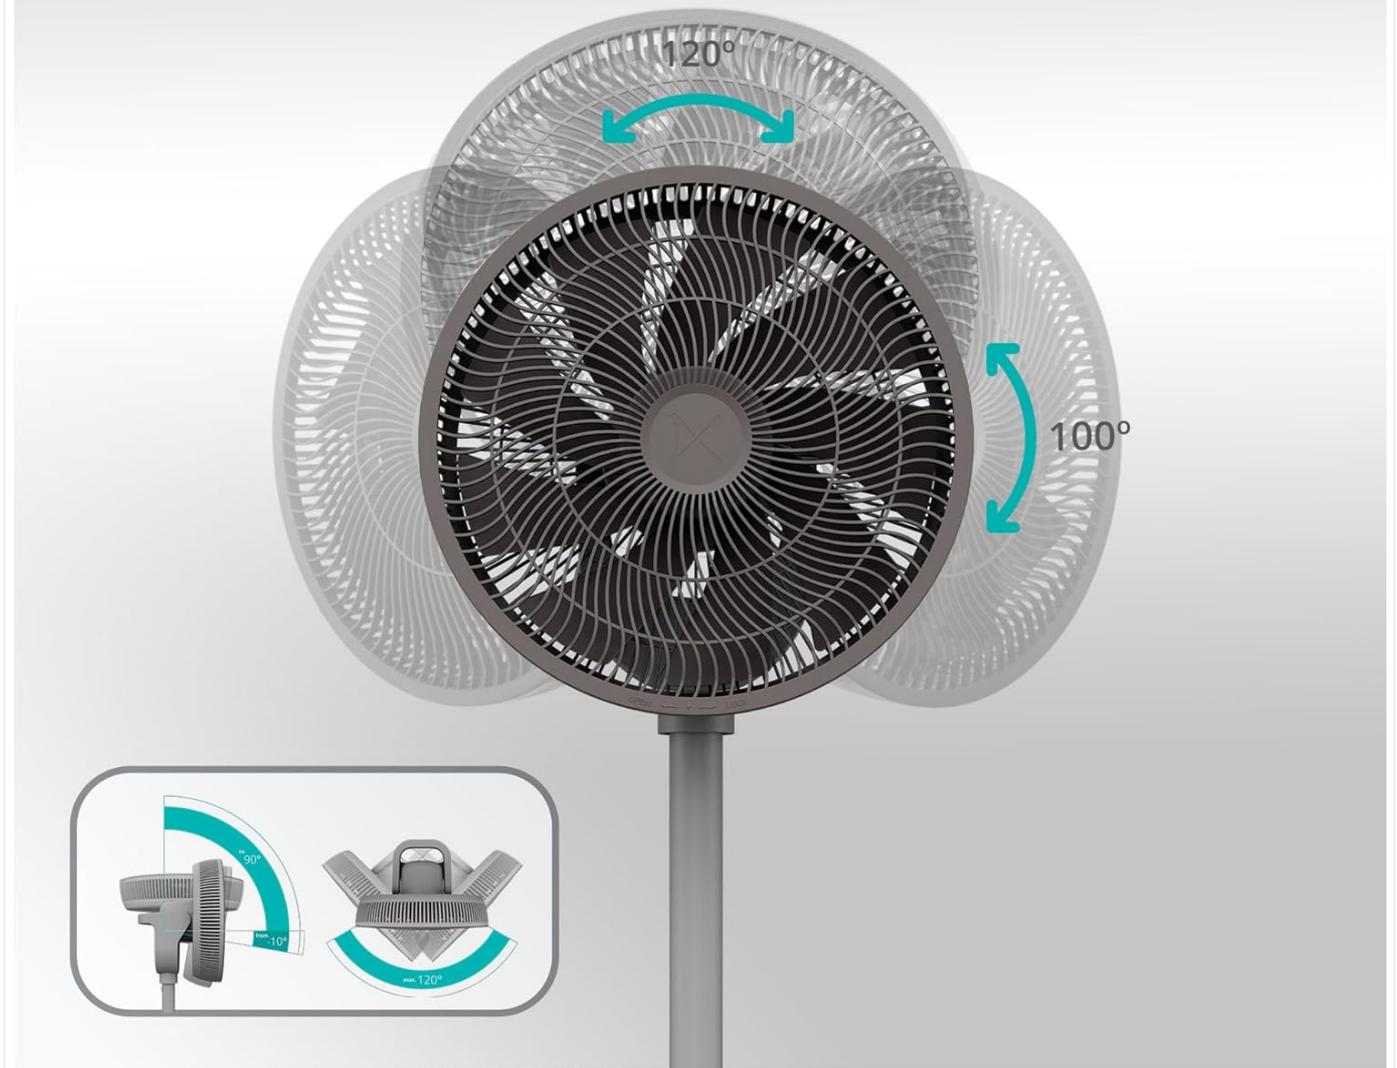


Figure 7: Multi-directional oscillation for wide coverage

Timer Function

Set the fan to automatically turn off after a specified period using the timer function. Refer to the remote control or base display for timer settings.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your fan.

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe down the exterior surfaces.
- Do not use abrasive cleaners or solvents.
- For cleaning the fan blades, carefully remove the front grille according to the instructions in the full product manual (if applicable).
- Ensure all parts are completely dry before plugging the fan back in.

TROUBLESHOOTING

If you encounter issues with your Duux Whisper 2 fan, consult the following table:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet.
Weak airflow.	Fan speed too low; obstructed air intake/output.	Increase fan speed. Clean dust from grilles. Ensure no obstructions.
Fan is noisy.	Fan not on a flat surface; loose parts; dust accumulation.	Place fan on a stable, flat surface. Check for loose components. Clean fan blades and grilles.
Remote control not working.	Dead battery; obstruction between remote and fan.	Replace remote control battery. Ensure direct line of sight to the fan's sensor.

If the problem persists after attempting these solutions, please contact Duux customer support.

SPECIFICATIONS

Feature	Detail
Model Number	DXCF27UK
Product Dimensions	34 x 34 x 95 cm (L x W x H)
Item Weight	6.1 kg
Power Source	Corded Electric
Voltage	230 Volts
Wattage	19 watts (max)
Sound Level	13 dB (min) - 56 dB (max)
Cooling Speeds	26
Oscillation	Multi-direction (120° horizontal, 100° vertical)
Special Features	Night Mode, Timer, Remote Control

WARRANTY AND SUPPORT

The Duux Whisper 2 Standing Fan comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, spare parts, or warranty claims, please visit the official Duux website or contact their customer service department. Contact information can typically be found on the Duux website or on your purchase receipt.

Note: Keep your proof of purchase for warranty purposes.

