



Manuals.plus /

› SHARK SHIP /

› SHARK SHIP Washing Machine Cabinet User Manual - Model 098713A9A985916CHB

SHARK SHIP 098713A9A985916CHB

SHARK SHIP Washing Machine Cabinet User Manual

Model: 098713A9A985916CHB

1. INTRODUCTION

Thank you for choosing the SHARK SHIP Washing Machine Cabinet. This cabinet is designed to provide an efficient and stylish storage solution for your laundry room or bathroom, maximizing vertical space above your washing machine or toilet. Constructed from durable engineered wood and a robust metal frame, it offers both functionality and a modern aesthetic. This manual provides detailed instructions for assembly, usage, maintenance, and troubleshooting to ensure optimal performance and longevity of your product.



Image 1.1: The SHARK SHIP Washing Machine Cabinet installed over a washing machine, showcasing its storage capabilities for laundry essentials.

2. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before assembling or using this product. Failure to follow these instructions may result in injury or product damage.

- **Assembly:** Assemble the cabinet on a soft, clean surface to prevent scratches. Ensure all parts are present before beginning assembly.
- **Stability:** Always place the cabinet on a level surface. Utilize the adjustable feet to ensure maximum stability and prevent tipping.
- **Weight Capacity:** Do not exceed the recommended weight capacity for shelves and compartments. Distribute weight evenly.
- **Children:** Keep small parts and packaging materials away from children. Do not allow children to climb on or play with the cabinet.
- **Moisture:** While the material is moisture-resistant, avoid prolonged exposure to excessive water or humidity to prevent damage.
- **Tools:** Use appropriate tools for assembly as specified in the instructions.

3. PARTS LIST

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

A. Top Cabinet Unit: (1 pc) - Features two enclosed compartments with doors.

B. Middle Shelf Unit: (1 pc) - Open shelving section.

C. Base Frame: (1 pc) - Metal frame designed to fit over appliances.

D. Adjustable Feet: (4 pcs) - For leveling and stability.

E. Hardware Pack: (Screws, dowels, cam locks, hinges, handles, anti-tip kit)



Image 3.1: Front view of the cabinet's structural components.



Image 3.2: Rear view of the cabinet, highlighting the back panel and frame design.



Image 3.3: The top cabinet unit with doors open, showing internal shelving.

4. SETUP AND ASSEMBLY

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

1. **Unpack and Identify:** Carefully unpack all components and lay them out on a clean, soft surface. Compare with the parts list to ensure everything is present.
2. **Assemble the Base Frame:** Connect the metal frame pieces (C) using the provided screws and connectors from the hardware pack (E). Ensure all connections are secure.
3. **Attach Adjustable Feet:** Screw the adjustable feet (D) into the bottom of the base frame (C). Do not

tighten fully yet, as adjustments will be made later.

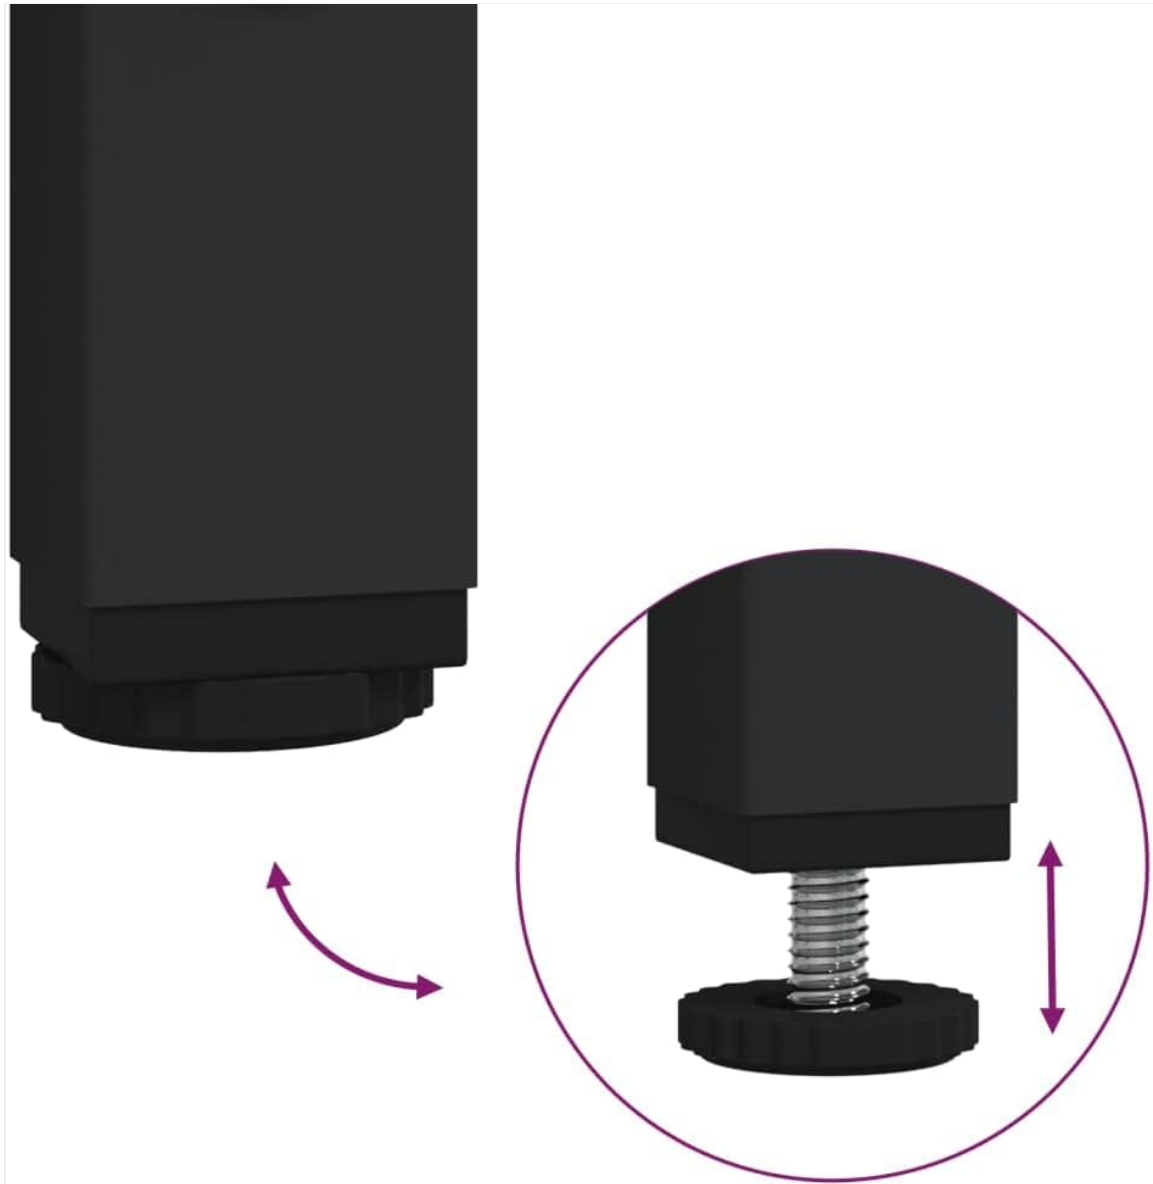


Image 4.1: Detail of the adjustable feet for leveling the cabinet.

- 4. Assemble the Middle Shelf Unit:** Attach the shelves to the metal frame supports for the middle section (B).
- 5. Assemble the Top Cabinet Unit:** Construct the top cabinet unit (A) by attaching the side panels, top, bottom, and back panel. Install the hinges and doors according to the instructions in the hardware pack. Attach handles.
- 6. Connect Units:** Carefully lift and place the middle shelf unit onto the base frame, securing it with the designated connectors. Then, place the top cabinet unit onto the middle shelf unit, securing it.
- 7. Position and Level:** Move the assembled cabinet to its desired location over your washing machine or toilet. Adjust the adjustable feet (D) until the cabinet is perfectly level and stable on all surfaces.
- 8. Secure with Anti-Tip Kit:** For added safety, especially in homes with children or pets, attach the anti-tip kit to the wall behind the cabinet as per the instructions provided in the hardware pack.

5. OPERATING AND USAGE

The SHARK SHIP Washing Machine Cabinet is designed for convenient storage of laundry and bathroom essentials.

- **Open Shelves:** Utilize the open shelves for frequently accessed items such as detergent, fabric softener, or decorative items.
- **Closed Compartments:** The top enclosed compartments are ideal for storing items you wish to keep out of sight, such as cleaning supplies, extra towels, or personal care products.
- **Weight Distribution:** Distribute items evenly across shelves and compartments to maintain stability. Avoid placing excessively heavy items on upper shelves.
- **Appliance Clearance:** Ensure there is adequate clearance between the cabinet and your washing machine or toilet for proper operation and ventilation.



Image 5.1: The cabinet positioned over a toilet, demonstrating its versatility in a bathroom setting.



Image 5.2: The cabinet in use above a washing machine, providing accessible storage.

6. MAINTENANCE AND CARE

Regular maintenance will help preserve the appearance and functionality of your cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Spills:** Promptly wipe up any spills, especially liquids, to prevent moisture damage to the engineered wood.
- **Hardware:** Periodically check all screws and connections to ensure they remain tight. Retighten if

necessary.

- **Adjustable Feet:** Re-check the level of the cabinet periodically and adjust the feet as needed to maintain stability.

7. TROUBLESHOOTING

If you encounter any issues with your SHARK SHIP Washing Machine Cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Uneven floor; adjustable feet not properly set; loose connections.	Adjust the leveling feet until the cabinet is stable. Check and tighten all assembly screws.
Doors do not close properly.	Hinges are loose or misaligned; cabinet is not level.	Tighten hinge screws. Adjust hinges if necessary. Ensure the cabinet is level.
Scratches on surfaces.	Improper handling during assembly or use; abrasive cleaning.	Use a furniture repair kit for minor scratches. Always use soft cloths for cleaning.
Missing parts during assembly.	Packaging error.	Contact SHARK SHIP customer support immediately for replacement parts.

8. SPECIFICATIONS

Feature	Detail
Brand	SHARK SHIP
Model Name	Washing Machine Cabinet for Space-Saving
Item Model Number	098713A9A985916CHB
Product Dimensions (D x W x H)	26.8" x 19.1" x 76.4"
Material	Engineered Wood, Metal Frame
Finish	Smoked Oak
Mounting Type	Floor Mount
Item Weight	24.94 Pounds
Special Features	Adjustable feet, 2 open shelves, 2 closed compartments

9. WARRANTY AND CUSTOMER SUPPORT

For any questions, missing parts, or assistance with your SHARK SHIP Washing Machine Cabinet, please contact our customer support team.

- **Customer Support:** Refer to your purchase documentation or the retailer's website for contact

information.

- **Warranty Information:** Specific warranty details may vary by region and retailer. Please retain your proof of purchase for any warranty claims.

We are committed to providing high-quality products and support.