

Princess 292980

Princess Popcorn Machine 4.5 L, Model 292980 User Manual

Brand: Princess | Model: 292980

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Princess Popcorn Machine, Model 292980. This appliance is designed to produce delicious, perfectly popped popcorn for your enjoyment. Its integrated stirring system ensures even heating and popping, while the transparent lid doubles as a convenient serving bowl. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting.



2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is placed on a stable, level, and heat-resistant surface.
- Do not immerse the main unit (base with electrical components) in water or any other liquid.
- Keep hands and utensils away from the heating plate and stirring rod during operation to prevent burns.
- Unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been damaged in any way.
- This appliance is for household use only. Do not use outdoors.
- Ensure the transparent lid is securely in place during operation.
- The appliance generates heat and steam. Use caution when removing the lid or handling hot popcorn.
- The non-slip feet provide stability during use. Ensure they are clean and free from debris.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Princess Popcorn Machine:

- **Main Base Unit:** Contains the heating element and motor for the stirring rod.
- **Heating Plate:** The non-stick surface where popcorn kernels are heated.
- **Stirring Rod:** Rotates to ensure even distribution of kernels and oil.
- **Transparent Lid:** Covers the heating plate during popping and doubles as a serving bowl.
- **Butter Melting Pot:** Integrated into the lid for melting butter during operation.
- **On/Off Switch:** Located on the side of the main base unit.
- **Non-slip Feet:** Located on the bottom of the base unit for stability.



Image 3.1: The Princess Popcorn Machine with its transparent lid and main base unit.

4. SETUP

Before first use, ensure all packaging materials are removed and the appliance is clean.

1. Place the main base unit on a dry, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit.
2. Wipe the heating plate with a damp cloth. Wash the transparent lid and butter melting pot with warm, soapy water, then rinse and dry thoroughly.
3. Ensure the stirring rod is correctly positioned on the heating plate.
4. Plug the power cord into a grounded electrical outlet.



Image 4.1: The underside of the popcorn machine, showing the power cord and non-slip feet.

5. OPERATING INSTRUCTIONS

Follow these steps to make popcorn:

1. Add your desired amount of popcorn kernels to the heating plate. Refer to the appliance's markings for maximum fill levels.
2. Pour a small amount of cooking oil (e.g., vegetable oil, coconut oil) over the kernels. The stirring rod will help distribute it evenly.
3. Place the transparent lid securely onto the base unit. If desired, place a pat of butter in the butter melting pot on top of the lid. The heat from the popping process will melt the butter.
4. Turn the On/Off switch to the 'On' position. The stirring rod will begin to rotate, and the heating plate will warm up.
5. Popcorn will begin to pop within a few minutes. The transparent lid allows you to observe the popping process.
6. Once popping slows significantly (typically 2-3 minutes after the first pop), turn the On/Off switch to the 'Off' position and unplug the appliance.
7. Carefully remove the transparent lid using the cool-touch handles. The melted butter can be poured over the popcorn.
8. To serve, you can invert the transparent lid and use it as a large serving bowl.



Image 5.1: Popcorn kernels and a stick of butter placed inside the machine before operation.



Image 5.2: Detail of the On/Off switch for operating the popcorn machine.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. The transparent lid and butter melting pot are dishwasher-safe for easy cleaning. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
3. Wipe the heating plate and the exterior of the main base unit with a damp cloth. For stubborn residue, use a mild detergent. Do not use abrasive cleaners or scouring pads.
4. Never immerse the main base unit in water or any other liquid.
5. Ensure all parts are completely dry before storing the appliance.
6. Store the popcorn machine in a cool, dry place. Its compact design allows for easy storage.



Image 6.1: The popcorn machine and a bowl of popcorn, illustrating the serving function of the lid.

7. TROUBLESHOOTING

If you encounter issues with your popcorn machine, refer to the following common problems and solutions:

- **Popcorn not popping or unevenly popped:**

- Ensure you are using fresh popcorn kernels. Old kernels may not pop effectively.
- Verify that the correct amount of oil is used. Too little or too much can affect popping.
- Check that the stirring rod is properly installed and rotating.

- **Popcorn burning:**

- Reduce the amount of kernels used. Overfilling can lead to burning.
- Ensure the appliance is unplugged immediately after popping slows down to prevent overheating.

- **Appliance not turning on:**

- Check that the power cord is securely plugged into a working electrical outlet.
- Ensure the On/Off switch is in the 'On' position.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Princess
Model Number	292980
Capacity	4.5 Liters
Power	450W
Dimensions (L x W x H)	22.3 x 27 x 23 cm
Weight	905 g
Material	Polypropylene (PP)

Special Features	Anti-slip feet, Built-In Stirring System, Cool Touch Handle, Reversible Butter Melter
Automatic Shut-off	Yes

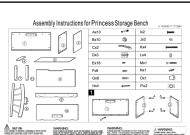
9. WARRANTY AND SUPPORT

The Princess Popcorn Machine, Model 292980, comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or questions regarding your appliance, please contact the retailer where you purchased the product or visit the official Princess brand website for customer service contact information.

Please retain your proof of purchase for warranty claims.

Related Documents - 292980

	<p><u>Princess Popcorn Maker 01.292986.01.001 - User Manual and Instructions</u></p> <p>Official instruction manual for the Princess Popcorn Maker (Model 01.292986.01.001). Learn about safety, usage, cleaning, maintenance, and recipes for this household popcorn machine.</p>
	<p><u>Princess Moments Coffee Maker Wi-Fi - User Manual</u></p> <p>Comprehensive user manual for the Princess Moments Coffee Maker Wi-Fi (Model 01.246060.01.001), covering safety instructions, parts description, usage, app connectivity, cleaning, and environmental information.</p>
	<p><u>Princess 01.246013.09.001 Coffee Maker: Instruction Manual and Safety Guide</u></p> <p>Comprehensive guide for the Princess 01.246013.09.001 Coffee Maker, covering safety instructions, usage, cleaning, maintenance, and warranty information.</p>
	<p><u>Princess Panini Grill 01.112415.23.001: User Manual and Safety Instructions</u></p> <p>Comprehensive user manual and safety instructions for the Princess Panini Grill (Model 01.112415.23.001), covering operation, cleaning, maintenance, and environmental disposal.</p>
	<p><u>Princess Chocolate Fountain - Instruction Manual and Usage Guide</u></p> <p>Comprehensive instruction manual for the Princess Chocolate Fountain (model 01.292994.01.001), covering safety, usage, cleaning, and maintenance.</p>
	<p><u>Princess Storage Bench Assembly Instructions Disney Princess Furniture</u></p> <p>Detailed assembly instructions for the Disney Princess Storage Bench. Includes parts list, step-by-step guide, and safety warnings for easy setup.</p>



[pdf] User Manual Instructions Accessories

Návod k použití Popkornovač Princess 292980 Planeo41025103 immc static fast eu manual 41 41025103 im 1976813765 |||

a User manual d Gebruiksaanwijzing b Manuel de l'utilisateur c Benutzerhandbuch h Manual del usuario i Manual do utilizador j Manuale dell'utente e Bruksanvisning n Instrukcja obsugi i Użytkownika k Popcorn Maker 01.292980.01.001 IN NEED OF ACCESSORIES ...

lang:en score:25 filesize: 2.77 M page_count: 4 document date: 2024-11-11



[pdf] Declaration of Conformity

01 292980 001 DOC EN 11 12 24 Princess Popcornmaker edcee2fa 0693 438e af74 87ae894c5453 princesshome.eu.nl product attachment productId attachmentName |||

EU DECLARATION OF CONFORMITY In accordance with EN ISO/IEC 17050-1

Declaration number: DOCIP 297 ... es Europe Swaardvenstraat 65 5048 AV Tilburg Netherlands Product identification: Popcorn maker 01.292980.01.001 THE PRODUCTS MENTIONED IN THIS DECLARATION ARE IN CONFORMITY WITH:

EU Community Legislation:

Harmonised standards:

Safety of electrical equipment:

EMC Directive 2014/30/EU (OJEU L 367/1-106, 29.03.2014)

Ecodesign energy-related products Directive 2009/125/EC (OJEU L 367/1-106, 29.03.2014)

Low Voltage Directive (LVD) 2014/35/EU (OJEU L 357/37-374, 29.03.2014)

Directive on the restriction of certain Substances (RoHS) Directive 2011/65/EU (OJEU L 367/1-116, 01.04.2011)

Exposure of humans to electromagnetic fields (EMF) EN 62233:2008

Electromagnetic Compatibility (EMC) EN 62368-1:2019+A11:2021

EN 62368-2-2022

EN 62368-2-2022+A11:2021

EN 61000-3-3:2013+A11:2019+A2:2021

Requirements for electrical products

EN IEC 62000-2018

Ecodesign (EU) 2023/826 - Ecodesign for household and office equipment

Signed for and on behalf of:

Place and date of issue: Tilburg, 11 December 2024

Signature:

Name, position:

Mr. C. Pulles-Torres

Quality Officer

Smartwares Europe

Name, position:

Mr. R. Keeper

Quality Manager

Smartwares Europe



[pdf] Guide Accessories Catalog

2023 Product Guide Performance Foodservice Apr 4 · 16 OZ CACAO PWDR ORGANIC GF NAVITAS

776538 6 12 CT CAMOMILE PURE K COF 782546 11 RTD COFFEE ESPRESSO CREAM BLK RFL

782913 Catalog April performancefoodservice media PFS Files Publications Springfield |||

2023 Product Guide 1 Performance Blvd. Springfield, MA 01104 413 846 5400

www.performancefoodservice ... EFILL SLEEVE DSPNSR WRLDCENT 550372

FORK BAMBOO 6.3 PACKNWD 347786 FORK BLK IW XHVV PP BERK SQ 292980

FORK CORN STARCH 200F WRLDCENT 514788 FORK CORN STARCH PLA 7 IN PACKNWD 701288 FORK EURO ...

lang:i-klingon score:11 filesize: 6.11 M page_count: 451 document date: 2023-04-04