

- Manuals.plus /
- › [TabneraX](#) /
- › TabneraX UTbook RM 10.1-inch Android 14 Tablet User Manual

TabneraX RM

TabneraX UTbook RM 10.1-inch Android 14 Tablet User Manual

Model: UTbook RM

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your TabneraX UTbook RM 10.1-inch Android 14 Tablet. Please read it thoroughly to ensure proper use and to maximize your device's performance and longevity.



Image 1.1: The TabneraX UTbook RM 10.1-inch Android 14 Tablet.

2. WHAT'S IN THE BOX

Verify that all items are present in your package:

- TabneraX UTbook RM 10.1-inch Android 14 Tablet
- Protective Stand Case
- Keyboard
- Mouse
- Stylus
- Type-C Cable
- Charging Adapter
- OTG Adapter
- User Manual (this document)



7000mAh
Long Battery Life & Type C Charging

-  Standby - **30** days
-  Web surfing - **14** hours
-  Video - **12** hours
-  Music - **20** hours
-  Game - **8** hours

Image 2.1: The TabneraX UTbook RM Tablet with its complete set of accessories.

2.1. Unboxing Video

Your browser does not support the video tag.

Video 2.1: An unboxing video demonstrating the contents of the TabneraX UTbook RM Tablet package.

3. DEVICE LAYOUT

 
Familiarize yourself with the physical components of your tablet:

Powerful **Octa-Core** Processor

Power meets affordability—performance without compromise



Allwinner **A523**



8GB RAM



64GB ROM



4*A55 1.8GHz
4*A55 1.42GHz



Mail-G57 MC01

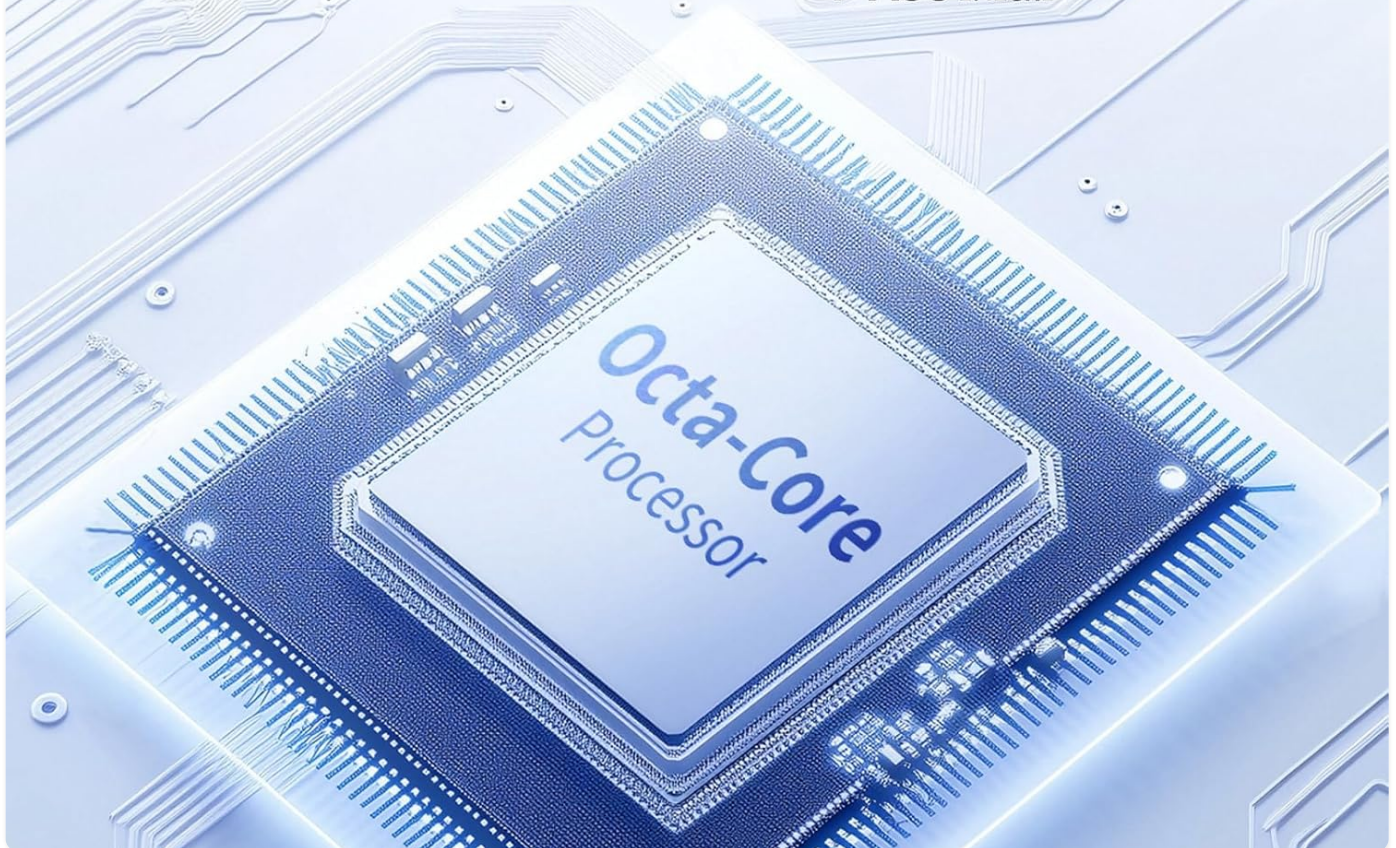


Image 3.1: Diagram illustrating the location of ports, buttons, and cameras on the TabneraX UTbook RM Tablet.

- **Power Button:** Located on the side, used to power on/off or wake/sleep the device.
- **Volume Buttons:** Adjust media and notification volume.
- **USB Type-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For connecting wired headphones.
- **MicroSD Card Slot:** Expand storage up to 1TB.
- **Front Camera:** For video calls and selfies.
- **Rear Cameras:** For taking photos and videos.
- **Speakers:** Audio output.

4. SETUP

4.1. Initial Power On

1. Press and hold the **Power Button** until the TabneraX logo appears.

2. Follow the on-screen prompts to select your language, region, and accept the terms and conditions.

4.2. Wi-Fi Connection

1. During initial setup or via **Settings > Network & internet > Wi-Fi**
2. Select your desired Wi-Fi network from the list.
3. Enter the password if prompted and tap **Connect**.

4.3. Google Account Setup

1. Sign in with your existing Google account or create a new one. This is necessary to download apps from the Google Play Store.

4.4. Inserting a MicroSD Card

1. Locate the MicroSD card slot on the side of the tablet.
2. Gently insert the MicroSD card into the slot until it clicks into place. Ensure the card is oriented correctly.

5. OPERATING YOUR TABLET

5.1. Basic Navigation

- **Tap:** Select items, open apps, or activate buttons.
- **Swipe:** Scroll through screens, lists, or pages.
- **Pinch-to-Zoom:** Enlarge or reduce content on the screen.

5.2. Connecting Accessories

Your tablet comes with a keyboard, mouse, and stylus for enhanced productivity.

- **Keyboard & Mouse:** Connect via Bluetooth. Go to **Settings > Connected devices > Pair new device** and select the keyboard/mouse from the list.
- **Stylus:** The stylus is typically passive and does not require pairing. Simply use it on the screen for precise input.

5.3. Managing Apps

- **Download Apps:** Use the Google Play Store to find and install applications.
- **Uninstall Apps:** Press and hold an app icon on the home screen or app drawer, then drag it to the "Uninstall" option. Alternatively, go to **Settings > Apps > See all apps** select the app, and tap **Uninstall**.

5.4. Battery Management

The tablet is equipped with a 7000mAh battery for extended use.

Dual

High-Definition Cameras



Image 5.1: Visual representation of the TabnaraX UTbook RM Tablet's battery life for various activities.

- **Charging:** Connect the included Type-C cable and charging adapter to the tablet and a power outlet.
- **Optimizing Battery Life:** Reduce screen brightness, close unused apps, disable Wi-Fi/Bluetooth when not in use, and use power-saving modes.

5.5. Camera Usage

Your tablet features dual high-definition cameras.

High Resolution **10.1"** Display



10.1inch display



16:10



IPS 1280*800



Multi-touch



Image 5.2: Close-up of the dual high-definition cameras on the TabneraX UTbook RM Tablet.

- Open the **Camera** app to take photos or record videos.
- Tap the screen to focus and press the shutter button to capture.

5.6. Connectivity

- **Wi-Fi 6:** Provides faster and more stable wireless internet connections.
- **Bluetooth 5.0:** For connecting wireless peripherals like headphones, speakers, and the included keyboard/mouse.
- **OTG (On-The-Go):** Use the included OTG adapter to connect USB devices such as flash drives or external hard drives for file transfers.

5.7. Kids Space

The tablet supports Google Kids Space, offering a safe and engaging environment for children.

- Access Kids Space from the app drawer or by swiping right on the home screen (if configured).

- Follow the on-screen instructions to set up profiles and parental controls.

5.8. General Usage Video

Your browser does not support the video tag.

Video 5.3: A demonstration of the TabneraX UTbook RM Tablet's features and general usage, including its display quality and suitability for various tasks.

6. MAINTENANCE

6.1. Cleaning

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals or abrasive materials.

6.2. Software Updates

- Regularly check for system updates via **Settings > System > System update** to ensure optimal performance and security.

6.3. Storage Management

- Periodically clear cache, delete unnecessary files, and uninstall unused apps to free up storage space.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

Problem	Solution
Tablet does not power on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Check Wi-Fi settings to ensure the correct network and password are used.
Slow performance	Close background apps, clear cache, or uninstall unused applications. Consider a factory reset if the issue persists (back up data first).
Screen is unresponsive	Restart the tablet by holding the power button. If unresponsive, force restart by holding the power button for an extended period (e.g., 10-15 seconds).

8. SPECIFICATIONS

Key technical specifications for the TabneraX UTbook RM Tablet:

Best Gift for the Whole Family



Image 8.1: Detailed view of the TabneraX UTbook RM Tablet's internal components, highlighting the Octa-Core processor, 8GB RAM, and 64GB ROM.

Feature	Detail
Brand	TabneraX
Model Name	UTbook
Model Number	RM
Operating System	Android 14
Processor	Octa-Core (Allwinner A523)
RAM Memory	8 GB
Storage Capacity	64 GB (Expandable up to 1TB via MicroSD)

Feature	Detail
Screen Size	10.1 Inches
Display Resolution	1280x800 IPS HD
Battery Capacity	7000mAh (Up to 8 hours average life)
Wireless Technology	Wi-Fi 6, Bluetooth 5.0
Cellular Technology	5G
Cameras	Front and Rear (5 MP Photo Sensor Resolution)
Item Weight	1.23 Kilograms
Dimensions (L x W x Thickness)	9.2"L x 0.1"W x 6"Th

9. WARRANTY AND SUPPORT

Your TabneraX UTbook RM Tablet comes with a**2-Year Manufacturer Warranty**. For warranty claims or technical support, please contact TabneraX customer service through the retailer where you purchased the product or visit the official TabneraX website for contact information.

Please retain your proof of purchase for warranty validation.

© 2026 TabneraX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F3D2KBN3>

More documents and user manuals: <https://manuals.plus/>