

[Manuals.plus](#) /

› [Dinosoo](#) /

› Dinosoo Wireless Controller User Manual

Dinosoo Wireless Controller

Dinosoo Wireless Controller User Manual

Model: Wireless Controller

INTRODUCTION

Welcome to the Dinosoo Wireless Controller user manual. This guide provides comprehensive instructions for setting up, operating, and maintaining your controller. Please read this manual carefully to ensure proper use and to maximize your gaming experience.

PRODUCT OVERVIEW

Familiarize yourself with the components and layout of your Dinosoo Wireless Controller.



This image displays the front and rear views of the Dinosoo Wireless Controller, highlighting key buttons and ports such as the Home button, View button, Menu button, LB/RB, Left/Right sticks, A/B/X/Y buttons, Share button, Cross key (D-pad), Turbo button, Light keys, Type-C interface, LT/RT, and programmable back buttons (PR/PL) with the SET button.

- **Left Stick:** For movement and navigation.
- **Cross Key (D-pad):** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **Home Button:** Powers on/off the controller and accesses system menus.
- **View Button:** Accesses specific in-game or system menus.
- **Menu Button:** Accesses specific in-game or system menus.
- **LB/RB:** Left and Right Bumper buttons.
- **LT/RT:** Left and Right Trigger buttons.
- **PR/PL Buttons:** Programmable back paddles.
- **SET Button:** Used for programming back paddles.

- **Turbo Button:** Activates rapid fire function.
- **Light Keys:** Adjust LED lighting effects.
- **Type-C Interface:** For charging and wired connection.

SETUP

Initial Charging

Before first use, ensure the controller is fully charged. Connect the provided USB-C cable to the controller's Type-C interface and a compatible power source (e.g., console, PC, USB wall adapter). The indicator light will show charging status and turn off when fully charged.

Wireless Connection

To connect wirelessly:

1. Ensure your device (Xbox console, PC, iOS/Android device) is powered on and in pairing mode.
2. On the Dinosoo controller, press and hold the Home button for 3 seconds to power it on.
3. Press and hold the pairing button (usually a small button near the Type-C port or on the top edge) until the indicator lights flash rapidly.
4. On your device, select the Dinosoo Wireless Controller from the list of available Bluetooth or wireless accessories.
5. Once connected, the indicator light on the controller will become solid.

Wired Connection

The controller can also be used via a wired connection:

1. Connect the USB-C cable from the controller's Type-C interface to a USB port on your device (Xbox console or PC).
2. The controller should be automatically recognized and ready for use.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press the Home button once.
- **Power Off:** Press and hold the Home button for approximately 5 seconds until the controller shuts down.

LED Light Modes

The controller features customizable LED lighting with 7 different colors and 8 lighting modes.

7 COLORS LIGHTS WITH 8 MODE

Different colors LED for better playing experience



This image illustrates the Dinosoo Wireless Controller with its customizable 7-color LED lights and 8 different lighting modes, enhancing the visual experience during use.

Use the dedicated Light keys on the controller to cycle through different colors and lighting effects. Refer to the controller's diagram for the exact location of these keys.

Rumble Motors

The controller is equipped with dual rumble motors located in the grips, providing haptic feedback for a more immersive gaming experience. The intensity of the vibration may vary depending on the game and platform.

HYPER-REALISTIC

2 RUMBLE MOTORS



This image shows a transparent view of the Dinosoo Wireless Controller, highlighting the two internal rumble motors located in the grips, which provide tactile feedback during gameplay.

On-the-Fly Mapping

The programmable back buttons (PR/PL) can be remapped to other controller functions without the need for external software.



This image demonstrates the on-the-fly mapping feature of the Dinosoo Wireless Controller, showing how the back buttons (PR and PL) can be assigned functions of other buttons like A, B, X, Y, RB, LB, RT, LT, R3, and L3, without the need for software.

To map a back button:

1. Press and hold the **SET** button on the back of the controller.
2. While holding **SET**, press the back button (PR or PL) you wish to program.
3. Then, press the button (e.g., A, B, X, Y, RB, LB, RT, LT, R3, L3) whose function you want to assign to the back button.
4. Release all buttons. The back button is now mapped.

Turbo Function

The Turbo function allows for rapid, repeated input of a button press, useful in certain games.

TURBO

*Switch to turbo mode
for faster rapid fire*



This image illustrates the Turbo function of the Dinosoo Wireless Controller, indicating that pressing the 'T' button along with another action button (A, B, X, Y, RT, LT, RB, LB) activates rapid fire for that button.

To activate Turbo:

1. Press and hold the **Turbo (T)** button.
2. While holding **T**, press the action button (e.g., A, B, X, Y, RT, LT, RB, LB) you want to apply Turbo to.
3. Release both buttons. The selected action button now has Turbo enabled.

To deactivate Turbo for a specific button, repeat the steps above.

Compatibility

The Dinosoo Wireless Controller is designed for versatile use across multiple platforms.

VERSATILE



Xbox Series X



Xbox Series S



Xbox One



Windows 10/11



iOS/Android



This image displays the Dinosoo Wireless Controller alongside icons representing its compatibility with various platforms, including Xbox Series X, Xbox Series S, Xbox One, Windows 10/11, and iOS/Android devices.

Note: Some users have reported compatibility issues with certain Xbox console updates. If your Xbox console displays a message stating the accessory is unauthorized, this indicates a compatibility restriction imposed by the console manufacturer. This controller may not function with all Xbox console updates. Ensure your console's software is up to date and consult Dinosoo support if issues persist.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.
- **Avoid Drops:** Do not drop or subject the controller to strong impacts, as this can damage internal components.

TROUBLESHOOTING

- **Controller not connecting:**
 - Ensure the controller is charged.
 - Verify your device is in pairing mode.
 - Try restarting both the controller and your device.
 - Attempt a wired connection to rule out wireless issues.
- **Buttons unresponsive or drifting:**
 - Ensure the controller's firmware is up to date (if applicable, check Dinosoo's official website).
 - Clean around the buttons and sticks to remove any debris.
 - If issues persist, contact customer support.
- **Controller unrecognized by Xbox console:**
 - As noted in the compatibility section, some Xbox console updates may restrict third-party accessories.
 - Ensure your console's operating system is fully updated.
 - If the console displays an "unauthorized accessory" message, this is a system-level block.
- **Lag or disconnection during wireless play:**
 - Ensure there are no obstructions between the controller and the receiver/device.
 - Reduce interference from other wireless devices.
 - Try moving closer to the device.

SPECIFICATIONS

Feature	Detail
ASIN	B0FY6R449P
Manufacturer	Dinosoo
Date First Available	October 29, 2025
Connectivity	Wireless, Wired (USB-C)
Compatibility	Xbox Series X S, Xbox One, Windows 10/11, iOS, Android
Special Features	7-Color LED Lights, 8 Light Modes, Dual Rumble Motors, On-the-Fly Mapping, Turbo Function

WARRANTY AND SUPPORT

For warranty information, technical assistance, or any product-related inquiries, please contact Dinosoo customer support. Refer to the product packaging or the official Dinosoo website for the most current contact details and support resources.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question