

JH01

# Generic L15 Electric Water Flosser User Manual

Model: JH01

## 1. IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using this product. Keep this manual for future reference.

- Do not immerse the main unit in water. The device is IPX7 waterproof, but the charging port should be kept dry.
- This product is intended for oral cleaning only. Do not use for any other purpose.
- Do not use if you have an open wound on your tongue or in your mouth.
- Keep out of reach of children. This device is not a toy.
- If you have any medical conditions or concerns, consult your dentist or physician before use.
- Use only the charging cable provided.
- Do not operate the device if it has been dropped, damaged, or immersed in water.

## 2. PRODUCT OVERVIEW

---

The Generic L15 Electric Water Flosser is designed to provide effective oral cleaning, promoting gum health and plaque removal. It features multiple cleaning modes and a portable design.



**Figure 2.1:** Generic L15 Electric Water Flosser components, including the main unit, various flossing nozzles, and a USB charging cable. The packaging highlights features like IPX7 waterproofing, 360° rotatable nozzle, and 300mL water tank capacity.

## 2.1 Components

- Main Water Flosser Unit
- Standard Jet Tip
- Orthodontic Tip
- Periodontal Tip
- Tongue Cleaner Tip
- USB Charging Cable

## 2.2 Key Features

- **Portable Design:** Compact and easy to carry for travel.
- **300mL Water Tank:** Sufficient capacity for a single cleaning session.
- **IPX7 Waterproof:** Allows for safe use in the shower and easy cleaning.

- **360° Rotatable Nozzle:** Provides access to all areas of the mouth.
- **USB Charging:** Convenient and versatile charging options.
- **Multiple Cleaning Modes:** Customizable pressure settings for various needs.



**Figure 2.2:** The Generic L15 Water Flosser is available in different colors and comes with a variety of specialized nozzles for comprehensive oral care, including standard, orthodontic, and periodontal tips.



**Figure 2.3:** The ergonomic design of the Generic L15 Electric Water Flosser ensures a comfortable and secure grip during use.

### 3. SETUP AND CHARGING

### 3.1 Initial Charging

1. Before first use, fully charge the water flosser.
2. Connect the USB charging cable to the charging port on the device.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The charging indicator light will illuminate. Allow approximately 4 hours for a full charge.
5. A full charge provides approximately 7 days or more of use, depending on usage frequency and mode.

### 3.2 Attaching the Nozzle

1. Select the desired nozzle tip.
2. Insert the nozzle into the hole at the top of the flosser handle until it clicks into place.
3. To remove, press the nozzle release button (if present) and pull the nozzle out.

### 3.3 Filling the Water Tank



**Figure 3.1:** The water tank can be filled by detaching it from the main unit or by opening the side valve and pouring water directly into the reservoir.

1. **Method 1 (Detachable Tank):** Twist and remove the water tank from the main unit. Fill the tank with lukewarm water. Reattach the tank securely.
2. **Method 2 (Side Valve):** Open the small rubber plug or valve on the side of the water tank. Fill the tank with lukewarm water. Close the plug/valve securely.
3. Ensure the water tank is securely attached or sealed before use to prevent leaks.

## 4. OPERATING INSTRUCTIONS

### 4.1 Getting Started

1. Lean over a sink and place the nozzle tip into your mouth, aiming it at your gumline.

2. Press the Power button to turn on the device.
3. Keep your mouth slightly open to allow water to flow into the sink.

## 4.2 Selecting a Cleaning Mode

The Generic L15 Water Flosser offers multiple modes to suit different oral care needs:



**Figure 4.1:** The water flosser features various cleaning modes, including Strong for deep cleaning, Soft for sensitive teeth, DIY for custom settings, and Normal for daily use.

- **Dynamic Mode:** Provides a pulsating water stream for deep cleaning and gum massage.
- **Normal Mode:** Standard pressure for daily cleaning and plaque removal.
- **Soft Mode:** Gentle pressure, ideal for sensitive gums or first-time users.
- **Burst Fire Mode:** Delivers short, powerful bursts of water for targeted cleaning.
- **Manual Mode:** Allows for controlled, on-demand water flow.

Press the Mode button (M) to cycle through the available cleaning modes. The indicator light will show the selected mode.

## 4.3 Flossing Technique

1. Start with your back teeth and work your way forward.
2. Aim the water stream at the gumline at a 90-degree angle.
3. Pause briefly between teeth, allowing the water to clean the interdental space and gumline.
4. Follow the gumline and the top of each tooth.
5. Ensure you clean both the front and back surfaces of your teeth.
6. For optimal results, use the water flosser after brushing your teeth.

## Improving Oral Health Enjoy Smile Life



**Figure 4.2:** Regular use of the water flosser contributes to improved oral health by preventing bleeding gums, effectively cleaning around orthodontic appliances, reducing bad breath, and removing dental plaque.

## 5. MAINTENANCE AND CLEANING

### 5.1 After Each Use

1. Turn off the device and empty any remaining water from the tank.
2. Run the device briefly to clear any water from the internal components.
3. Remove the nozzle tip and rinse it under running water.
4. Wipe the main unit with a soft, damp cloth.

### 5.2 Deep Cleaning (Weekly/Bi-weekly)

- **Water Tank:** Detach the water tank and clean it with mild soap and water. Rinse thoroughly.
- **Nozzles:** Soak nozzle tips in a solution of 2 parts water and 1 part white vinegar for 5-10 minutes to remove mineral deposits. Rinse thoroughly.
- **Internal Cleaning:** Fill the water tank with warm water and 1-2 tablespoons of white vinegar. Run the device until the tank is empty to clean internal parts. Rinse by running a full tank of clean water through the device.

### 5.3 Storage

When not in use for an extended period, ensure the device is clean and dry. Store it in a cool, dry place away from direct sunlight.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully.
Weak water pressure.	Low battery; Clogged nozzle; Mineral buildup in tank/hose.	Charge the device; Clean the nozzle; Perform deep cleaning with vinegar solution.
Water leaks from tank.	Tank not securely attached; Rubber plug/valve not closed properly.	Ensure tank is twisted on tightly; Close the rubber plug/valve completely.
Device stops during use.	Water tank is empty; Low battery.	Refill water tank; Charge the device.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	JH01
Brand	Generic
Water Tank Capacity	300 mL
Power Source	Battery Powered (USB Charging)
Waterproof Rating	IPX7
Item Weight	9.38 ounces (approx. 266 grams)
Manufacturer	Shenzhen Jahunshun Electronic Technology Co., Ltd

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.