



Manuals.plus /

› kaitol /

› kaitol 6.5QT Visible Glass Air Fryer (Model KAF002) Instruction Manual

kaitol KAF002

kaitol 6.5QT Visible Glass Air Fryer (Model KAF002) Instruction Manual

Your comprehensive guide to safe and effective operation.

1. INTRODUCTION

Thank you for choosing the kaitol 6.5QT Visible Glass Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods with less oil, utilizing rapid hot air circulation. Its unique transparent glass bowl allows for easy monitoring of the cooking process. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- The glass bowl and internal components become very hot during operation. Always use oven mitts when handling hot parts.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation.
- Do not block any ventilation openings.

3. PRODUCT OVERVIEW

3.1 Components

The kaitol 6.5QT Visible Glass Air Fryer consists of the following main components:

- **Main Unit:** Houses the heating element and control panel.
- **Glass Pot (6.5QT):** Transparent, heat-resistant glass bowl for cooking.
- **Air Fry Tray:** Non-stick metal tray inserted into the glass pot for air circulation.
- **Handles:** Attach to the glass pot for safe handling.
- **Digital Touchscreen:** For setting time, temperature, and selecting presets.




Figure 1: Main unit with glass pot and air fry tray in use.



Figure 2: Exploded view of components and dimensions.

3.2 Key Features

- **6.5QT Capacity with Long Tray Design:** Accommodates larger items like whole fish or asparagus without cutting.
- **360° Visible Glass Bowl:** Allows continuous monitoring of food without opening the lid.
- **8-in-1 Presets:** Dedicated settings for Fries, Shrimp, Chicken Wings, Potato Wedges, Fish, Cake, Defrost, and Veggies.
- **Oil-Free Healthy Frying:** Achieves crispy results with up to 95% less oil.
- **Easy to Clean:** Nonstick glass bowl and tray are dishwasher safe.
- **Digital Touchscreen:** Intuitive control for temperature and time.
- **360° Heat Circulation:** Ensures even cooking.

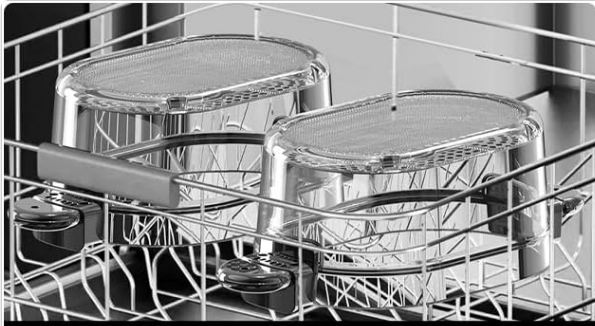

NON-STICK, EASY-CLEAN



NON-STICK, EASY-CLEAN



BPA AND PFOA FREE

11.42in



8.66in

11.42in



Note: The handles on both sides require simple installation

Figure 3: Extra-long basket design for versatile cooking.

Our 6.5QT



Their 6.5QT



EXTRA-LONG BASKET DESIGN

Cook More, Serve More, Enjoy More

Figure 4: 360° heat circulation for even cooking.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove all packaging materials from the air fryer.
2. Check that all components are present and undamaged. (Main unit, glass pot, air fry tray, handles).
3. Keep packaging for future storage or disposal.

4.2 Initial Cleaning

1. Before first use, clean the glass pot and air fry tray with warm soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

4.3 Assembly

1. Attach the handles to the glass pot. Ensure they are securely fastened.
2. Place the air fry tray inside the glass pot.
3. Insert the assembled glass pot into the main unit. Ensure it is properly seated.

4.4 First Use (Burn-in)

It is recommended to run the air fryer empty for about 10-15 minutes at 350°F (175°C) before cooking food for the first time. This helps to burn off any manufacturing residues and odors. A slight odor or smoke may be present during this process; this is normal.

5. OPERATING INSTRUCTIONS

5.1 Control Panel

The digital touchscreen allows for easy control of the air fryer's functions.



Figure 5: Digital Touchscreen Control Panel.

- **Power Button:** Turns the unit on/off.

- **Preset Icons:** Select from 8 pre-programmed cooking functions.
- **Temperature/Time Button:** Toggles between temperature and time adjustment.
- **+/- Buttons:** Adjust temperature or time values.
- **Start/Cancel Button:** Initiates or stops the cooking process.

5.2 Basic Operation

1. **Prepare Food:** Place food on the air fry tray inside the glass pot. Do not overfill.
2. **Insert Pot:** Ensure the glass pot with food is securely placed in the main unit.
3. **Power On:** Plug the air fryer into a grounded electrical outlet. The display will illuminate.
4. **Select Cooking Method:**
 - **Using Presets:** Tap the desired preset icon (e.g., Fries, Chicken Wings). The air fryer will automatically set the optimal time and temperature.
 - **Manual Setting:** Tap the "Temperature/Time" button to switch between temperature and time. Use the "+/-" buttons to adjust the values.
5. **Start Cooking:** Press the "Start/Cancel" button to begin cooking.
6. **Monitor Progress:** Utilize the 360° visible glass bowl to observe your food as it cooks.
7. **Shake/Flip (Optional):** For even cooking, especially with smaller items, you may pause the cooking cycle by removing the glass pot, shaking or flipping the food, and then reinserting the pot to resume.
8. **Completion:** The air fryer will beep when the cooking cycle is complete. Carefully remove the glass pot using oven mitts.
9. **Serve:** Transfer food to a serving dish.
10. **Power Off:** Unplug the appliance after use.

5.3 Preset Functions

The air fryer includes 8 convenient presets for common foods:



Kaitol Air Fryer: Clean Chamber No Mess



Traditional Air Fryer: Greasy Walls, Endless Scrubbing



Figure 6: 8-in-1 Preset Functions.

- **Fries:** Ideal for crispy French fries.
- **Shrimp:** Perfect for cooking shrimp quickly.
- **Chicken Wings:** For perfectly cooked chicken wings.
- **Potato Wedges:** For evenly roasted potato wedges.
- **Fish:** Gentle cooking for various fish types.
- **Cake:** For baking small cakes or desserts.
- **Defrost:** Thaws frozen items efficiently.
- **Veggies:** For roasting or crisping vegetables.

Note: Preset times and temperatures are suggestions. Adjust as needed based on food quantity, density, and desired crispness.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

CLEAR COOKING, CLEAR JOY

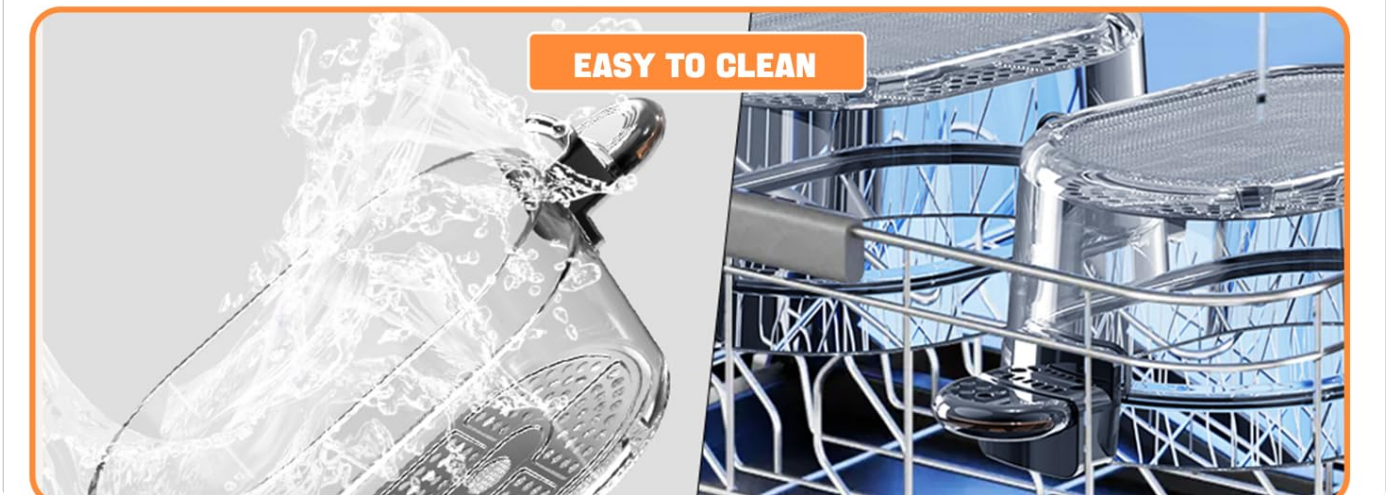


Figure 7: Easy cleaning of glass pot and air fry tray.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Glass Pot and Air Fry Tray:**
 - These components are dishwasher safe.
 - Alternatively, wash them with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
 - Avoid using metal scouring pads or harsh abrasive cleaners, as they can damage the non-stick coating.
3. **Main Unit:**
 - Wipe the exterior with a damp cloth.
 - Clean the heating element area with a soft brush if necessary, ensuring the appliance is unplugged and cool.
 - Do not immerse the main unit in water or any other liquid.
4. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; glass pot not properly inserted.	Ensure the power cord is securely plugged into a working outlet. Check that the glass pot is fully seated in the main unit.
Food is not cooked evenly.	Overcrowding the basket; food not shaken/flipped; incorrect temperature/time.	Cook food in smaller batches. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
Food is not crispy.	Too much moisture; not enough oil (for certain foods); temperature too low.	Pat food dry before cooking. Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke coming from appliance.	Grease residue from previous use; high-fat food cooking.	Clean the glass pot and air fry tray thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Appliance takes longer to cook than expected.	Glass construction may have less insulation than opaque models; touchscreen unresponsiveness.	Allow for slightly longer preheating and cooking times. Ensure the touchscreen is clean and dry for optimal responsiveness. Adjust cooking time manually if presets are too short.
Glass exterior becomes very hot.	Normal operation for glass construction.	This is expected. Always use oven mitts when handling the glass pot and avoid touching the exterior during operation. Keep children away from the appliance.

8. SPECIFICATIONS

Feature	Detail
Brand	kaitol
Model Name	KAF002 Air Fryer
Capacity	6.5 Quarts
Material	Glass
Color	Black
Product Dimensions	15.16"D x 12.4"W x 15"H
Item Weight	11.53 pounds
Output Wattage	1800 Watts
Voltage	120 Volts
Control Method	Touch (Digital Touch Panel, LED Display)
Min Temperature Setting	100 Degrees Fahrenheit
Max Temperature Setting	400 Degrees Fahrenheit
Special Feature	All-Glass Air Fryer, 360° Visible Cooking
Has Nonstick Coating	Yes
Is Dishwasher Safe	Yes (Glass Pot and Air Fry Tray)

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The kaitol 6.5QT Visible Glass Air Fryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official kaitol website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, technical assistance, or service requests, please contact kaitol customer support. Contact information can typically be found on the product packaging, the official kaitol website, or your purchase platform.

Brand: kaitol

