

[Manuals.plus](#) /

› [Borosil](#) /

› Borosil 16L 1350W Prima Pro Oven Toaster Griller Instruction Manual

## Borosil Prima Pro (BOTG06)

# Borosil 16L 1350W Prima Pro Oven Toaster Griller Instruction Manual

Model: Prima Pro (BOTG06)

## 1. INTRODUCTION

---

Thank you for choosing the Borosil 16L 1350W Prima Pro Oven Toaster Griller. This appliance is designed for versatile cooking, including grilling, baking, toasting, reheating, and barbequing. To ensure safe and optimal performance, please read this instruction manual thoroughly before first use and retain it for future reference.



*Image: The Borosil Prima Pro 16L OTG with a cake baking inside, demonstrating its baking capability.*

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plug, or any non-removable parts of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted into the oven toaster griller as they may create a fire or risk of electric shock.
- A fire may occur if the oven toaster griller is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar products.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Exercise extreme caution when removing the tray or disposing of hot grease.

### **3. PACKAGE CONTENTS**

---


Upon unpacking, please ensure all items are present and in good condition. The package includes:

- 1 x Borosil 16L Oven Toaster Griller (OTG)
- 1 x Stainless Steel Grill Rack cum Barbeque Stand
- 1 x Tray Handle
- 1 x Cooking Tray (Bake Pan)
- 4 x Skewers
- 1 x Removable Crumb Tray
- 1 x User Manual

# ACCESSORIES



Bake pan

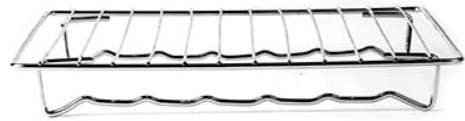


Grill rack



Tray handle



Crumb tray

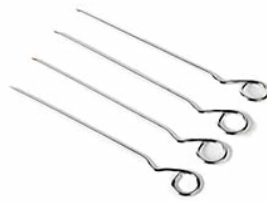

Rotisserie handle

*Image: A visual representation of the accessories included with the Borosil Prima Pro OTG, such as the bake pan, grill rack, tray handle, crumb tray, and skewers.*

## 4. PRODUCT OVERVIEW

The Borosil Prima Pro 16L OTG is designed for ease of use and versatile cooking. It features a compact design with intuitive controls.



*Image: Front view of the Borosil Prima Pro 16L OTG, showcasing its sleek design and control panel on the right side.*

### **Control Panel Features:**

- **Temperature Control Knob:** Adjusts the internal temperature from 100°C to 250°C.
- **Selector Knob:** Selects heating elements (top, bottom, or both).
- **Timer Knob:** Sets the cooking time from 0 to 60 minutes with an auto shut-off function.
- **Power Indicator Light:** Illuminates when the appliance is operating.

## EASY TO USE



*Image: A close-up view of the control panel on the Borosil Prima Pro OTG, highlighting the adjustable temperature control, selector knob for heating options, and the 0-60 minute mechanical timer.*

## 5. SETUP

### Initial Placement:

1. Place the OTG on a stable, heat-resistant, and flat surface.
2. Ensure there is adequate ventilation around the appliance (at least 10-15 cm clearance on all sides).
3. Do not place the OTG near flammable materials such as curtains or paper.
4. Plug the power cord into a grounded electrical outlet.

### Before First Use:

1. Remove all packaging materials, stickers, and accessories from inside the oven.
2. Wipe the interior and exterior surfaces with a damp cloth. Dry thoroughly.
3. To eliminate any manufacturing odors, operate the empty oven for approximately 15 minutes at the maximum temperature (250°C) with both heating elements selected. A slight smoke or odor is normal during this initial operation. Ensure the area is well-ventilated.

4. Allow the oven to cool completely before first use with food.

## 6. OPERATING INSTRUCTIONS

The Borosil Prima Pro OTG offers multiple cooking functions:



*Image: The Borosil Prima Pro 16L OTG with text overlay indicating its multi-functional capabilities: Grill, Bake, Toast, Reheat.*

### General Operation Steps:

1. **Prepare Food:** Place food on the cooking tray or grill rack as appropriate.
2. **Insert Tray/Rack:** Carefully slide the tray or rack into the desired rack position inside the oven.
3. **Set Temperature:** Turn the **Temperature Control Knob** to the desired temperature (100°C - 250°C).
4. **Select Function:** Turn the **Selector Knob** to choose the heating mode:
  - **Top Heating:** For grilling or browning.
  - **Bottom Heating:** For baking or reheating.
  - **Both Top & Bottom Heating:** For general baking, roasting, or toasting.

5. **Set Timer:** Turn the **Timer Knob** to the desired cooking time (0-60 minutes). The power indicator light will illuminate. The oven will automatically shut off when the timer reaches zero. For continuous operation, turn the timer past 60 minutes to the 'Stay On' position (if available, otherwise reset for longer times).
6. **Monitor Cooking:** Observe food through the heat-resistant toughened glass door.
7. **Remove Food:** Once cooking is complete and the timer has sounded, carefully open the door. Use the tray handle to safely remove hot trays or racks.

### Specific Cooking Functions:

- **Baking:** Use the cooking tray. Select bottom heating or both top and bottom heating. Set temperature according to recipe.
- **Grilling/Barbequing:** Use the grill rack and skewers. Select top heating. Place food closer to the top heating element for faster grilling.
- **Toasting:** Place bread slices on the grill rack. Select both top and bottom heating. Adjust time for desired crispness.
- **Reheating:** Use the cooking tray. Select bottom heating or both. Set a lower temperature and shorter time.



*Image: The Borosil Prima Pro OTG displayed with a variety of cooked items, including cupcakes, mini burgers, and paneer tikka, demonstrating its versatility for different meals.*

## 7. CLEANING AND MAINTENANCE

---

Regular cleaning ensures the longevity and hygienic operation of your OTG.

### Before Cleaning:

1. Always unplug the appliance from the power outlet.
2. Allow the OTG to cool down completely before cleaning any part.

### Cleaning Steps:

- **Removable Crumb Tray:** Slide out the crumb tray from the bottom of the oven. Discard crumbs. Wash the tray with warm, soapy water, rinse, and dry thoroughly. Reinsert the tray.
- **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Avoid harsh chemicals or abrasive pads that could damage the surface.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scourers.
- **Accessories:** Wash the cooking tray, grill rack, and skewers with warm, soapy water. Rinse and dry completely before storing or reusing.
- **Do Not Immerse:** Never immerse the main body of the OTG, power cord, or plug in water or any other liquid.

## 8. TROUBLESHOOTING

---

If you encounter issues with your Borosil Prima Pro OTG, refer to the following common problems and solutions:

- **Appliance does not turn on:**
  - Ensure the power cord is securely plugged into a working electrical outlet.
  - Check if the timer knob is set to a cooking duration or the 'Stay On' position. The appliance will not operate if the timer is at 'OFF'.
  - Verify that the temperature and selector knobs are set correctly.
- **Food is not cooking evenly:**
  - Ensure food is placed centrally on the tray or rack.
  - Preheat the oven for 5-10 minutes before placing food inside.
  - Adjust the rack position for optimal heat distribution based on the food type.
- **Door does not close properly:**
  - Check for any obstructions preventing the door from closing fully.
  - Ensure the grill rack or cooking tray is inserted correctly and not protruding.
- **Excessive smoke during operation (after initial burn-off):**
  - This may indicate food residue or grease buildup. Unplug the oven, allow it to cool, and clean the interior thoroughly, especially the heating elements and crumb tray.
  - Ensure the crumb tray is clean and free of debris.

If the problem persists after attempting these solutions, please contact Borosil customer support.

## 9. SPECIFICATIONS

---

Detailed technical specifications for the Borosil 16L Prima Pro Oven Toaster Griller:

- **Model Name:** Prima Pro
- **Item Model Number:** BOTG06
- **Capacity:** 16 Liters
- **Power:** 1350 Watts
- **Voltage:** Electric (Standard household voltage, specific voltage may vary by region)
- **Temperature Range:** 100°C - 250°C
- **Timer:** 0-60 minutes mechanical timer with auto shut-off
- **Control Type:** Knob Control
- **Special Features:** Indicator Light, Removable Crumb Tray, Heat-resistant Toughened Glass Door
- **Product Dimensions:** 31.7 cm (Depth) x 40 cm (Width) x 25.5 cm (Height)
- **Item Weight:** 4.5 Kilograms
- **Color:** Black
- **Country of Origin:** India



*Image: A diagram showing the dimensions of the Borosil Prima Pro 16L OTG: 39.5 cm depth, 50 cm width, and 34.5 cm height.*

**16 L CAPACITY**  
Can fit 9" pizza or 3-4 slices of toast



*Image: The Borosil Prima Pro 16L OTG with text indicating its 16L capacity, ability to fit a 9-inch pizza or 3-4 slices of toast, 1500 Watts power (Note: Product title states 1350W), and a 2-year warranty.*

## 10. WARRANTY AND SUPPORT

The Borosil 16L 1350W Prima Pro Oven Toaster Griller comes with a **2-year warranty** against any manufacturing defects. Please retain your purchase receipt for warranty claims.

For any product-related queries, service requests, or warranty support, please contact Borosil customer service through their official website or the contact information provided with your purchase documentation.