



Manuals.plus /

› Yoidesu /

› Yoidesu 4K Digital Camera (Model Yoidesuvmsr6qwk8u-11) User Manual

Yoidesu Yoidesuvmsr6qwk8u-11

Yoidesu 4K Digital Camera User Manual

Model: Yoidesuvmsr6qwk8u-11

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Yoidesu 4K Digital Camera. Please read this manual thoroughly before using the camera and keep it for future reference.

The Yoidesu 4K Digital Camera is a compact device designed for high-quality photography and video recording. It features a 64MP sensor, 4K video capabilities, 10X optical zoom, 2X digital zoom (for an effective 20X zoom), autofocus, built-in flash, and Wi-Fi transfer functionality.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Yoidesu 4K Digital Camera (White)
- USB Cable
- Wrist Strap
- User Manual
- (Batteries are not included and must be purchased separately)



Image: The Yoidesu 4K Digital Camera (white model) shown with its included USB charging cable and wrist strap.

3. CAMERA OVERVIEW

Familiarize yourself with the camera's components and controls.

AF Autofocus

One touch visibility



Image: Rear view of the camera, highlighting the LCD screen, zoom buttons, EV button, OK button, power button, MENU button, and MODE button.



Image: Front-side view of the camera, showing the retractable optical zoom lens, built-in flash, and speaker grille.

4. SETUP

4.1. Battery Installation

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert the battery (not included) according to the polarity indicators inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

4.2. Memory Card Installation

The camera supports up to 256 GB flash memory (Memory Stick Pro compatible). A memory card is required to store photos and videos.

1. Locate the memory card slot, usually near the battery compartment.
2. Insert the memory card with the contacts facing the correct direction (refer to the diagram near the slot).
3. Push the card gently until it clicks into place. To remove, push the card again until it springs out.

4.3. Charging the Battery

Connect the camera to a power source using the provided USB cable. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press and hold the **Power button** (usually marked with a circle and a vertical line) to turn the camera on or off.

5.2. Taking Photos

1. Turn on the camera.
2. Frame your shot using the LCD screen.
3. Press the **Shutter button** (typically on top of the camera) halfway down to activate autofocus. The camera will lock focus on the subject.
4. Press the Shutter button fully down to capture the photo.



Image: The camera's screen displaying the autofocus function, indicating a clear focus on the subject.

5.3. Recording Videos

1. Turn on the camera.
2. Press the **MODE button** to switch to video recording mode.

3. Press the Shutter button to start recording. A red "REC" indicator will appear on the screen.
4. Press the Shutter button again to stop recording.



Image: The camera's screen displaying a 4K Ultra HD video playback, with a play icon overlay.

5.4. Zoom Functionality

Use the zoom buttons (often marked with + and - or a magnifying glass icon) to adjust the optical and digital zoom. The camera features 10X optical zoom and 2X digital zoom, providing an effective 20X zoom.



Image: The camera's screen showing a subject with a zoom box, illustrating the camera's impressive zoom capabilities.

5.5. Using the Flash

The camera has a built-in flash for low-light conditions. Press the **Flash button** (often marked with a lightning bolt icon) to cycle through flash modes (Auto, Fill-flash, Red-eye reduction, Off).

Impressive Zoom Functionality

With 10X optical zoom and 2X digital zoom, effectively achieving a 20X zoom effect



Image: A side-by-side comparison showing the effect of the built-in flash, with one image taken with flash on and the other with flash off.

5.6. Wireless WiFi Transfer

The camera supports wireless WiFi transfer. This allows you to quickly transfer photos and videos to your smartphone, computer, or other devices for sharing or backup.

1. Enable Wi-Fi on your camera via the **MENU** settings.
2. On your smartphone or computer, search for the camera's Wi-Fi network and connect to it.
3. Use the dedicated camera app (if available) or your device's file transfer features to access and download media.

5.7. Timer Function

The timer function is useful for selfies or group photos. Access the timer settings through the **MENU** to select a delay (e.g., 2 seconds, 10 seconds).

5.8. Filters and Effects

Explore various filters and effects available in the camera's settings to add unique visual styles to your photos and videos. These can be accessed via the **MENU** or **MODE** button, depending on the specific camera interface.



Image: The camera's screen showing a selection of different filters and visual effects that can be applied to images.

6. MAINTENANCE

6.1. Cleaning the Camera

- **Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals.
- **Lens:** Use a lens brush or a blower to remove dust. For smudges, use a specialized lens cleaning solution and a microfiber lens cloth. Do not touch the lens surface with your fingers.
- **LCD Screen:** Gently wipe with a soft, dry microfiber cloth.

6.2. Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the battery to prevent leakage.



Image: The Yoidesu 4K Digital Camera placed inside a protective brown leather case, demonstrating proper storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is dead or incorrectly inserted.	Charge the battery or re-insert it correctly. Ensure batteries are included (not provided with product).
Cannot take photos/record videos.	Memory card is full, locked, or not inserted.	Insert a memory card, unlock it, or delete unnecessary files.
Images are blurry.	Autofocus failed, camera shake, or dirty lens.	Ensure autofocus locks before shooting. Hold the camera steady. Clean the lens.
Flash not working.	Flash is turned off or in an inappropriate mode.	Check flash settings and ensure it's enabled or in Auto mode.
Wi-Fi transfer issues.	Incorrect Wi-Fi settings or connection problems.	Ensure Wi-Fi is enabled on the camera and your device. Reconnect to the network.

8. SPECIFICATIONS

Key technical specifications for the Yoidesu 4K Digital Camera:

Feature	Detail
Model Name	Yoidesuvmsr6qwk8u-11
Effective Still Resolution	64 MP
Video Capture Format	MP4 (4K resolution)
Optical Zoom	10X
Digital Zoom	2X (Effective 20X total zoom)
Image Stabilization	Digital
Autofocus	Yes (AF Autofocus Technology)
Screen Size	3 Inches
Connectivity	USB, Wi-Fi
Flash Memory Type	Memory Stick Pro compatible
Memory Storage Capacity	Up to 256 GB
Minimum Shutter Speed	1/4000 seconds
Color	White



Image: An infographic summarizing the camera's main features, including 64MP photos, 12X zoom, 4K HD video recording, wireless WiFi transmission, multiple filters, retractable lens, built-in flash, timed photo taking, and AF autofocus.

9. WARRANTY AND SUPPORT

9.1. Warranty Information

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. Extended protection plans may be available for purchase separately.

9.2. Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Yoidesu customer support through their official website or the contact information provided with your purchase documentation.

You can visit the Yoidesu store on Amazon for more information: [Yoidesu Store](#)