

Manuals.plus /

› Ttgsbhj /

› Ttgsbhj AT340 High Speed Slicer Parts Instruction Manual for KENWOOD Stand Mixers

Ttgsbhj AT340

Ttgsbhj AT340 High Speed Slicer Parts Instruction Manual

Compatible with KENWOOD Stand Mixers

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Ttgsbhj AT340 High Speed Slicer Parts. Designed for compatibility with KENWOOD stand mixers, this accessory enhances your kitchen capabilities by providing efficient and precise slicing for various ingredients. Please read this manual thoroughly before installation and operation to ensure optimal performance and longevity of the product.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the stand mixer is unplugged from the power outlet before attaching or detaching the slicer parts.
- Keep hands and utensils away from moving parts during operation.
- Do not operate the slicer with damaged parts or if the housing is cracked.
- Always use the food pusher to feed ingredients into the slicer; never use fingers.
- Clean all parts thoroughly before first use and after each subsequent use.
- This accessory is intended for household use only.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package:

- AT340 High Speed Slicer Attachment

- Food Pusher
- Slicing Disc(s) (specific types may vary)
- Instruction Manual (this document)

4. SETUP AND INSTALLATION

Follow these steps to correctly attach the AT340 High Speed Slicer to your KENWOOD stand mixer:

1. **Preparation:** Ensure your KENWOOD stand mixer is unplugged and stable on a flat surface.
2. **Accessory Port:** Locate the high-speed accessory port on the front of your KENWOOD stand mixer. Remove the cover if present.
3. **Insert Slicer:** Align the AT340 slicer attachment with the accessory port. Gently push and twist until it locks securely into place. Refer to your stand mixer's manual for specific attachment instructions if needed.
4. **Insert Slicing Disc:** Open the slicer's lid and carefully place the desired slicing disc onto the spindle, ensuring it sits correctly. Close the lid securely.
5. **Food Pusher:** Place the food pusher into the feed tube.



Image 1: The Ttgsbhj AT340 High Speed Slicer Attachment, ready for installation. This image shows the main unit with

its clear lid and feed tube.



Image 2: The Ttgsbhj AT340 Slicer attached to a KENWOOD stand mixer, actively slicing cucumbers into a bowl. This illustrates the accessory in operation.

5. OPERATING INSTRUCTIONS

Once the slicer is securely attached, follow these steps for operation:

1. **Prepare Ingredients:** Wash and peel ingredients as necessary. Cut larger items into pieces that fit comfortably into the feed tube.
2. **Position Bowl:** Place a suitable bowl or container beneath the slicer's output chute to collect the sliced food.
3. **Power On:** Plug in your KENWOOD stand mixer and turn it on to a low or medium speed setting, as recommended for slicing.
4. **Feed Ingredients:** Carefully place ingredients into the feed tube. Use the food pusher to gently guide them towards the rotating slicing disc. **Do not force ingredients.**
5. **Monitor Progress:** Observe the slicing process and ensure the collection bowl does not overflow.
6. **Finish:** Once all ingredients are sliced, turn off the stand mixer and unplug it from the power outlet.

Tips for Best Results:

- For softer foods, chill them slightly before slicing to achieve firmer cuts.
- Ensure ingredients are uniformly sized to fit the feed tube for consistent slicing.
- Avoid overfilling the feed tube; process ingredients in smaller batches if necessary.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your AT340 High Speed Slicer Parts:

1. **Disassembly:** Ensure the stand mixer is unplugged. Carefully detach the slicer attachment from the mixer. Remove the slicing disc and food pusher.
2. **Washing:** Wash all removable parts (slicer housing, lid, food pusher, slicing discs) in warm, soapy water. Use a brush to remove any food residue from the blades and crevices.
3. **Rinsing:** Rinse all parts thoroughly under clean running water.
4. **Drying:** Dry all parts completely before reassembly or storage. Air drying is recommended.
5. **Storage:** Store the slicer parts in a clean, dry place, preferably in their original packaging or a dedicated storage container to protect the blades.

Important: Do not immerse the main body of the stand mixer in water. Refer to your KENWOOD stand mixer's manual for cleaning instructions for the main unit.

7. TROUBLESHOOTING

If you encounter issues with your AT340 High Speed Slicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Slicer not operating.	Not properly attached to mixer; mixer not powered on; power outlet issue.	Ensure slicer is securely locked; check mixer power and outlet.
Poor slicing performance.	Incorrect disc; dull blade; ingredients too soft or hard; feed tube overloaded.	Verify correct disc for task; ensure blades are clean; pre-chill soft foods; do not force ingredients.
Excessive vibration or noise.	Slicer not securely attached; foreign object inside; damaged part.	Re-attach slicer securely; inspect for obstructions; discontinue use if damaged.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Product Name	AT340 High Speed Slicer Parts
Brand	Ttgsbhj
Compatibility	KENWOOD Stand Mixers (specific models may vary)
Package Dimensions	1.18 x 0.79 x 0.39 inches
Item Weight	1.76 ounces (approx. 50 Grams)
Material	Durable food-grade materials
Model Number	yurumaoyi (Manufacturer's internal reference)

9. WARRANTY AND SUPPORT

This Ttgsbhj product is designed for durability and performance. For specific warranty details, please refer to the documentation included with your purchase or contact the retailer. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Ttgsbhj customer service through your purchase platform or the official brand website.

Please retain your proof of purchase for warranty claims.