

[Manuals.plus](#) /

› [Chefman](#) /

› Chefman Caffeinator Single Serve Coffee Maker User Manual

Chefman C14-DB-1C-US2

Chefman Caffeinator Single Serve Coffee Maker User Manual

Model: C14-DB-1C-US2

Brand: Chefman

INTRODUCTION

The Chefman Caffeinator Single Serve Coffee Maker is designed to provide a convenient and customizable coffee brewing experience. This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your new coffee maker. Please read all instructions carefully before first use.



Figure 1: Chefman Caffeinator Single Serve Coffee Maker. This image shows the coffee maker from the front, with a cup placed on the drip tray, and coffee being dispensed. K-Cup pods and a reusable filter are visible next to the machine.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons. This appliance is for household use only.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury

to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot liquids.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and labels from the coffee maker. Ensure all components are present: coffee maker unit, 48 oz. removable water reservoir, reusable coffee filter basket, and drip tray.
2. **Initial Cleaning:** Before first use, wash the removable water reservoir, reusable coffee filter basket, and drip tray in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **Install Water Filter:** The 48 oz. water tank comes equipped with a charcoal water filter. Ensure it is properly seated in the reservoir to keep your java tasting perfect.
4. **Fill Water Reservoir:** Remove the 48 oz. water reservoir from the back of the unit. Fill it with fresh, cold water up to the MAX fill line. Replace the reservoir securely onto the unit.



Figure 2: Removable 48 oz. Water Reservoir. This image illustrates the transparent water reservoir on the side of the coffee maker, indicating its removable nature and the presence of a charcoal filter.

5. **Power Connection:** Place the coffee maker on a stable, flat surface. Plug the power cord into a standard 120V AC electrical outlet. The control panel will illuminate.
6. **First Use Cycle (Cleaning Cycle):** Before brewing coffee, perform a cleaning cycle. Fill the water reservoir with water. Place an empty mug on the drip tray. Close the brew head. Select the "CLEAN" function on the control panel and press "BREW/STOP". Discard the hot water after the cycle is complete. Repeat this process once more.

OPERATING INSTRUCTIONS

The Caffeinator offers versatile brewing options and customizable settings for your perfect cup.

Control Panel Overview

Choose your size, strength, and temp, and save your favorites



Figure 3: Control Panel. This image provides a detailed view of the coffee maker's touch control panel, showing options for cup size (4oz, 6oz, 8oz, 10oz, 12oz), brew strength (Light, Classic, Strong), temperature (Warm, Hot, Piping Hot), and function buttons (Over Ice, Brew/Stop, Clean, Fav 1-4).

- **Cup Size Options:** 4oz, 6oz, 8oz, 10oz, 12oz.
- **Brew Strength Settings:** Light, Classic, Strong.
- **Brew Temperature Settings:** Warm, Hot, Piping Hot.
- **Over Ice Function:** For brewing iced coffee.
- **BREW/STOP Button:** Initiates or stops the brewing cycle.
- **CLEAN Function:** For cleaning the internal components.
- **FAV 1-4 Buttons:** Programmable favorite settings for quick brewing.

Brewing Coffee (K-Cup Pods or Ground Coffee)

1. **Prepare Brew Head:** Lift the handle to open the brew head.
2. **Insert Coffee:**
 - For K-Cup Pods: Insert a K-Cup compatible pod into the pod holder.

- For Ground Coffee: Place the reusable coffee filter basket into the pod holder. Add your desired amount of ground coffee (up to the MAX fill line) into the filter.



Brew with pods or ground coffee

Figure 4: Brewing with Pods or Grounds. This image shows the open brew head with a K-Cup pod and a reusable filter basket with ground coffee, illustrating the dual compatibility of the machine.

3. **Close Brew Head:** Lower the handle firmly until it clicks into place.
4. **Place Mug:** Position your mug on the adjustable drip tray. The adjustable mug lift helps minimize splashes and splatter for various mug sizes.

Easy Lift System



Helps to reduce splatter with
a wide range of mug sizes.

Figure 5: Adjustable Mug Lift. This image demonstrates the adjustable height of the drip tray, accommodating various mug sizes to prevent splashing.

5. **Select Settings:** Use the touch controls to select your desired cup size (4oz, 6oz, 8oz, 10oz, 12oz), brew strength (Light, Classic, Strong), and coffee temperature (Warm, Hot, Piping Hot).
6. **Start Brewing:** Press the "BREW/STOP" button to begin brewing. The Caffeinator's TripleStream Technology funnels water through three strategic points for more flavor with less waiting.



Figure 6: TripleStream Technology. This close-up image shows the internal mechanism of the brew head, highlighting the three water distribution points for enhanced flavor extraction.

7. **Enjoy:** Your coffee will dispense into your mug. The machine will automatically stop when the selected volume is reached.

Iced Coffee Function

To brew iced coffee, fill your mug with ice before placing it on the drip tray. Select the "OVER ICE" function on the control panel. This function carefully lowers the brewing temperature to prevent your ice from melting and watering down your brew.

Over ice setting



Brews at a lower temp for perfect iced coffee that's not watered down.

Figure 7: Over Ice Setting. This image shows the coffee maker dispensing brewed coffee over ice into a clear glass, demonstrating the iced coffee function.

Programming Favorite Settings

The Caffeinator allows you to program up to four favorite brew settings for quick, one-touch access.

1. Select your desired cup size, brew strength, and temperature.
2. Press and hold one of the "FAV 1-4" buttons until it flashes, indicating the setting has been saved.
3. To use a saved favorite, simply press the corresponding "FAV" button and then "BREW/STOP".

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Chefman Caffeinator.

Daily Cleaning

- **Drip Tray and Grid:** Remove the drip tray and grid. Wash them in warm, soapy water, rinse, and dry.

- **Pod Holder/Reusable Filter:** After each use, remove and discard the used K-Cup pod or empty the ground coffee from the reusable filter. Wash the pod holder/filter basket in warm, soapy water, rinse, and dry.
- **Water Reservoir:** Empty any remaining water from the reservoir daily. Rinse it with fresh water.
- **Exterior:** Wipe the exterior of the coffee maker with a damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling (Monthly or as needed)

Mineral deposits from water can build up in your coffee maker over time, affecting performance. Descale your unit regularly.

1. Empty the water reservoir.
2. Fill the reservoir with a mixture of one part white vinegar and two parts water.
3. Place a large mug on the drip tray.
4. Run a brew cycle without any coffee in the brew head. Discard the solution.
5. Repeat the cycle until the reservoir is empty.
6. Rinse the reservoir thoroughly and fill with fresh water. Run 2-3 cycles with fresh water to rinse out any vinegar residue.

Charcoal Water Filter Replacement

The charcoal water filter should be replaced approximately every 2 months or after 60 tank refills, whichever comes first, to ensure optimal water quality and coffee taste. Refer to Chefman's official website or customer support for replacement filters.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Water reservoir is empty or not properly seated. Brew head not fully closed.	Fill reservoir and ensure it is securely in place. Close the brew head firmly until it clicks.
Coffee tastes weak or watery.	Incorrect brew strength selected. Too much water for coffee grounds/pod. Machine needs descaling.	Select a stronger brew setting. Use appropriate coffee-to-water ratio. Perform a descaling cycle.
Coffee overflows or splashes.	Mug is too small or not positioned correctly. Drip tray is full.	Use a larger mug or adjust the mug lift. Empty the drip tray.
Machine is noisy during brewing.	Normal operation sound. Air in the pump.	This is typically normal. If excessive, ensure reservoir is full and machine is primed.
"LOW WATER" alert.	Water level in reservoir is low.	Refill the water reservoir.

SPECIFICATIONS

- **Brand:** Chefman
- **Model Name:** Caffeinator
- **Model Number:** C14-DB-1C-US2
- **Color:** Concrete
- **Product Dimensions:** 14"D x 4.5"W x 12.6"H
- **Item Weight:** 8.42 pounds

- **Water Reservoir Capacity:** 48 oz.
- **Coffee Input Type:** Ground, Pod (K-Cup compatible)
- **Special Features:** Adjustable Brew Strength, Iced Coffee Function, Programmable Favorites, Removable Water Reservoir, Adjustable Mug Lift, TripleStream Technology.
- **Power:** 1500W/120V
- **UPC:** 810170923388

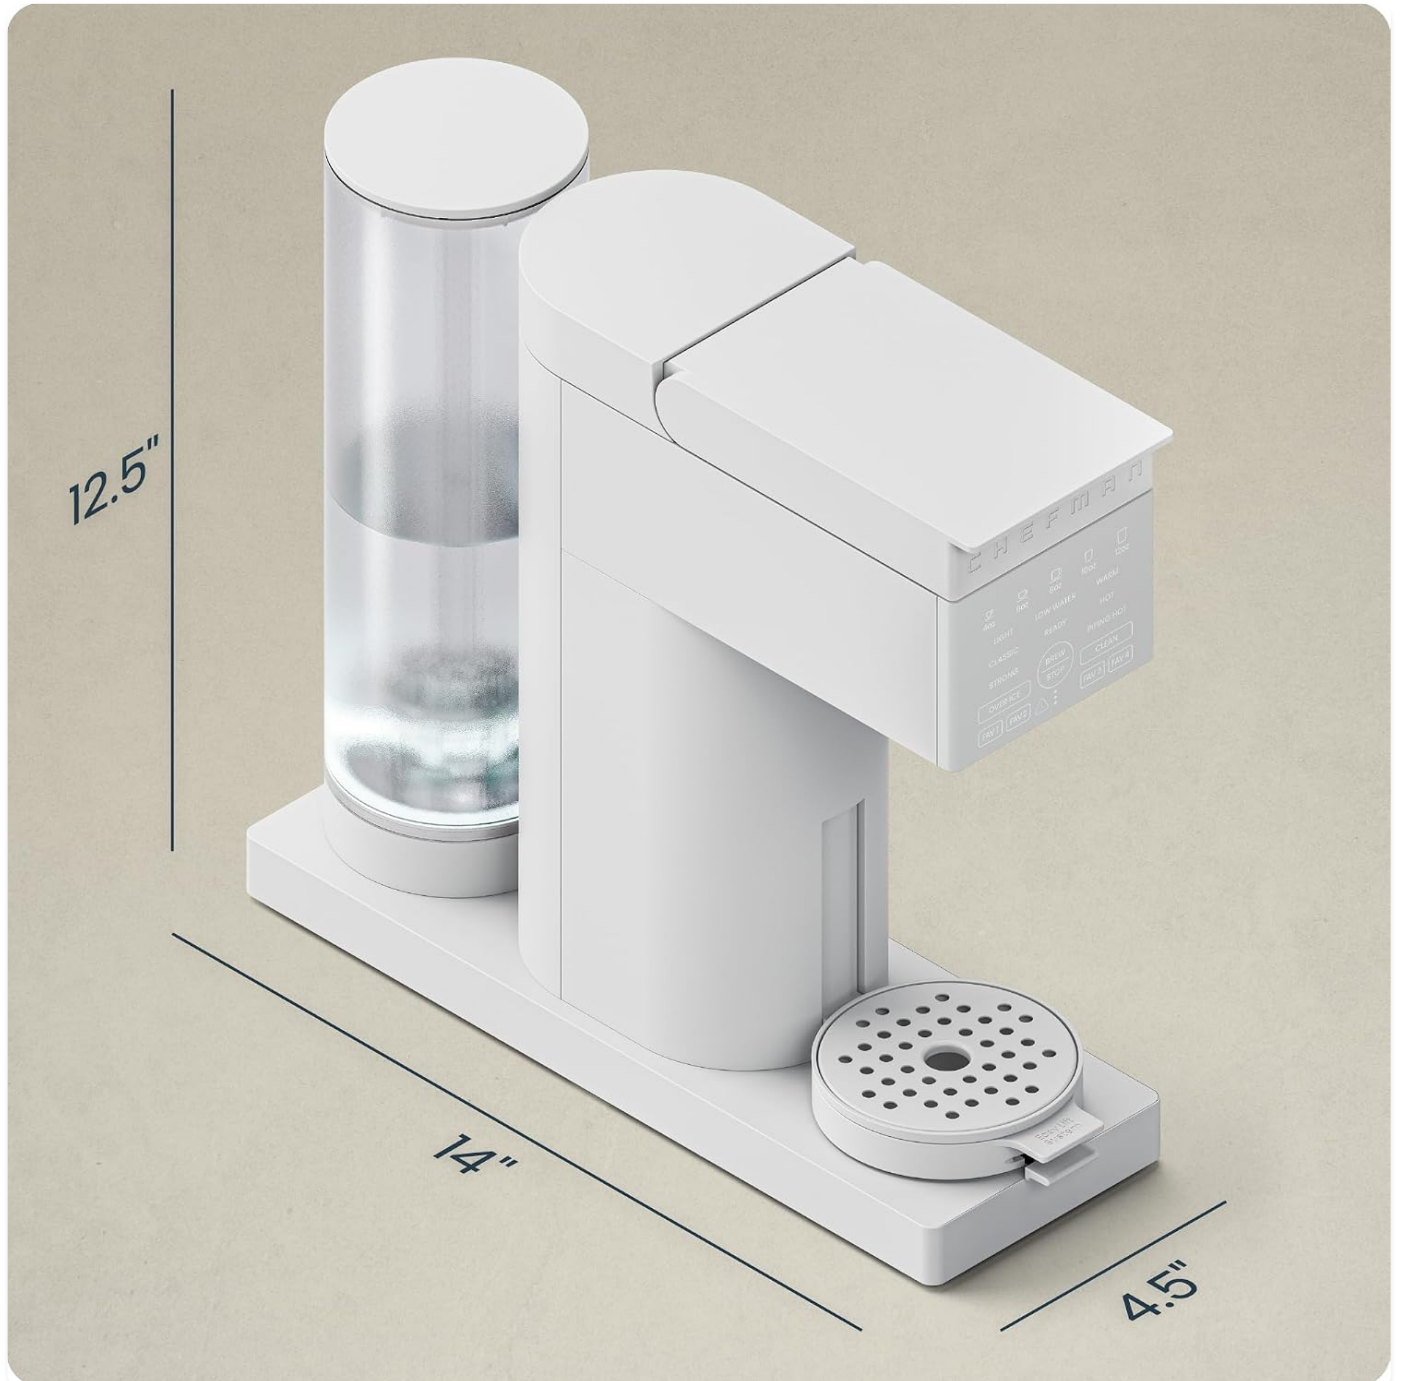


Figure 8: Product Dimensions. This image provides a visual representation of the coffee maker's dimensions: 14 inches deep, 4.5 inches wide, and 12.5 inches high.

WARRANTY & SUPPORT

The Chefman Caffeinator Single Serve Coffee Maker is cETL approved with advanced safety technology for long-lasting durability. It is backed by a **5-year warranty** provided by Chefman.

For customer support, warranty claims, or to purchase replacement parts and accessories, please visit the official Chefman website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question