

BUYDEEM LP55+CP152

BUYDEEM 5-in-1 Slow Cooker

Model: LP55+CP152

INTRODUCTION

Thank you for choosing the BUYDEEM 5-in-1 Slow Cooker. This versatile appliance is designed to simplify your cooking process with multiple functions and user-friendly controls. Please read this manual thoroughly before use to ensure safe and efficient operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The removable pot is designed for use with this appliance only. It must not be used on a stovetop or in a microwave.

PRODUCT OVERVIEW

Components

- Main Heating Base Unit
- Removable 4.7-Quart Nonstick Cast Aluminum Stockpot
- Glass Lid with Handle

Control Panel

The control panel features an LCD display and several buttons for easy operation:

- **TEMP Button:** Adjusts temperature settings (High/Low).
- **MENU Button:** Cycles through the 5 primary cooking modes: Slow Cook, Sear/Sauté, Braise, Bean, and Soup. Additional settings for Brown Rice, White Rice, Oats, and Pasta are also available.
- **WARM Button:** Activates or deactivates the manual keep-warm function.
- **CANCEL Button:** Stops the current cooking program.
- **TIME/START/PAUSE Knob:** Rotates to adjust cooking time and presses to start or pause the cooking process.
- **LCD Display:** Shows selected mode, temperature, and remaining cooking time.

3 HEATING SETTINGS

Two temperature settings for cooking and keep warm after cooking.



Figure 1: Control Panel and Display



Figure 2: Product Components

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the removable nonstick stockpot and glass lid with warm, soapy water. Rinse thoroughly and dry. Wipe the main heating base unit with a damp cloth. Do not immerse the base unit in water.
3. **Assemble:** Place the clean, dry nonstick stockpot securely onto the main heating base unit. Ensure it sits flat on the heating surface.
4. **Placement:** Place the slow cooker on a stable, flat, heat-resistant surface away from edges and heat sources.

OPERATING INSTRUCTIONS

General Operation

1. Plug the power cord into a standard 120V AC electrical outlet. The display will illuminate.

2. Add your ingredients to the nonstick stockpot.
3. Place the glass lid on the pot.
4. Press the **MENU** button to select your desired cooking mode.
5. Use the **TEMP** button to select High or Low temperature if applicable for the chosen mode.
6. Rotate the **TIME/START/PAUSE** knob to set the desired cooking time (up to 24 hours for most modes).
7. Press the **TIME/START/PAUSE** knob to begin cooking. The display will show the remaining time.
8. To pause cooking, press the **TIME/START/PAUSE** knob. Press again to resume.
9. To cancel a program, press the **CANCEL** button.

Cooking Modes

The BUYDEEM 5-in-1 Slow Cooker offers 5 primary cooking modes, along with specialized settings for various foods:

- **Slow Cook:** Ideal for tenderizing meats and simmering dishes over extended periods.
- **Sear/Sauté:** Allows you to brown ingredients directly in the pot before slow cooking, eliminating the need for extra pans.
- **Braise:** Perfect for slow-cooking meats and vegetables in liquid, resulting in rich flavors.
- **Bean:** Features an auto pre-soak function for perfectly cooked beans.
- **Soup:** Designed for preparing various soups and stews with precise heat control.
- **Additional Settings:** Includes dedicated programs for Brown Rice, White Rice, Oats, and Pasta for optimal results.

5 COOKING MODES

Complete the whole slow-cook process in one pot.



Slow Cook



Sear/ Saute



Braise



Bean



Soup

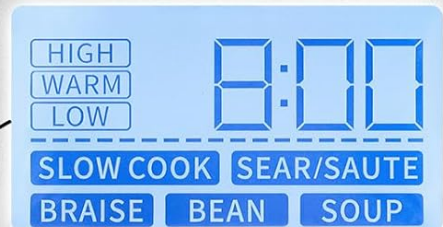


Figure 3: 5 Cooking Modes

Keep Warm Function

- **Automatic Keep Warm:** After most cooking programs (excluding Sear/Sauté) are complete, the appliance will automatically switch to a keep-warm mode for up to 2 hours.
- **Manual Keep Warm:** You can manually activate the keep-warm function by pressing the **WARM** button. This mode can keep food warm for up to 24 hours.

Compatibility with Other Cookware

The main heating base unit is compatible with various flat-bottom cookware ranging from 5.9 inches to 8.3 inches (15-21 cm) in diameter. This allows for greater flexibility in your cooking options.

Figure 4: Compatible Cookware

Video 1: This video demonstrates the BUYDEEM 5-in-1 Slow Cooker's features, including its various cooking modes and compact design. It highlights the ease of use and versatility for different meals.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your BUYDEEM Slow Cooker.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Removable Pot:** The 4.7-quart nonstick cast aluminum pot is designed for easy cleaning. While it is stated as dishwasher-safe, handwashing is recommended to preserve the nonstick coating and extend its lifespan. Use warm, soapy water and a non-abrasive sponge.
3. **Glass Lid:** The glass lid is dishwasher-safe. Handwashing with warm, soapy water is also suitable.
4. **Main Heating Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the base unit in water or any other liquid. The water-based coating on the heating plate can be wiped clean easily and helps prevent scorching.
5. **Storage:** Ensure all parts are clean and dry before storing. Store the appliance in a cool, dry place.



Figure 5: Dishwasher-Safe Pot and Lid

TROUBLESHOOTING

If you encounter any issues with your slow cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in or power outage.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.

Problem	Possible Cause	Solution
Food is not cooking evenly.	Incorrect temperature setting or uneven ingredient distribution.	Verify the temperature setting for your recipe. Stir ingredients occasionally if allowed by the recipe. Ensure the pot is centered on the heating surface.
Food is burning or sticking.	Too high temperature or insufficient liquid.	Reduce the temperature setting. Add more liquid as needed for slow cooking. Ensure the nonstick coating is intact.
Display shows an error code.	Internal malfunction.	Unplug the appliance, wait a few minutes, then plug it back in. If the error persists, contact customer support.

SPECIFICATIONS

- **Brand:** BUYDEEM
- **Model Number:** LP55+CP152
- **Capacity:** 4.7 Quarts (4700 Cubic Centimeters)
- **Material:** Aluminum, Stainless Steel
- **Product Dimensions:** 14"D x 13"W x 12"H
- **Item Weight:** 12.92 pounds
- **Wattage:** 1000.0 W
- **Voltage:** 120.0 V
- **Control Method:** Touch
- **Number of Settings:** 8 (referring to the various cooking modes and food-specific programs)



Figure 6: Product Dimensions

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official BUYDEEM website. You may also contact BUYDEEM customer service directly for assistance with product inquiries, troubleshooting, or parts replacement.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question