

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALSO GO](#) /

› [ALSO GO Podcast Equipment Bundle User Manual: BM-800 Microphone & V10XPRO Audio Mixer](#)

ALSO GO MG0008-BK

ALSO GO Podcast Equipment Bundle User Manual

Model: BM-800 Microphone & V10XPRO Audio Mixer (MG0008-BK)

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ALSO GO Podcast Equipment Bundle. This professional kit includes a BM-800 condenser microphone, V10XPRO audio mixer, and essential accessories designed for high-quality audio recording and live streaming across various platforms and devices.

WHAT'S INCLUDED

Your ALSO GO Podcast Equipment Bundle contains the following components:

- BM-800 Condenser Microphone
- V10XPRO Audio Mixer (Sound Card)
- Adjustable Microphone Scissor Arm Stand
- Shock Mount for Microphone
- Pop Filter (Nylon Filter)
- Microphone Foam Windscreen
- Table Mounting Clamp (Fixing Clip)
- XLR to 3.5mm Microphone Cable
- USB Charging Cable
- 3.5mm Audio Cables (for device connection)
- User Manual



Figure 1: All components included in the ALSO GO Podcast Equipment Bundle.

SETUP GUIDE

1. Microphone Assembly

1. Attach the table mounting clamp to the edge of your desk or table.
2. Insert the adjustable microphone scissor arm stand into the clamp and secure it.
3. Mount the shock mount onto the microphone stand.
4. Gently place the BM-800 condenser microphone into the shock mount.
5. Attach the pop filter to the microphone stand, positioning it in front of the microphone.
6. Place the foam windscreen over the microphone for additional pop and wind noise reduction.



Figure 2: BM-800 Condenser Microphone with shock mount and pop filter attached to the stand.

2. Connecting the Audio Mixer

7. Connect the XLR end of the microphone cable to the bottom of the BM-800 microphone.
8. Connect the 3.5mm end of the microphone cable to the "Condenser mic1" or "Condenser mic2" port on the V10XPRO Audio Mixer.
9. For audio monitoring, plug your headphones or earphones into the "Headset" or "Monitor" port on the mixer.
10. Connect the USB charging cable to the "Charging" port on the mixer and to a power source (e.g., computer USB port, USB wall adapter). Ensure the mixer is charged for 4-5 hours before first use.
11. To connect the mixer to a computer for recording or live streaming, use the provided USB cable from the "OTG/PC Live" port on the mixer to a USB port on your computer.
12. To connect the mixer to a mobile phone or tablet for recording or live streaming, use a 3.5mm audio cable from the "LIVE1" or "LIVE2" port on the mixer to the audio input of your mobile device. An appropriate adapter (e.g., Lightning to 3.5mm for iPhones) may be required for devices without a 3.5mm jack.

DUAL DSP CHIPS FOR NOISE REDUCTION



That suits the needs of both beginners
and seasoned broadcasters

Figure 3: Rear view of the V10XPRO Audio Mixer showing various input/output ports for microphones, headphones, and devices.

Note: When connecting to a computer, ensure the V10XPRO (USB) is selected as the input device in your system's sound settings.

Your browser does not support the video tag.

Video 1: Detailed demonstration of connecting the ALSO GO Podcast Equipment Bundle to a computer and mobile device, including microphone and headphone setup.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press and hold the power button (usually a prominent central button) on the V10XPRO Audio Mixer for 3 seconds to turn it on or off. The LED display and keyboard backlights will illuminate upon powering on.

MULTIFUNCTIONAL SOUND CARD

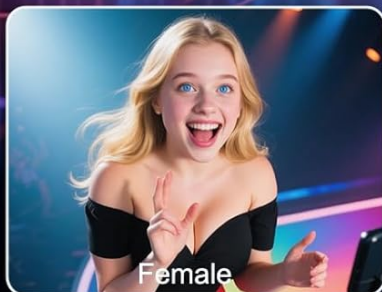


Figure 4: The V10XPRO Audio Mixer with its multifunctional controls and LED display.

2. Adjusting Audio Levels

- **MIC Volume:** Use the large knob labeled "MIC" to adjust the microphone input volume.
- **TREBLE/BASS:** Use the "TREBLE" and "BASS" knobs to fine-tune the high and low frequencies of your voice.
- **ECHO:** Use the "ECHO" knob to add or reduce reverberation to your voice.
- **Record/Accompany/Monitor:** Adjust these sliders or knobs to control the volume of your recording output, background music, and monitoring headphones respectively.

3. Special Sound Effects and Voice Changer

The V10XPRO mixer features 21 kinds of fun special sounds and various voice changing options:

- **Sound Effects:** Press the dedicated buttons (e.g., "Cheer", "Din", "Kiss", "Giggle", "Laughter", "Gunshot") to trigger various sound effects.
- **Voice Changer:** Use the "Change Voice" button to cycle through different voice effects such as female, male, child, or monster voices.

- **Noise Reduction:** Press the "Noise Reduction" button to activate the one-button noise reduction feature, which helps minimize background noise.
- **Bluetooth:** Activate the "BT" button to connect your mobile device wirelessly for background music or accompaniment.



Figure 5: The V10XPRO Audio Mixer highlighting the DSP Noise Reduction feature.

4. Recording and Live Streaming

Once all connections are made and audio levels are adjusted, you can begin recording or live streaming using your connected computer or mobile device's software/applications. The mixer acts as an audio interface, sending your microphone input and selected effects to your device.



Figure 6: The podcast equipment bundle is suitable for personal broadcast, music creation, gaming, and streaming.

MAINTENANCE

- Keep the equipment clean and dry. Avoid exposure to dust, moisture, and extreme temperatures.
- Handle cables carefully to prevent damage.
- Store the microphone and mixer in a safe place when not in use.
- Regularly check all connections to ensure they are secure.

TROUBLESHOOTING

- **Microphone does not work:** Ensure the 48V function is turned on (if applicable for your microphone type). Verify all cables are securely connected. Check the microphone volume on the mixer.
- **Sound card doesn't work:** Ensure the sound card is fully charged (red light indicates charging, green light indicates full). If using with a computer, verify the sound card is recognized in system settings.

- **Cannot hear any sound:** Check headphone connections and volume levels. Ensure the correct output device is selected on your computer/mobile device.
- **Echo is too much/too little:** Adjust the "ECHO" knob on the mixer to your desired level.
- **Humming/Noise:** Ensure all connections are secure. Activate the noise reduction feature. Avoid placing the microphone too close to speakers or other electronic devices that may cause interference.
- **Bluetooth connection issues:** Turn on Bluetooth on your mobile device and search for "V8" to connect. The indicator light should be steady blue when connected.

SPECIFICATIONS

Feature	Detail
Brand	ALSO GO
Model Name	BM 800 (Microphone), V10XPRO (Audio Mixer)
Item Model Number	MG0008-BK
Color	Black
Material	Metal
Power Source	Corded Electric (USB Charging)
Battery Type	Lithium Ion (rechargeable)
Connectivity Technology	Bluetooth, XLR, 3.5 mm Jack
Special Feature	Noise Reduction, Voice Changer
Compatible Devices	Laptop, Smartphone, Speaker, Voice Recorder
Microphone Form Factor	Large Diaphragm
Item Weight	3.68 pounds
Package Dimensions	16.93 x 9.65 x 2.56 inches

WARRANTY AND SUPPORT

Product Standard Warranty Commitment:

This document outlines the warranty policies and procedures. Please read carefully to ensure correct use and proper preservation of the manual for future use. This product is a professional singing live mixer, built-in digital DSP chip, supporting all live broadcast platforms, support mixing switch, simple input mute control, reverberation melodies, text quality shouting, wheat, special effect sound, Type-C computer connection, perfect to solve the diverse needs of mobile phone and computer live users!

The warranty period for the product is one year from the date of purchase. During this period, if the product has a non-man-made performance failure, please follow the procedures below:

1. Contact the product seller after a functional failure, and please provide complete product warranty card.
2. Complete product packaging and accessories.
3. A copy of the invoice for the sale of goods.
4. The product seller or service hotline will tell you how to ship the relevant materials and products and how to handle

your repair, and reserve the right to review the damaged products.

5. If the product can be replaced, 3-year warranty, replacement or return, the products should be returned with the attached articles and packaging.
6. Unwarranted scope:
 - The product under this document is not apply to column situations.
 - Failure or damage caused by misuse, accident, modification, inappropriate physical or operating environment, natural disasters, electric droplets and improper maintenance or custody caused by the use of unspecified software.
 - Decision on occurs in the course of the action of the product. Wear and tear and consumption.
 - Data loss or corruption.
 - If the original identification label of the product or component is changed or removed, the warranty under this document will expire. The completeness and appearance of the product are not within the scope of guarantee, and you should object to any discrepancies when you accept the product by checking the wall on the spot.
7. Global Protection Services: The warranty under this document applies only to areas in Chinese mainland jurisdiction (excluding Hong Kong, Macao and Taiwan, Bay products sold).
8. Product warranty card: Please use your future application for warranty voucher, please cooperate with the seller to fill in and take good care of the standby!

If you encounter any problems during use, such as product quality problems or refunds, you can contact us immediately and we will reply within 10 hours.