

[Manuals.plus](#) /

› [RCA](#) /

› RCA 24-inch Google TV HD Smart TV User Manual

RCA 24 Pollici Google TV

RCA 24-inch Google TV HD Smart TV User Manual

Model: 24 Pollici Google TV

INTRODUCTION

Welcome to the user manual for your new RCA 24-inch Google TV HD Smart TV. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your television. Please read this manual thoroughly before using your TV to ensure proper and safe operation.

Your RCA Google TV combines high-definition visuals with the power of Google's smart TV platform, offering access to a vast array of streaming services, apps, and smart features. It also includes a versatile triple tuner for various broadcast signals.

PACKAGE CONTENTS

Before you begin, ensure all items are present in the package:

- RCA 24-inch Google TV
- Remote Control
- 2 x AAA Batteries for Remote Control
- Table Stand (2 pieces)
- Instruction Manual
- Power Cable

VESA 100 x 100



batterie x2

supporto da tavolo per TV

telecomando

manuale d'uso

Image: The RCA 24-inch Google TV shown with its dimensions and the included accessories: two AAA batteries, two table stand pieces, a remote control, and the instruction manual.

SETUP

1. Assembling the Stand or Wall Mounting

If placing the TV on a table, attach the two stand pieces to the bottom of the TV using the provided screws. Ensure they are securely fastened. For wall mounting, use a VESA 100x100mm compatible wall mount (sold separately). Refer to the wall mount's instructions for proper installation.

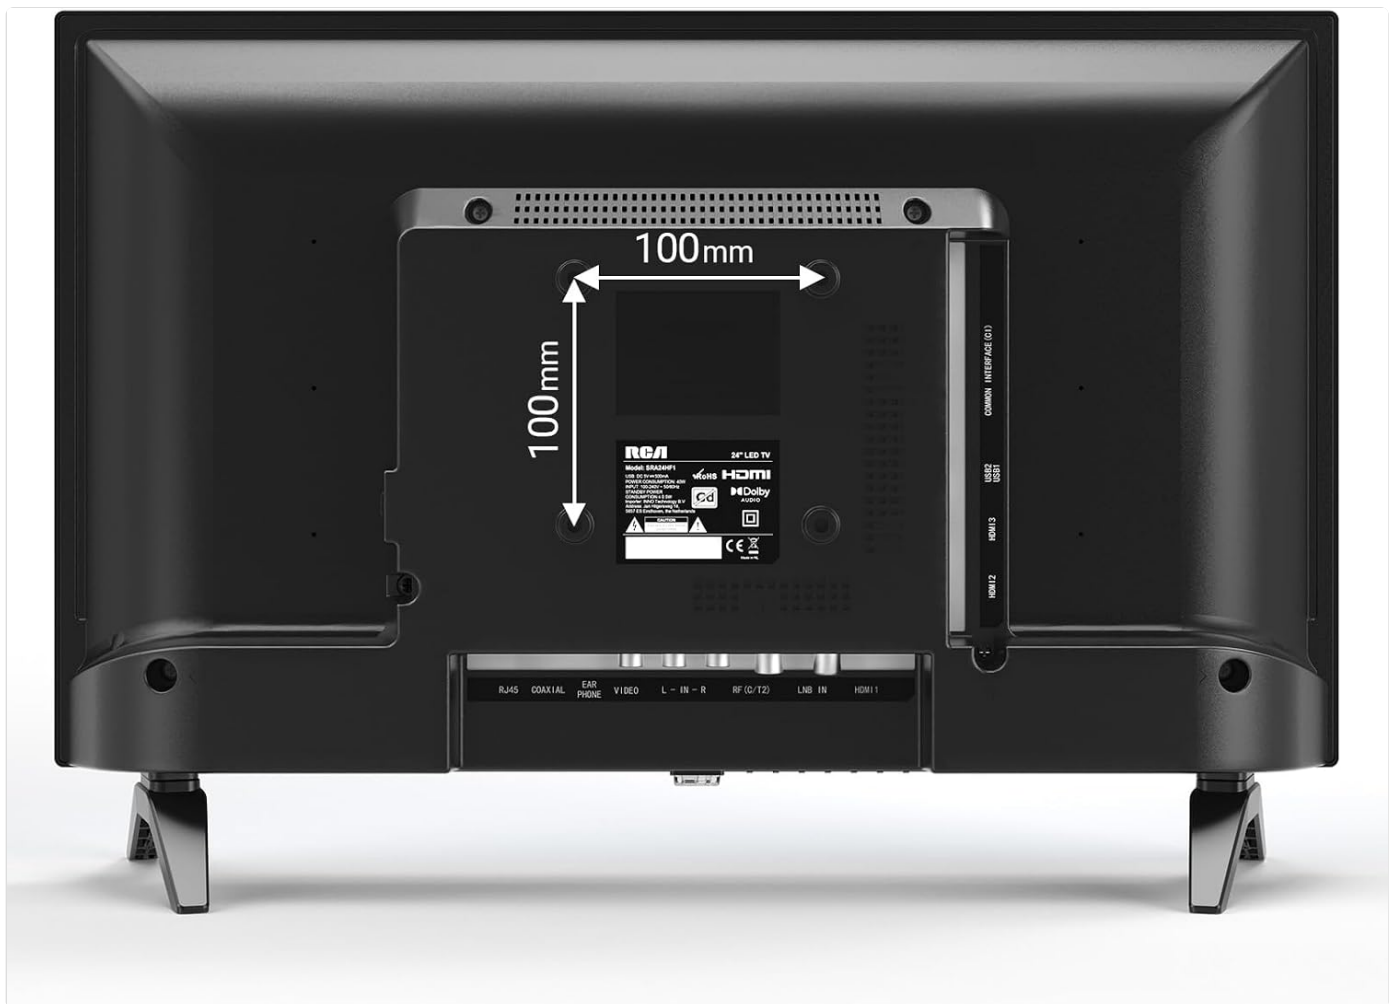 


Image: The back of the RCA 24-inch Google TV, highlighting the 100mm x 100mm VESA mounting holes for wall installation.

2. Connecting Cables

Connect the power cable to the TV and then to a wall outlet. Connect your antenna, cable, or satellite dish to the appropriate tuner input (RF) on the back of the TV. For external devices like Blu-ray players, gaming consoles, or soundbars, use the HDMI ports. The TV also features USB ports for media playback and a CI/CI+ slot for conditional access modules.



Lato



CI/CI+



USB x2



HDMI x2

Fondo



RJ45



OPTICAL



EARPHONE



VIDEO L-IN-R



R F



LNB



HDMI

Image: A detailed view of the side and rear input/output ports on the RCA 24-inch Google TV, including CI/CI+, USB x2, HDMI x2 on the side, and RJ45, OPTICAL, EARPHONE, VIDEO L-IN-R, RF, LNB, and HDMI on the bottom/rear.

Triple Tuner & CI(CI+)



Image: An illustration demonstrating the triple tuner capabilities (DVB-T/T2 Terrestrial, DVB-C Cable, DVB-S/S2 Satellite) and the CI/CI+ common interface slot for encrypted channels. It also shows connecting external devices like a Fire TV or Google TV stick to an HDMI port.

3. Initial Power-On and First-Time Setup

After connecting the power, press the power button on the remote control or the TV. The TV will guide you through the initial setup process, which includes:

- Language selection
- Connecting to your Wi-Fi network
- Signing in with your Google account (recommended for full Google TV features)
- Scanning for TV channels (DVB-T/T2, DVB-C, DVB-S/S2)
- Accepting terms and conditions



Image: The RCA 24-inch Google TV screen showing the Google TV home interface, featuring sections like "For you", "Movies", "Shows", "Apps", and a selection of streaming applications such as Netflix, Prime Video, Disney+, YouTube, and more.

OPERATING YOUR RCA GOOGLE TV

Remote Control Functions

The remote control allows you to navigate the TV's interface, change channels, adjust volume, and access smart features. Familiarize yourself with the buttons for power, volume, channel, input source, home, back, and dedicated app buttons (if present).

Navigating Google TV

The Google TV interface organizes content from your streaming services and live TV into a personalized home screen. Use the directional pad on your remote to move between sections and select content. The "For You" tab provides personalized recommendations.

Using Apps and Streaming Services

Access a wide range of applications through the Google Play Store. Popular apps like Netflix, YouTube, Amazon Prime Video, Disney+, and many others are available for download. Ensure your TV is connected to the internet for optimal streaming performance.

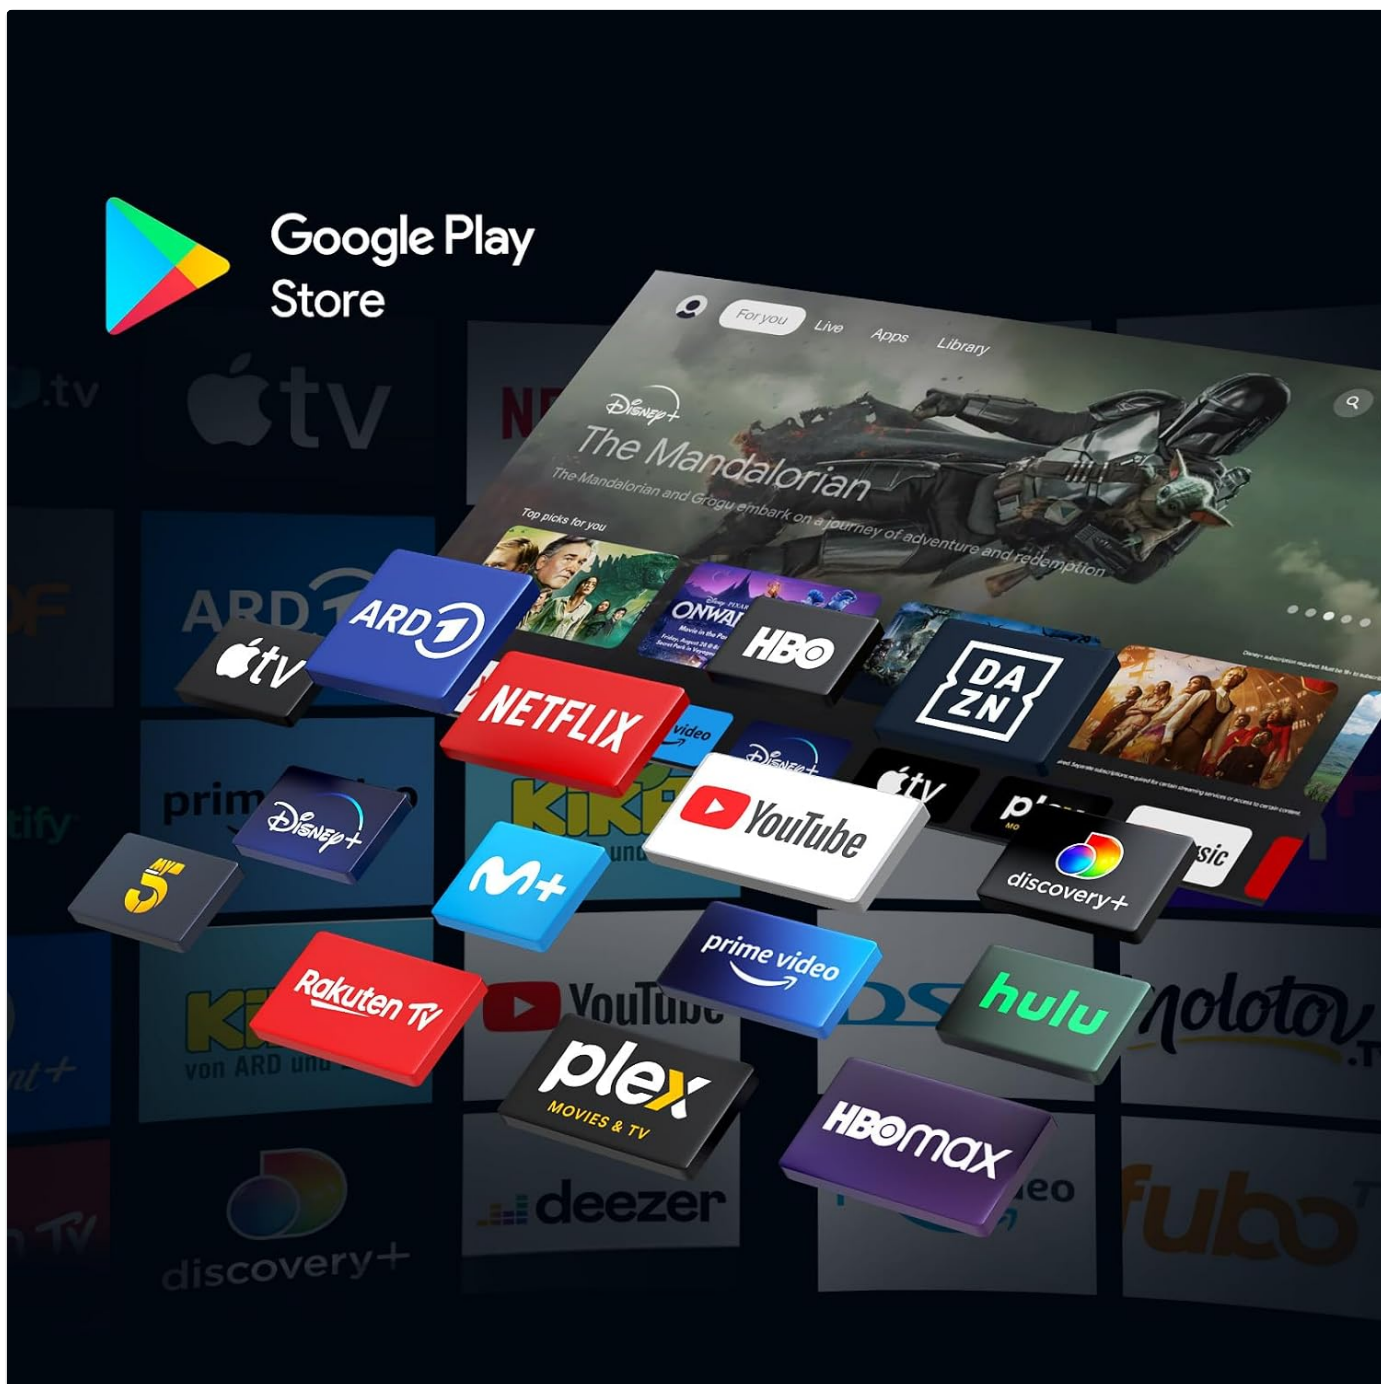


Image: The Google Play Store logo prominently displayed, surrounded by numerous app icons such as Netflix, YouTube, Prime Video, Disney+, HBO Max, and more, illustrating the wide range of applications available on Google TV.

Bluetooth Connectivity

Your TV supports Bluetooth, allowing you to connect wireless headphones, soundbars, or other compatible audio devices for an enhanced listening experience. Navigate to the Bluetooth settings in the TV menu to pair devices.

MAINTENANCE

Cleaning Your TV

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-specific cleaning solution. Avoid using harsh chemicals or abrasive materials. Clean the TV casing with a soft, dry cloth.

Software Updates

Your RCA Google TV may receive software updates to improve performance, add new features, or fix bugs. Ensure your

TV is connected to the internet to receive these updates automatically. You can also manually check for updates in the TV's settings menu.

TROUBLESHOOTING

Problem	Possible Cause / Solution
No Power	Check if the power cable is securely connected to the TV and the wall outlet. Ensure the outlet has power. Try a different outlet.
No Signal / Blank Screen	Verify the correct input source is selected (e.g., HDMI 1, TV). Check antenna/cable connections. Perform a channel scan.
No Internet Connection	Check your Wi-Fi router. Restart the TV and router. Re-enter Wi-Fi password in TV settings.
Remote Control Not Working	Replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Picture Quality Issues	Adjust picture settings (brightness, contrast, color). Ensure the input source is providing a high-quality signal.

If problems persist, try performing a factory reset through the TV's settings menu. Note that a factory reset will erase all personalized settings and installed apps.

SPECIFICATIONS

- Brand:** RCA
- Model Year:** 2025
- Screen Size:** 24 Pollici (60 cm)
- Display Technology:** LED (Direct LED Panel for finer and more uniform brightness)
- Resolution:** 720p HD
- Refresh Rate:** 60 Hz
- Operating System:** Google TV
- Connectivity:** Wi-Fi, Bluetooth
- Tuners:** DVB-T/T2 (Terrestrial), DVB-C (Cable), DVB-S/S2 (Satellite)
- Aspect Ratio:** 16:9
- Product Dimensions:** 10P x 60L x 43H cm (approx. 12 x 60 x 40 cm; 3 kg)
- VESA Compatibility:** 100 x 100 mm

Direktes LED-Panel

Die Helligkeit ist feiner
und gleichmäßiger verteilt

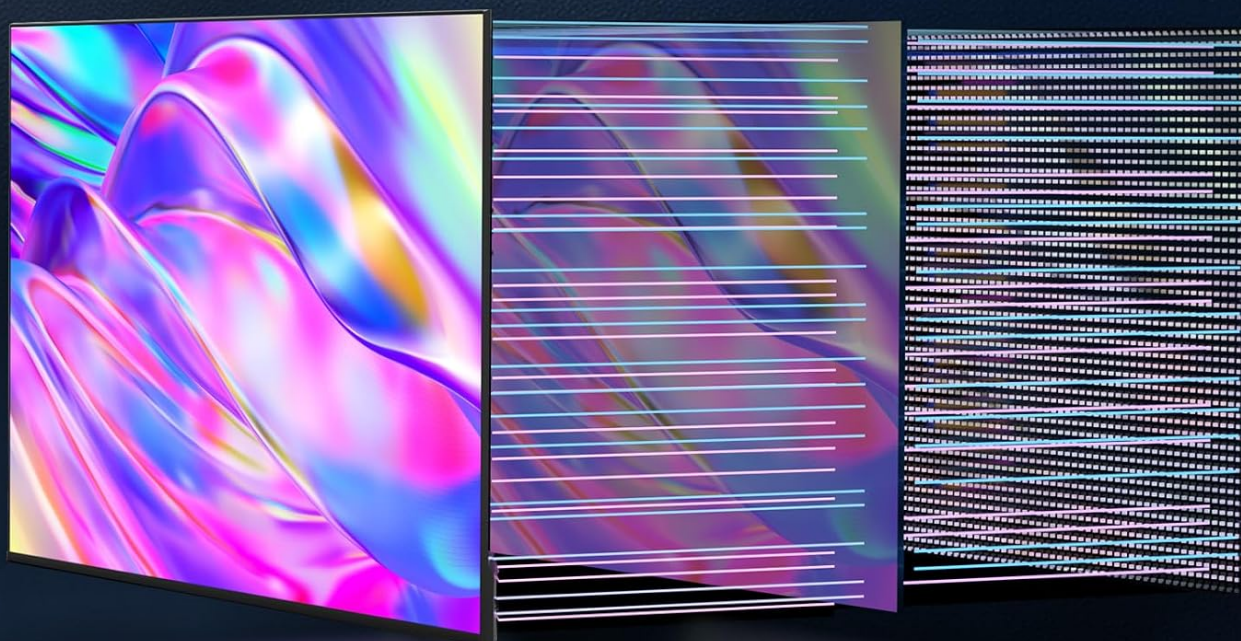 


Image: A visual representation of Direct LED Panel technology, indicating that the brightness is finer and more uniformly distributed across the screen.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official RCA support website. Keep your purchase receipt as proof of purchase for any warranty claims.

For general inquiries or technical assistance, you may also contact the retailer where you purchased the product.

© 2025 RCA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question