

Manuals.plus /

› CUSHYBITE /

› CUSHYBITE PBLSV719B RYOBI HP Advanced WHISPER Series Stick Vacuum Instruction Manual

CUSHYBITE PBLSV719B



CUSHYBITE

**CUSHYBITE PBLSV719B RYOBI HP Advanced WHISPER
Series Stick Vacuum Instruction Manual**

Model: PBLSV719B

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your CUSHYBITE PBLSV719B RYOBI HP Advanced WHISPER Series Stick Vacuum. Please read this manual thoroughly before first use and retain it for future reference.

Product Overview

The CUSHYBITE PBLSV719B is a cordless stick vacuum designed for powerful cleaning performance with ultra-quiet operation. It features HP Technology for enhanced suction, extended runtime, and durability. The Wrap Defense roller bar is engineered to minimize hair wrap, making it suitable for homes with pets. A HEPA filtration system captures 99.97% of particles down to 0.3 microns.



Image 1.1: The CUSHYBITE PBLSV719B Stick Vacuum shown with its main body, extension wand, floor head, and various attachments including a crevice tool and dusting brush.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped,

damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the appliance indoors.

3. SETUP AND ASSEMBLY

Your CUSHYBITE PBL5V719B stick vacuum requires minimal assembly. Ensure all components are present before beginning.

3.1 Unpacking

Carefully remove all components from the packaging. Verify that all parts listed in the packaging contents are present and undamaged. Dispose of packaging materials responsibly.

3.2 Assembling the Vacuum

1. **Attach the Extension Wand:** Insert the top end of the extension wand into the main vacuum body until it clicks securely into place.
2. **Attach the Floor Head:** Insert the bottom end of the extension wand into the floor head until it clicks securely into place.
3. **Install Battery (if separate):** If your battery is not pre-installed, slide the battery pack into the designated slot on the main vacuum body until it locks.

3.3 Charging the Battery

Before first use, fully charge the battery. Connect the charger to a power outlet and then to the battery pack or the vacuum's charging port. The indicator lights on the battery or vacuum will show the charging status. A full charge typically takes several hours.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the vacuum's controls and features before operation.

4.1 Powering On/Off

Press the power button located on the main vacuum body to turn the unit on. Press it again to turn it off.

Some models may have multiple power modes (e.g., Eco, Standard, Max) selectable via additional buttons.

4.2 Using Attachments

The CUSHYBITE PBL5V719B comes with various attachments for versatile cleaning:

- **Crevice Tool:** Ideal for narrow spaces, corners, and edges. Attach directly to the main vacuum body or the extension wand.
- **Dusting Brush:** Suitable for delicate surfaces, upholstery, and blinds. Attach directly to the main vacuum body or the extension wand.
- **Floor Head:** For general floor cleaning on carpets and hard floors. The Wrap Defense roller bar is designed to prevent hair tangles.



Image 4.1: The CUSHYBITE PBL5V719B Stick Vacuum demonstrating its versatility, shown in upright mode for floor cleaning, handheld mode with a crevice tool for tight spaces, and with an extension for high-reach cleaning.

4.3 HEPA Filtration System

The integrated HEPA filtration system captures fine dust and allergens. Ensure the filter is properly installed before use to maintain optimal performance and air quality.



Image 4.2: The CUSHYBITE PBLSV719B Stick Vacuum actively cleaning a white carpet, highlighting its HEPA filter capability, with a dog resting in the background, indicating its pet-friendly design.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum.

5.1 Emptying the Dust Cup

Empty the dust cup regularly, preferably after each use or when the MAX fill line is reached. To empty:

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button, usually near the main body.
3. Press the button to detach the dust cup.
4. Hold the dust cup over a trash bin and open the bottom flap to release debris.
5. Close the flap and reattach the dust cup to the vacuum until it clicks.

5.2 Cleaning the HEPA Filter

The HEPA filter should be cleaned periodically to maintain suction power. Refer to the filter's instructions for specific cleaning frequency.

1. Turn off and unplug the vacuum.
2. Remove the dust cup.

3. Carefully remove the HEPA filter from its housing.
4. Tap the filter gently over a trash bin to remove loose dust. If washable, rinse under cool water until water runs clear. Do not use detergent.
5. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a hairdryer or other heating methods.

5.3 Cleaning the Roller Bar

The Wrap Defense roller bar is designed to minimize hair wrap, but occasional cleaning may be necessary.

1. Ensure the vacuum is turned off.
2. Detach the floor head from the extension wand.
3. Locate the roller bar access cover (if applicable) or carefully inspect the roller bar for tangled hair or debris.
4. Use scissors or a brush to carefully cut and remove any wrapped hair or fibers.
5. Ensure the roller bar spins freely before reattaching the floor head.

6. TROUBLESHOOTING

If you encounter issues with your vacuum, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged Battery not properly inserted Power button malfunction	Charge the battery fully Ensure battery is securely clicked into place Contact customer support
Loss of suction	Dust cup full Filter clogged Hose/nozzle blocked Roller bar obstructed	Empty dust cup Clean or replace filter Check for and remove blockages Clean roller bar
Roller bar not spinning	Hair/debris tangled Floor head attachment not secure Motor issue	Clean roller bar Ensure floor head is securely attached Contact customer support
Unusual noise	Blockage in air path Damaged component	Check for and remove blockages Discontinue use and contact customer support

If the problem persists after attempting these solutions, please contact CUSHYBITE customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	PBLSV719B
Manufacturer	CUSHYBITE
Technology	HP Technology
Operation	Whisper Series Quiet Operation
Roller Bar	Wrap Defense (minimizes hair wrap)
Filtration	HEPA (captures 99.97% of particles down to 0.3 microns)
Power Source	Cordless, Battery-powered

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official CUSHYBITE website. Ensure you have your model number (PBLSV719B) and proof of purchase available when contacting support.

Manufacturer: CUSHYBITE

Part Number: PBLSV719B