

LX-50

Wireless Binaural Noise Cancelling Bluetooth Headset with Screen

Model: LX-50 | Brand: Generic

1. INTRODUCTION

Thank you for choosing the Wireless Binaural Noise Cancelling Bluetooth Headset with Screen. These true wireless earbuds feature advanced noise cancelling technology, a multi-function screen display on the charging case, and high-quality sound, designed for an immersive audio experience. This manual will guide you through the setup, operation, and maintenance of your new headset.



Image: The white wireless earbuds and their compact charging case, featuring a clear screen display on the front.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Wireless Binaural Noise Cancelling Bluetooth Earbuds (Left & Right)
- Charging Case with Screen Display
- Ear Cushions (various sizes)
- USB Charging Cable
- User Manual

3. SETUP GUIDE

3.1 Initial Charging

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case, ensuring they are correctly seated.
2. Connect the USB charging cable to the charging port on the case and plug the other end into a USB power adapter (not included) or a computer's USB port.
3. The screen on the charging case will display the charging status. A full charge is indicated when the battery icon shows full.

3.2 Bluetooth Pairing

Pair your headset with your device (smartphone, tablet, etc.) for the first time.

1. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing light on the earbuds or a pairing prompt on the case screen.
2. On your device, go to Bluetooth settings and ensure Bluetooth is enabled.
3. Search for available devices. Select "LX-50" (or similar product name) from the list.
4. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or a steady light). The case screen may also show a connected status.
5. For subsequent uses, the earbuds will automatically connect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

4. OPERATING INSTRUCTIONS

4.1 Touch Controls

The earbuds feature touch-sensitive areas for various functions:

Action	Function
Single Tap (L/R)	Play/Pause Music, Answer/End Call
Double Tap (Right)	Next Track
Double Tap (Left)	Previous Track
Triple Tap (L/R)	Activate Voice Assistant
Long Press (2s, L/R)	Toggle Noise Cancelling / Transparency Mode

Action	Function
Long Press (3s, L/R) during call	Reject Call

4.2 Charging Case Screen Functions

The multi-function screen on the charging case provides useful information and controls:

- **Battery Level:** Displays the remaining battery percentage of the case and individual earbuds.
- **Charging Status:** Shows charging animation when connected to power.
- **Bluetooth Connection:** Indicates if the earbuds are connected to a device.
- **Noise Cancelling Mode:** Allows switching between Active Noise Cancellation (ANC), Transparency Mode, and Normal Mode directly from the screen.
- **Playback Controls:** May offer basic music playback controls (play/pause, skip) depending on the model's specific interface.
- **Call Management:** Displays incoming call information and allows answering/rejecting calls.



Image: A detailed view of the charging case screen, illustrating its interactive display for managing settings and calls.

5. MAINTENANCE

Proper care ensures the longevity of your headset:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use harsh chemicals or abrasive materials. Gently clean the ear tips and mesh with a cotton swab.
- **Storage:** Always store the earbuds in their charging case when not in use to protect them and keep them charged.

- **Avoid Water:** The headset is not water resistant. Avoid exposure to liquids, moisture, and extreme temperatures.
- **Charging:** Use only the provided USB cable for charging. Avoid overcharging by disconnecting once fully charged.

6. TROUBLESHOOTING

If you encounter issues, try these common solutions:

Problem	Solution
Earbuds won't turn on	Ensure earbuds and charging case are fully charged. Place earbuds in case and close lid, then open again.
Cannot pair with device	Ensure Bluetooth is enabled on your device. Make sure earbuds are in pairing mode. Forget "LX-50" from your device's Bluetooth list and try pairing again. Move closer to your device.
No sound from one earbud	Check battery level of both earbuds. Place both earbuds back into the case, close the lid for 5 seconds, then take them out again. Re-pair if necessary.
Poor sound quality	Ensure earbuds are clean and ear tips fit properly. Move closer to your device to avoid interference. Try playing different audio sources.
Charging case screen unresponsive	Ensure the case has sufficient battery. Try connecting the charging cable to reset.

7. SPECIFICATIONS

Feature	Detail
Model Name	LX-50
Connectivity	Bluetooth (True Wireless)
Ear Placement	In Ear
Form Factor	In Ear
Noise Cancellation	Active Noise Cancelling (ANC)
Control Type	Touch Control, App Control (if applicable), Screen Control
Material	Aluminum (components)
Color	White
Item Weight	Approx. 7.1 ounces (200 Grams)
Water Resistance Level	Not Water Resistant
Included Components	Ear Cushions
Power Source	Rechargeable Internal Battery

8. WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty against defects in materials and workmanship. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for warranty claims. This warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or contact customer support.

9. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty inquiries, please contact our customer support team. You can typically find contact information on the product packaging, our official website, or through your retailer.

Online Support: Visit the Generic brand's official website for FAQs, troubleshooting guides, and contact forms.

Email Support: [Insert Generic Support Email Address Here, if available]

Phone Support: [Insert Generic Support Phone Number Here, if available]